



# Nook HD+ Battery Replacement

This guide tells you how to replace the battery on the Nook HD+.

Written By: Elijah Gonsalves



## INTRODUCTION

This guide tells you how to replace the battery on the Nook HD+ from Barnes & Noble.



### TOOLS:


- [iFixit Opening Tools](#) (1)
- [T4 Torx Screwdriver](#) (1)
- [Polyurethane Glue](#) (1)
- [Tweezers](#) (1)



### PARTS:

- [Barnes & Noble Nook HD+ Replacement Battery](#) (1)

## Step 1 — Remove the front frame

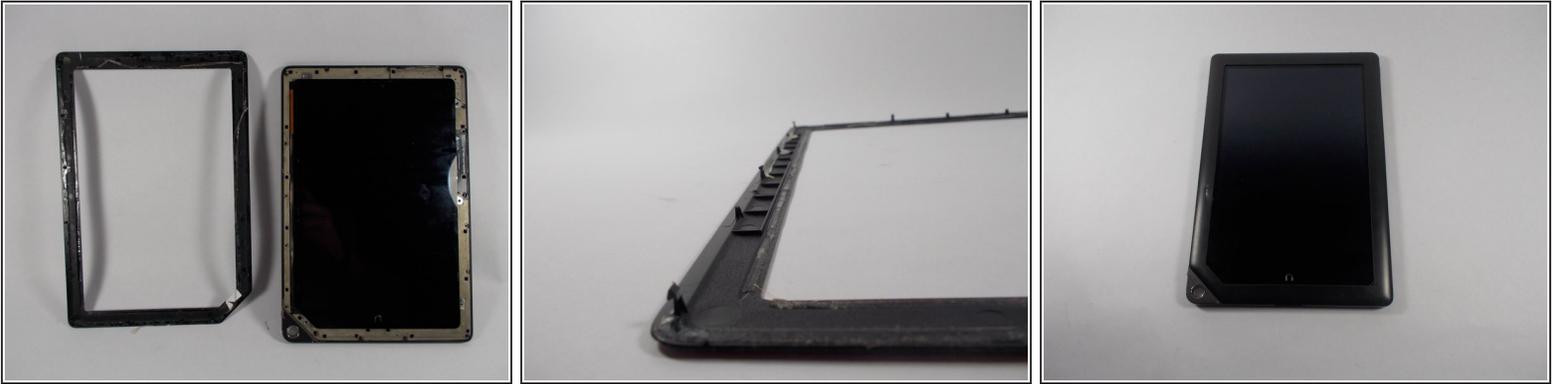

- Wedge the plastic opening piece underneath the bottom left hand corner of the front frame. Pry the frame off of the Nook.

## Step 2 — Remove the screws




- Remove every visible screw tying the chassis to the bottom frame using the T-4 attachment for the screwdriver in the iFixit screwdriver kit.

### Step 3 — Remove the chassis



- Carefully remove center chassis from bottom frame.

### Step 4 — Detach battery

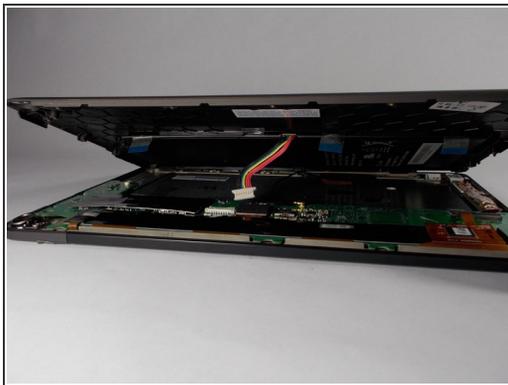

- Detach the battery ribbon from the motherboard.

## Step 5 — Remove the battery



- Pry battery off of bottom frame using plastic opening tool.

## Step 6 — Place new battery



- Apply glue to the bottom side of new battery. Re-insert new battery onto bottom frame and allow to dry.

---

Follow steps in reverse to put nook  
back together.

---

To reassemble your device, follow these instructions in reverse order.