



Sony Cyber-Shot DSC-W120 Front Case Replacement

This guide will explain how to remove the camera's case.

Written By: Dana Sanchez



INTRODUCTION

Your camera's case may be damaged or you may wish to access parts below it. This guide will explain how to safely remove the case so that it, or a new one, can be placed again.

TOOLS:


- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Front Case



- Unscrew the screws on the right side of the camera.

Step 2

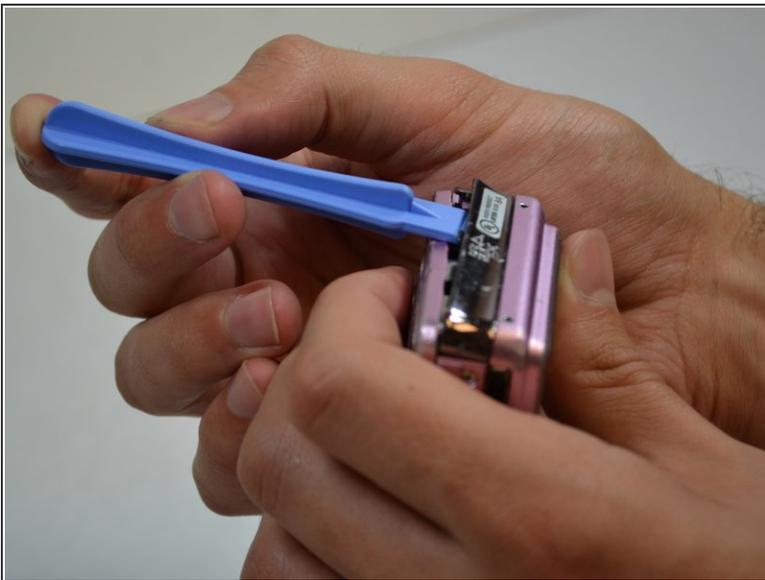

- Using a plastic opening tool, lift and remove the silver piece on the right side of the camera.

Step 3



- Use a plastic opening tool to push the tabs on each side of the front case forward.
- Remove the front case.

To reassemble your device, follow these instructions in reverse order.