



Disassembling Dell OptiPlex FX170 Case

Prerequisite Only

Written By: Frank Pecka



INTRODUCTION

Prerequisite Only

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Case



- With the base stand facing upwards, unscrew the 6mm Phillips #2 screw.
- Pull the base stand straight up from the device.

Step 2



- Unscrew and remove the eight 4mm Phillips #0 screws (four on top, four on bottom) from the top and bottom of the device.

Step 3



- Run the flat side of the spudger along the entire line of the case starting from the back where the power plug and a small screw are located.

 Use care to not apply excessive force that could damage retaining clips while running the spudger along the case.

Step 4



- Once the clips have been released, gently disengage the cover from the rest of case by pulling in opposite directions.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2020-11-28 04:11:10 AM (MST).

