

Skullcandy Air Raid Speakers Replacement

We know you miss listening to beautiful sounds from your Air Raid. Let's replace those broken speakers, shall we?

Written By: Kristin



INTRODUCTION

This is a guide to replace your Skullcandy Air Raid's Speakers.



TOOLS:

- Phillips #000 Screwdriver (1)
- iFixit Opening Tools (1)
- Soldering Iron (1)
- T6 Torx Screwdriver (1)
- Phillips #00 Screwdriver (1)

Step 1 — Rubber Cover



 Starting with the corners, gently pull the rubber cover off of the device.

Step 2 — Handle



- Using the T-6 hexagonal screwdriver, unscrew the four 10mm #6 hex screws on the right side of the device.
- Remove the handle from the device.

Step 3 — Front Plate



- Unscrew the two screws on the left side of the device using the phillips #00 screwdriver.
 - One 5mm Phillips screw.
 - One 8mm Phillips screw.

Step 4



- Gently pull the sides of the front plate outwards from the device.
- Pull up on the front plate to remove it from the device.

Step 5 — Speakers



 Using a #000 Phillips Screwdriver, unscrew the four 0.8 cm Philips screws from each corner of the speaker you are replacing (eight 0.8 Philips screws total).

Step 6



- Using the plastic opening tool, pry around edges of speaker to loosen glue contact with front plate.
- if you are unable to loosen glue contact using the plastic opening tool, use a heat gun to assist in removal.

Step 7




- Lift the speaker out of the device.
- ⚠ Be aware of the connection with the ribbon cable.
- For reassembly, ensure proper orientation of the cable plug.

Step 8



 Firmly pull on the end of the ribbon cable to disconnect the speaker from the motherboard.

Step 9 — **Desolder Wires**

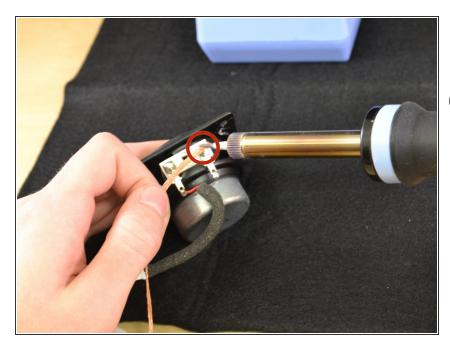

- Desolder the black and red wires from the speaker.
- The red wire is for the left speaker and the black is for the right speaker.

To reassemble your device, follow these instructions in reverse order.