


Kurio Touch 4S Power Button Replacement

Written By: Moin Khan



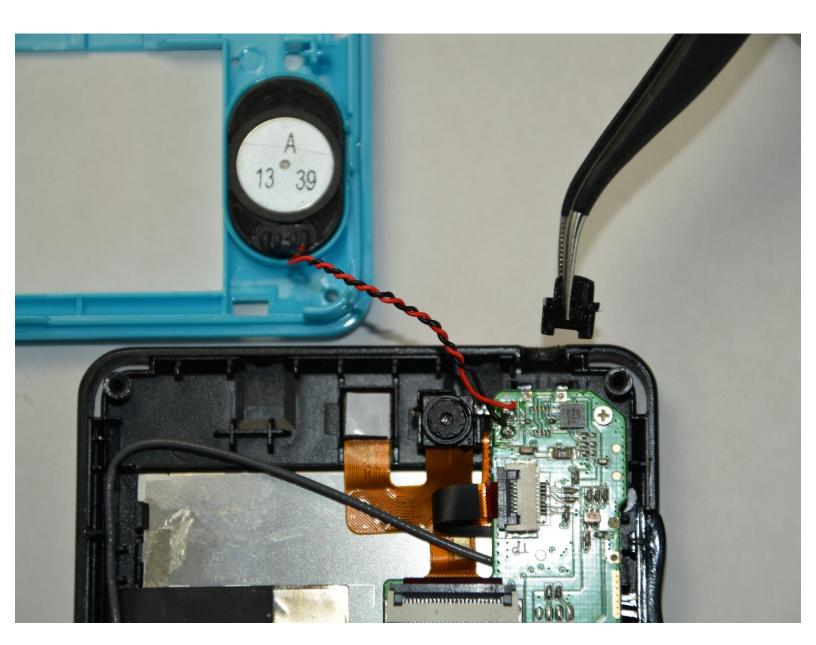

- iFixit Opening Tools (1)
- Phillips #1 Screwdriver (1)
- Tweezers (1)

Step 1 — Power Button



 Make sure to open the back cover easily using the plastic opening tool.

Step 2







- Remove back cover by prying away from the device.
- The easiest place to remove the cover is from the bottom and top; try to open it from the right and left sides.
- ♠ Open it gently. Do not open it with too much pressure, so that the plastic back cover do not break.





- To remove the battery, make sure the four 5mm Phillips screws on each side of your device is open using the Phillips #1 Screwdriver
- After you remove your four 5mm Phillips screws, use your plastic opening tool to help you open the plastic cover of your device.

Step 4



After you remove your four 5mm Philips screws use your plastic opening tool to help you open the plastic cover of your device.

This document was generated on 2020-11-19 02:05:01 PM (MST).




 Separate the two halves of your Kurio Touch 4S and lay them besides each other.

Step 6



 Gently remove the plastic cover that is covering the camera.

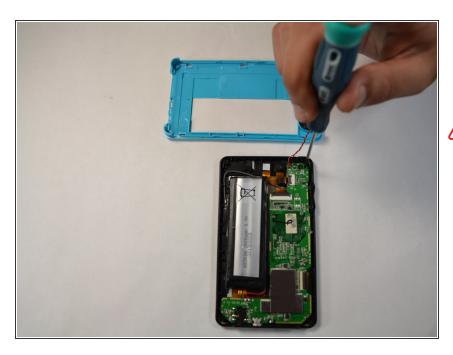


- Use Phillips # 1 screw to open the four 5mm Philips screws on the motherboard.
- Open the screws gently and do not apply too much force as you could damage the motherboard.

Step 8




 Use the plastic opener to remove the battery.

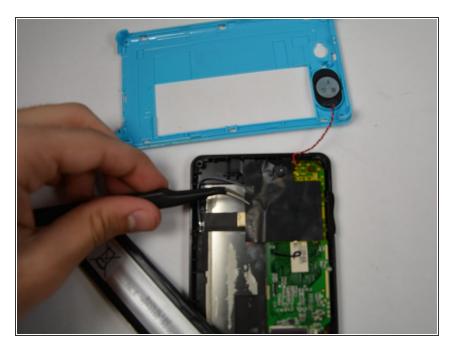

 Use tweezers to remove the black tape that is attached to the motherboard.

Step 10

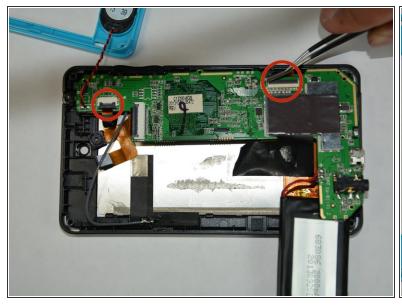




- Detach all the wire that are connected to the motherboard.
- Detach the camera module and other components that are attached to the motherboard.



- Remove the motherboard with the help of plastic opener.
- i Detach the power plug before you remove the motherboard.

Step 12

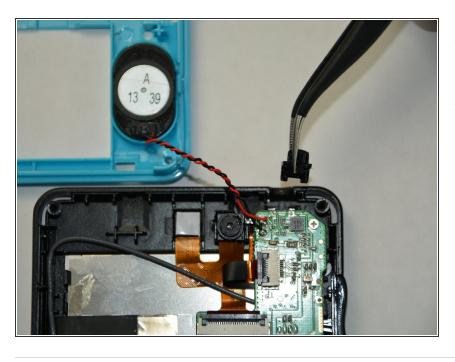

- Use tweezers to hold the power button and gently lift it up.
- Replace the old power button with the new one.

To reassemble your device, follow these instructions in reverse order.