


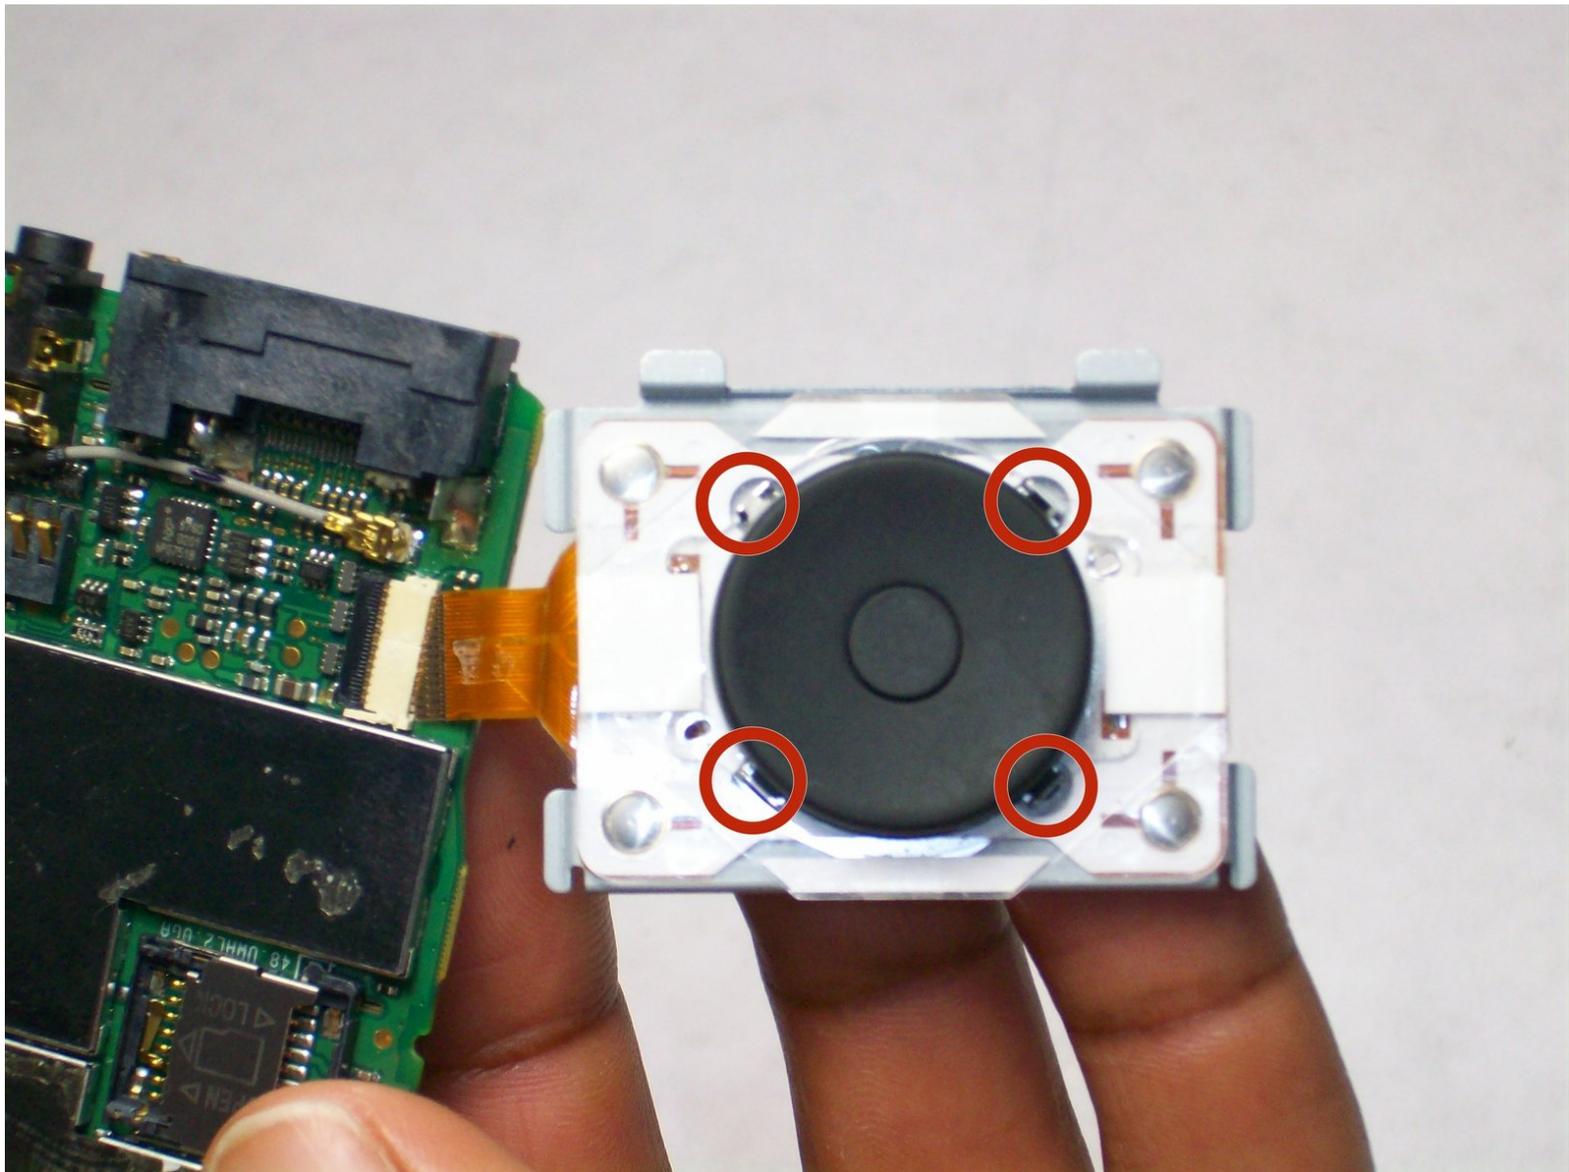

Sirius Stiletto 2 Scroll Wheel Replacement

This guide will show you how to replace the scroll wheel.

Written By: Benjamin Her



INTRODUCTION

The scroll wheels allows user interact with the device. A scroll wheel that does not work will not allow users to play music or access other features on the device.

TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Battery



- From the back of the device, slide the back panel downwards to unlock the panel.
- Lift the panel up, exposing the battery.

Step 2



- Pinch the battery from both sides and lift the battery to remove it.

Step 3 — Front Cover





- Unscrew the four 6.68mm (1.43mm diameter) Philips #00 screws.
- ⓘ If needed, remove the sticker to see the screws

Step 4




- Start by using a plastic opening tool to loosen the front cover from the sides.
- Work your way to the bottom of the cover then the top.
- Carefully pry the front cover off.

Step 5 — Scroll Wheel

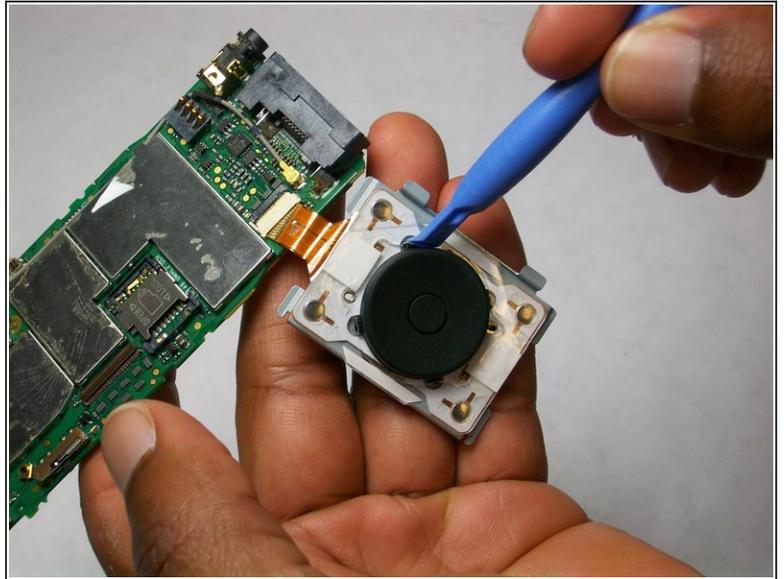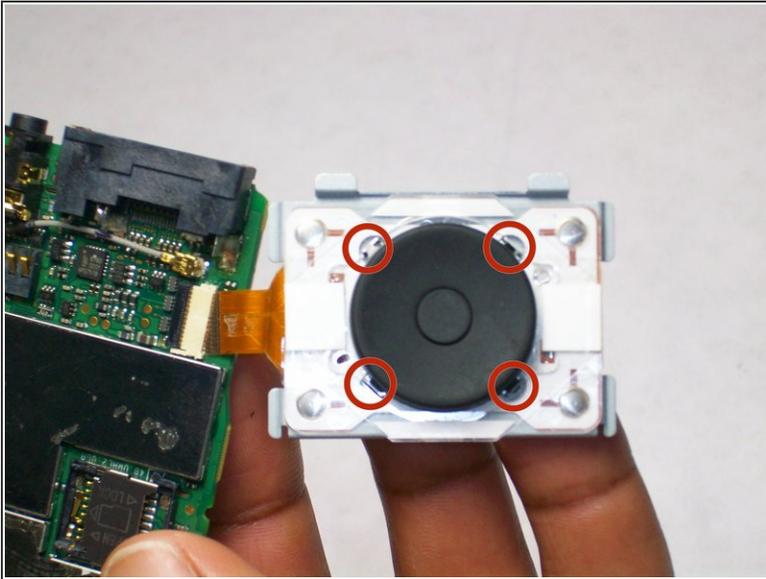

- Isolate the scroll wheel assembly
- Gently pry the four metal tabs outwards, away from the scroll pad.

Step 6

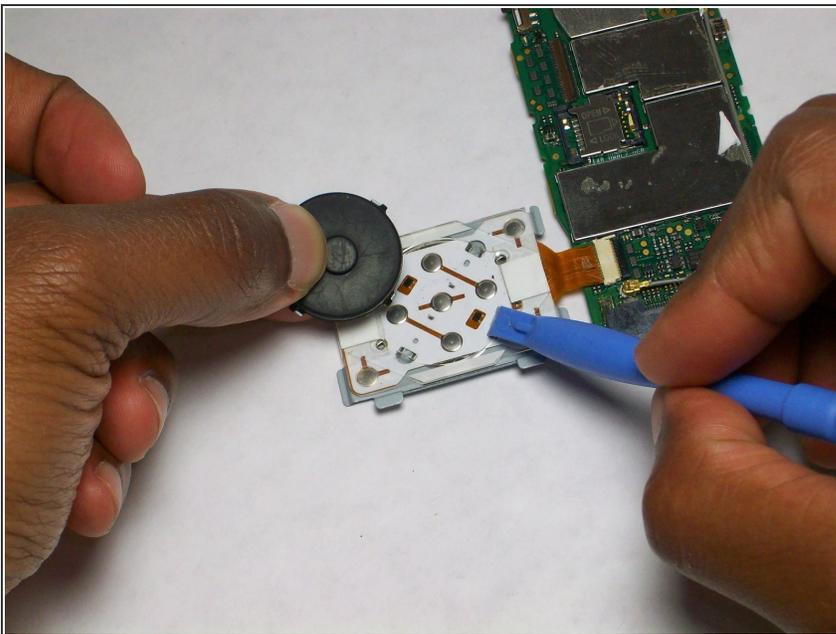

- Once the scroll pad has been released, be careful not to drop the center button. This may damage the spring.

To reassemble your device, follow these instructions in reverse order.