



# Nikon Coolpix L610 Plastic Cover Replacement

This guides shows how to remove the outer plastic cover on this device.

Written By: Jeremy





## TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

## Step 1 — Plastic Cover



- Remove the four (3.20 mm) Phillips #00 screws at the bottom of the device.

## Step 2



- Remove the top (4.10 mm) Phillips #00 screw adjacent to the battery compartment.
- Remove the bottom (3.20 mm) Phillips #00 screw adjacent to the battery compartment.

### Step 3



- Remove the top (4.20 mm) Phillips #00 screw adjacent to the mic side of the camera and opposite the battery side.
- Remove the lower (3.20 mm) Phillips #00 screw adjacent to the mic side of the camera and opposite of the battery side.

### Step 4



- Separate the case using the plastic prying tool. This can be done by placing the tool in the position that is shown and in the position on the left side of the camera.

To reassemble your device, follow these instructions in reverse order.