



# Nikon COOLPIX S9500 Battery Replacement

Replacing the battery in the Nikon COOLPIX S9500.

Written By: Jim Bui



# INTRODUCTION

If the battery is defective or needs charging, you need to take it out first.

## Step 1 — Battery



- Locate the battery hatch on the bottom of the camera and slide the latch to the left.

## Step 2



- Swing open the battery door to expose the battery compartment.

### Step 3



- Press the yellow tab up to free the battery.

To reassemble your device, follow these instructions in reverse order.