



Disassembling Circo Monkey Alarm Clock

Clock Face

removal of the clock face

Written By: Devin Gooding



INTRODUCTION

This is a disassembly guide for the face of the clock, useful in the case that the face requires: maintenance, replacement, or access to the interior parts.

TOOLS:

- [iFixit Opening Tools](#) (1)
 - [plastic suction cup](#) (1)
-

Step 1 — Disassembling Circo Monkey Alarm Clock Clock Face



- Grasp the plastic cover and carefully pull straight back so that the clock cover dislodges from its housing.
- ⓘ If any additional assistance is required for this step, it is recommended to use the plastic opening tool to help pry the edges of the cover simultaneously or a suction cup if you cannot grip the rim.

Step 2



- Using your fingers, grasp the point where the hands of the clock meet in the center and pull straight back until they dislodge from the motor.
- ⓘ Be sure that you remove all three hands as well as the pin that connects them in this one step. This component should come out as a single piece.

To reassemble your device, follow these instructions in reverse order.