


# **Dell XPS M1530 RAM Replacement**

Follow this guide to replace your computer's RAM chip.

Written By: Jase Sasaki

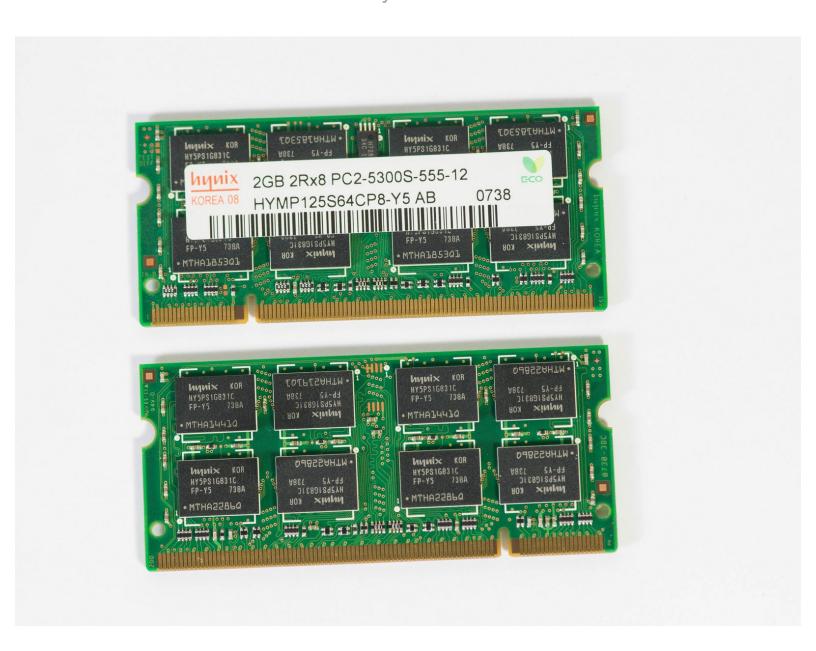

### **INTRODUCTION**

If you would like to upgrade your RAM or if your RAM has malfunctioned, you should pull the chip out and replace it with the desired chip.



# **TOOLS:**

Phillips #1 Screwdriver (1)

### Step 1 — Battery



- Turn the computer upside down with the battery facing you.
- Turn the computer off and disconnect the charging cable from the computer.

## Step 2



 Push the switch as far to the right as possible to unlock the battery.

# Step 3



Remove the battery using two hands and pull it away from the computer.

## Step 4 — RAM




 Unscrew the four Phillips #1 screws holding down the back panel. Then remove one 5.8mm Phillips #1

screw labeled "M" in the middle of the back panel.

- Four 3.9mm Phillips #1 screws
- One 5.8mm Phillips #1 screw


## Step 5

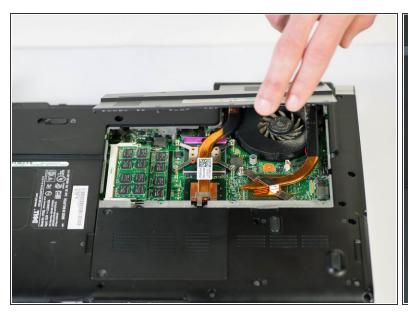



- Using the highlighted indent, pull up and out to remove the back panel.
- (i) The indent should provide enough grip to remove the panel with ease.

### Step 6

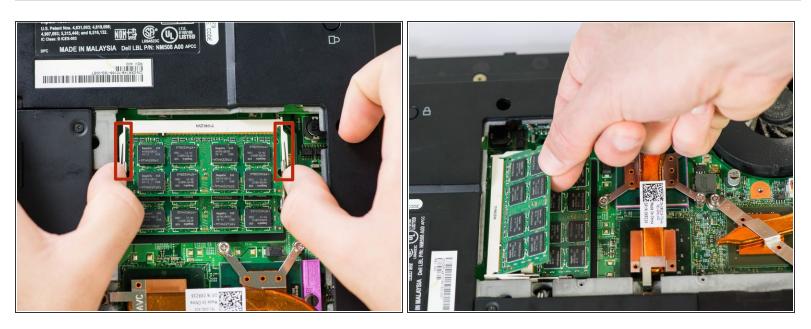

Push out on the first set of metal tabs to release and remove the top RAM chip.

## Step 7



Push out on the second set of metal tabs to release and remove the lower RAM chip.

To reassemble your device, follow these instructions in reverse order.