



# Astro A40 Gen2 Speaker Replacement

This is a guide to show how to reach the speakers on either side of the headset. This will allow access to all wires connected to the speaker as well.

Written By: Donavan Feliz



## INTRODUCTION

In this step we will be removing all parts necessary to reach the speaker inside each headset. Remember that you can repeat these same steps for each side of the headset if either side needs replacement.

---

### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
  - [Metal Spudger Set](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Ear Pad



- Pull one corner of the pad to release it from the headset.
- Pull the rest of the ear pad off.

## Step 2 — Speaker



- Locate the four 4.5 mm Philips #0 screws on the panel shown.
- Remove them using a Phillips #0 head screwdriver.
- Remove the panel.

## Step 3



- Using either your fingers or a plastic opening tool, pry off the speaker cover.



## Step 4



- Locate the four 4.5 mm Philips #0 screws as shown on the speaker housing.
- Remove the four screws using a Phillips #0 head screwdriver.

## Step 5



- Remove the housing to reveal the speaker.
- ⚠ Make sure not to break the small wire holding the two portions together.

To reassemble your device, follow these instructions in reverse order.