




# Sony Cyber-shot DSC-W55 Lens Replacement

This is a repair guide showing you how to remove the lens part of the camera in order to fix or replace this piece.

Written By: kkfong91

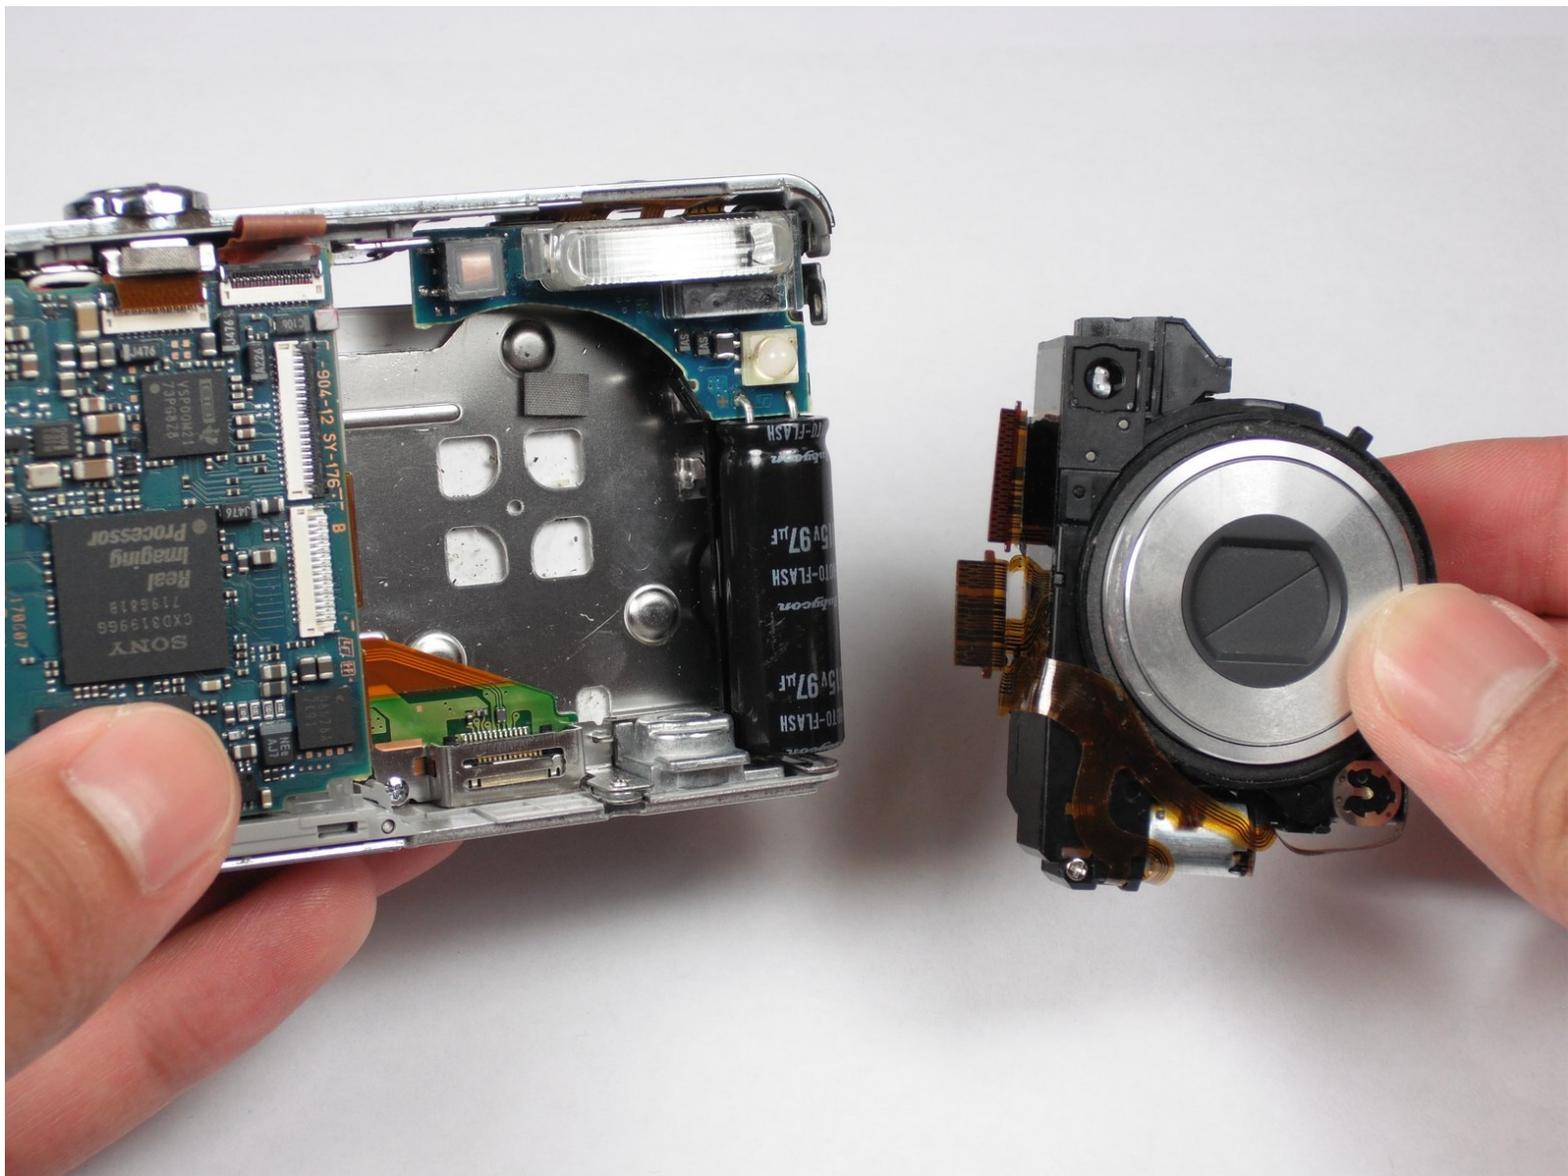

---

## INTRODUCTION


This guide shows step by step instructions to remove the lens part of the camera.

---

### TOOLS:


- [Phillips #00 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
  - [Tweezers](#) (1)
-

## Step 1 — Battery

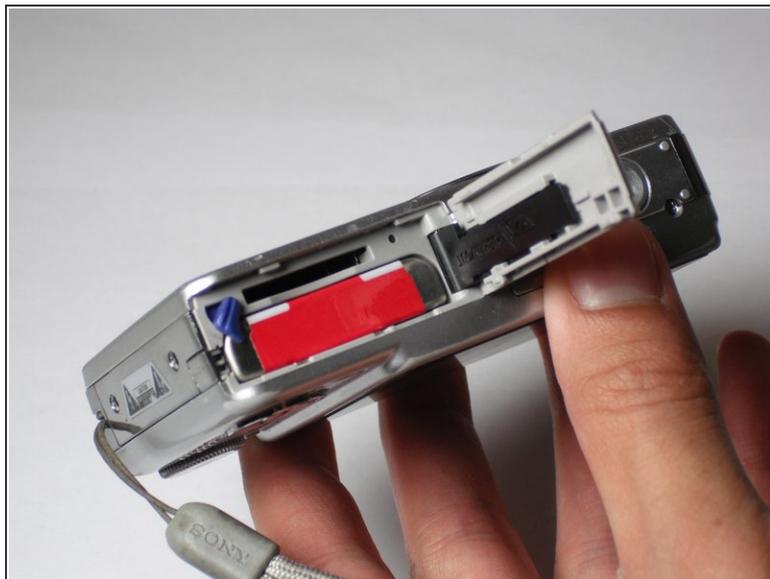



- Slide the battery cover in the direction the arrow points.
- Pull the battery cover towards you.

## Step 2

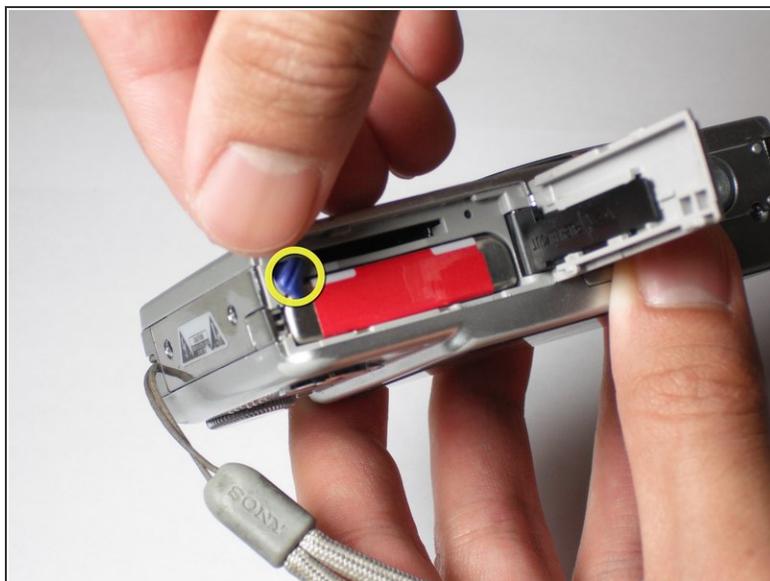

- Flick the blue switch for the battery to pop out.
- Remove the battery from the camera.

### Step 3 — Back Case

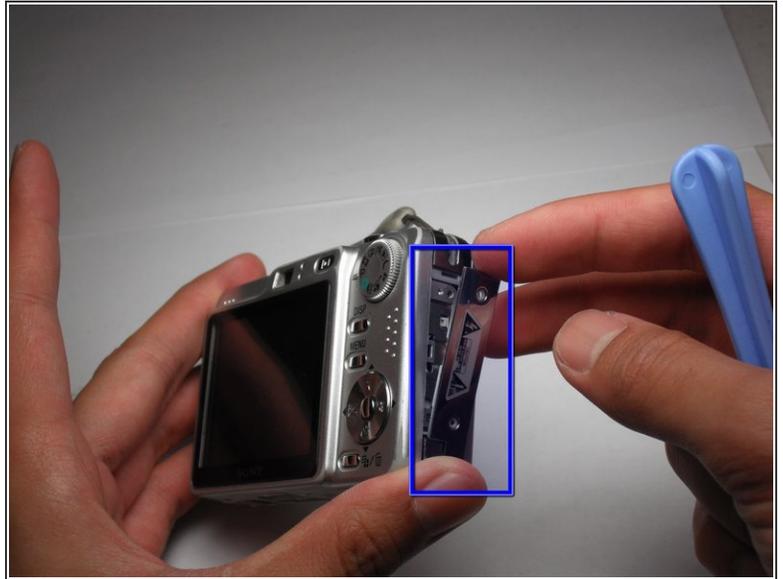
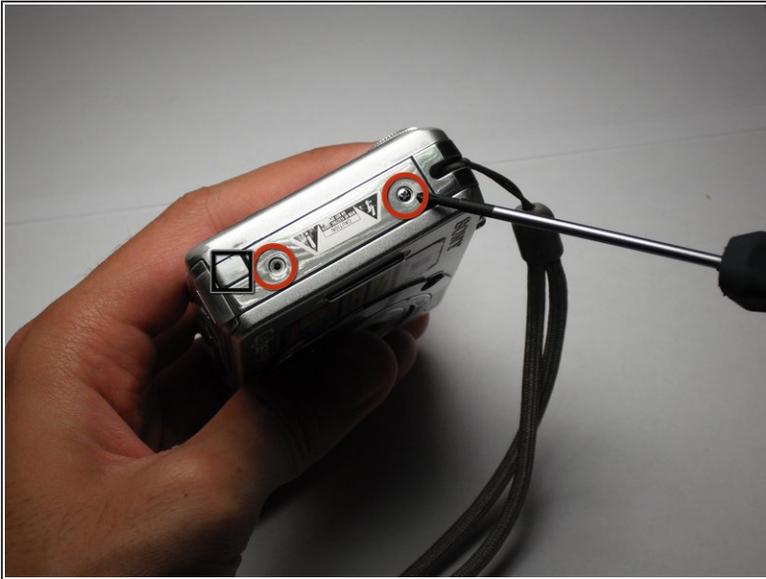


- Using the Phillips #00 Screwdriver, remove the two screws from the caution panel.

- Remove that panel.

⚠ Careful for falling pieces.

## Step 4

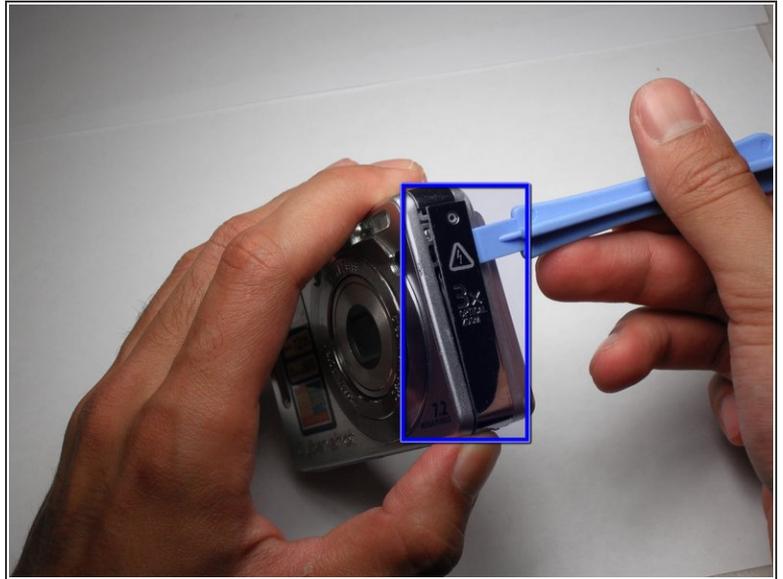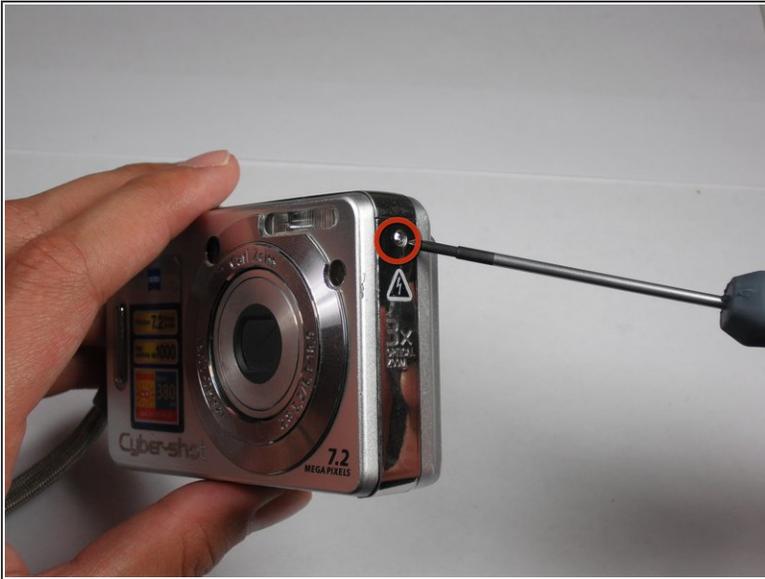

- Remove the screw with a Phillips #00 screwdriver from the right side of the camera (with '3x optical zoom' engraved on the side panel).
- Remove that panel.

## Step 5



- Remove the screw using the Phillips #00 screwdriver from the bottom of the camera, closest to the back cover.

## Step 6



- Gently remove the back cover.


⚠ It may be a bit stiff, so use some force to remove it. Proceed with caution.

## Step 7 — Front Case




- Remove the screw using a Phillips #00 screwdriver on the left side (where the "3x optical zoom" panel use to be).

## Step 8

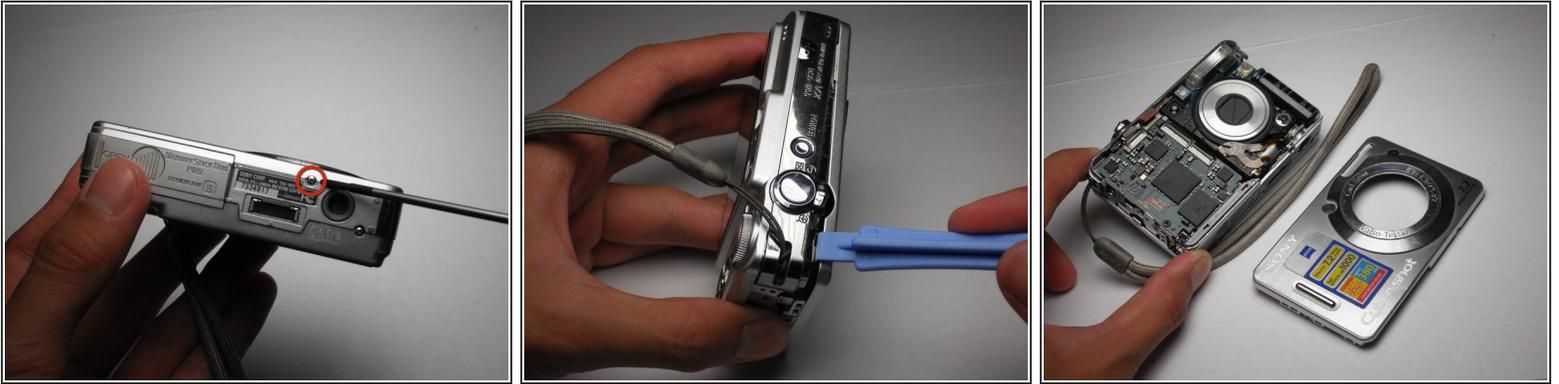


- Remove the small screw using a Phillips #00 screwdriver on the bottom of the camera attached to the front cover.
- Gently remove the front cover.
- ⚠ Put a little force to pop off the case. Proceed with caution.

## Step 9 — Lens

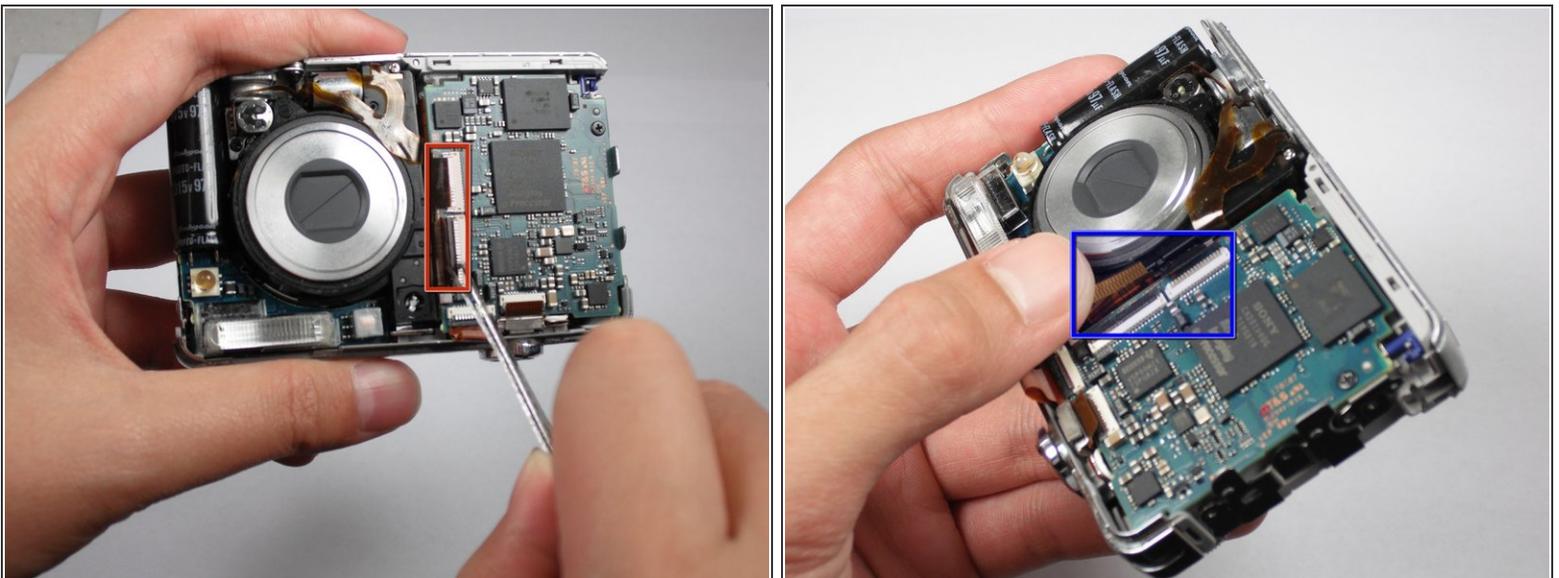

- Flip the black secure locks off. Tweezers may be necessary.
- Detach the two orange cables.

## Step 10

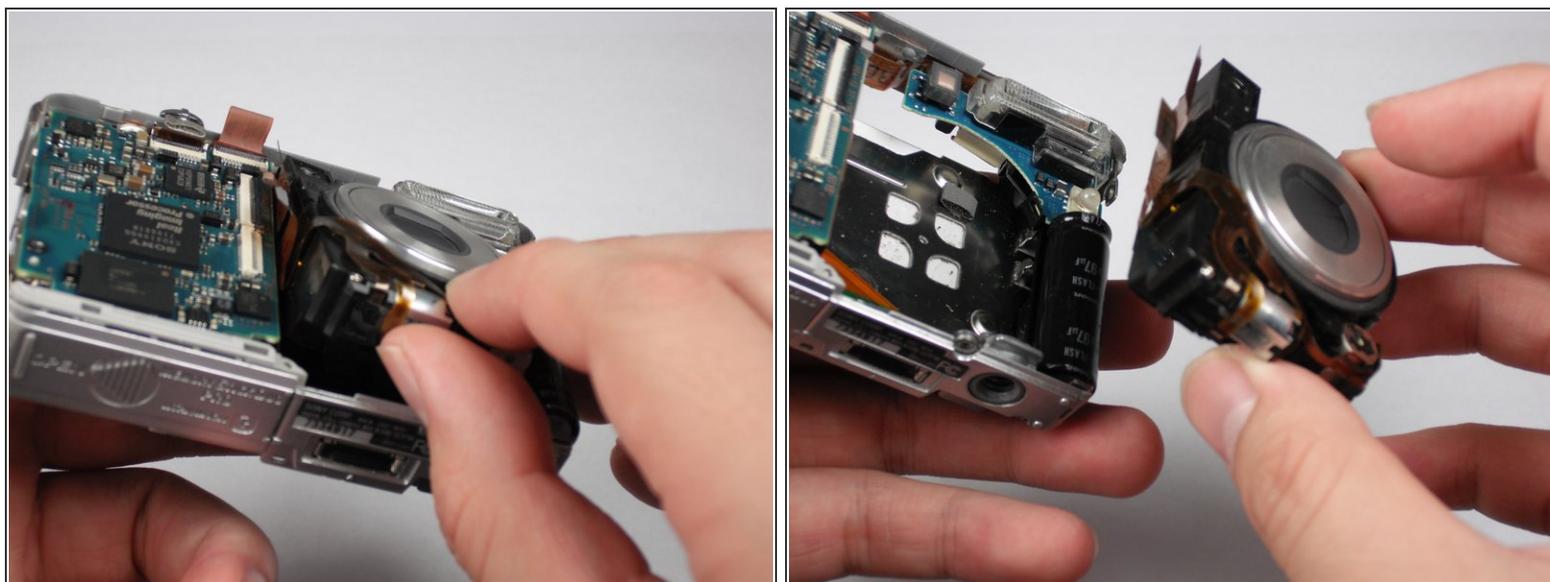

- Gently pull the lens container out of the camera.

To reassemble your device, follow these instructions in reverse order.