



Nikon Coolpix L18 Back Cover Replacement

Replace the Back Cover in your Nikon Coolpix L18.

Written By: Nonny



INTRODUCTION

In order to reach the internal elements of the camera (LCD screen, motherboard, lens, etc.), the following steps will tell you how to remove the back cover.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Back Cover



- Remove the memory stick from the camera.
- Remove the batteries from the camera.

Step 2



- Remove all six 4.3mm silver screws along the perimeter of the camera using the Phillips #00 screwdriver.
- There is one screw hidden under the AV cover that also needs to be removed.

Step 3



- Pry the back cover from the left side of the camera. Remove the cover gently.

To reassemble your device, follow these instructions in reverse order.