 


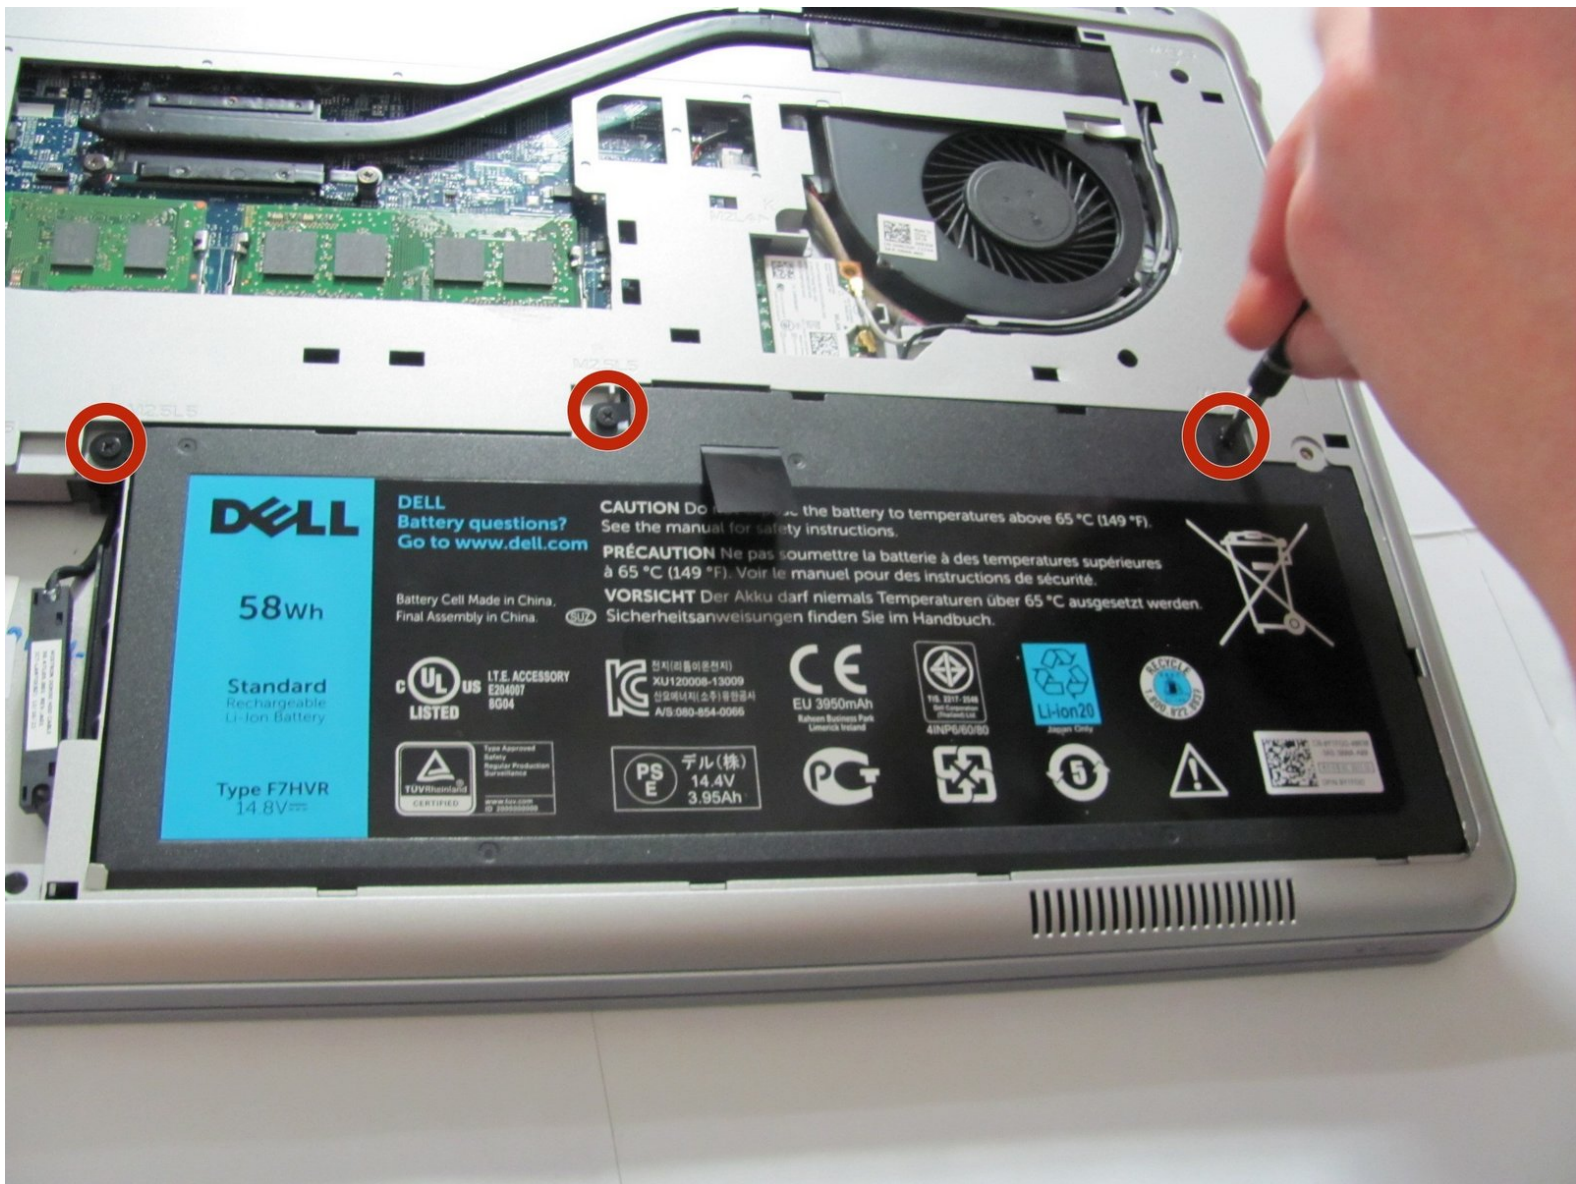

Dell Inspiron 15-7537 Battery Replacement

The battery is needed to power the laptop. A...

Written By: Abby Schmiedt



INTRODUCTION

The battery is needed to power the laptop. A bad battery must be replaced, which can be done with this guide.



TOOLS:

- [Spudger](#) (1)
- [Phillips #0 Screwdriver](#) (1)



PARTS:

- [Dell 451-BBEO Laptop Battery](#) (1)

Step 1 — Bottom Case



- Make sure the display is closed. Then, flip the computer over so that you can see the bottom cover.
- Loosen the two 5 mm Phillips #0 on the upper edge of the cover.
- ⓘ These screws will stay captive to the case.

Step 2



 
- Remove the two 5 mm interior screws that connect the cover to the assembly using the same Philips head screwdriver from the previous step.

Step 3



- Use a spudger to remove the base cover from the rest of bottom cover.

Step 4 — Battery

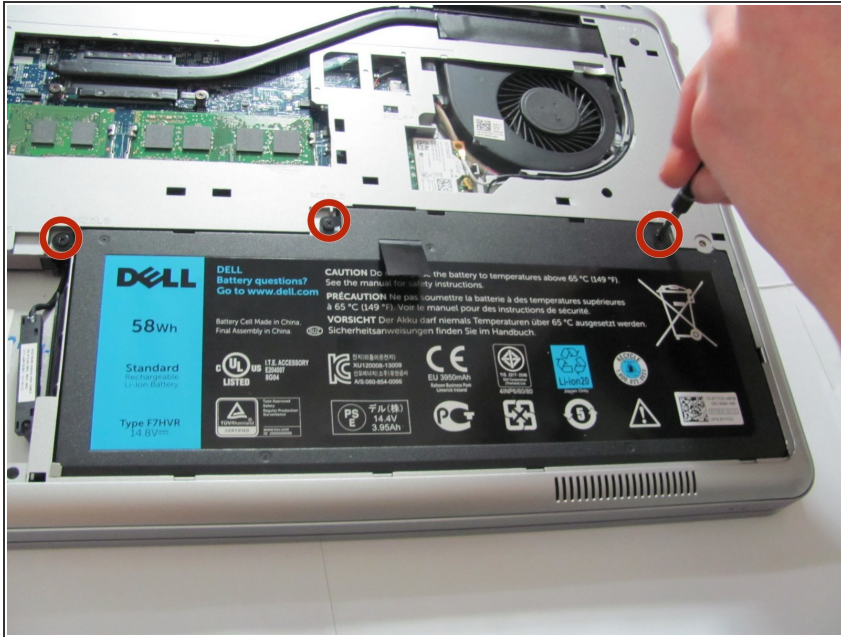

- Remove the three 5mm Phillips #0 screws that keep the battery connected to the computer.

Step 5



⚠ Ground the system board by turning over the computer, opening the display, and holding the power button down for about 5 seconds before proceeding.

- Using the pull tab on the battery, lift the battery out of the computer.

To reassemble your device, follow these instructions in reverse order.