



How to remove and clean the buttons

This guide will provide step by step instructions on how to disassemble your camera in order to replace and clean the keys.

Written By: Emma Fincken



INTRODUCTION

Here, we will show you how to take apart the camera to reach the keys and clean them.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — How to remove and clean the buttons




- First, we need to get inside the camera. Refer to the [lens cleaning guide](#) for steps on how to remove the front panel.

Step 2



- Once you have the front panel off, you are one step closer to accessing the keys. From here, you will need to remove the upper panel which will release the keys. Unscrew the screw and remove the small metal plate which holds the keys.

Step 3

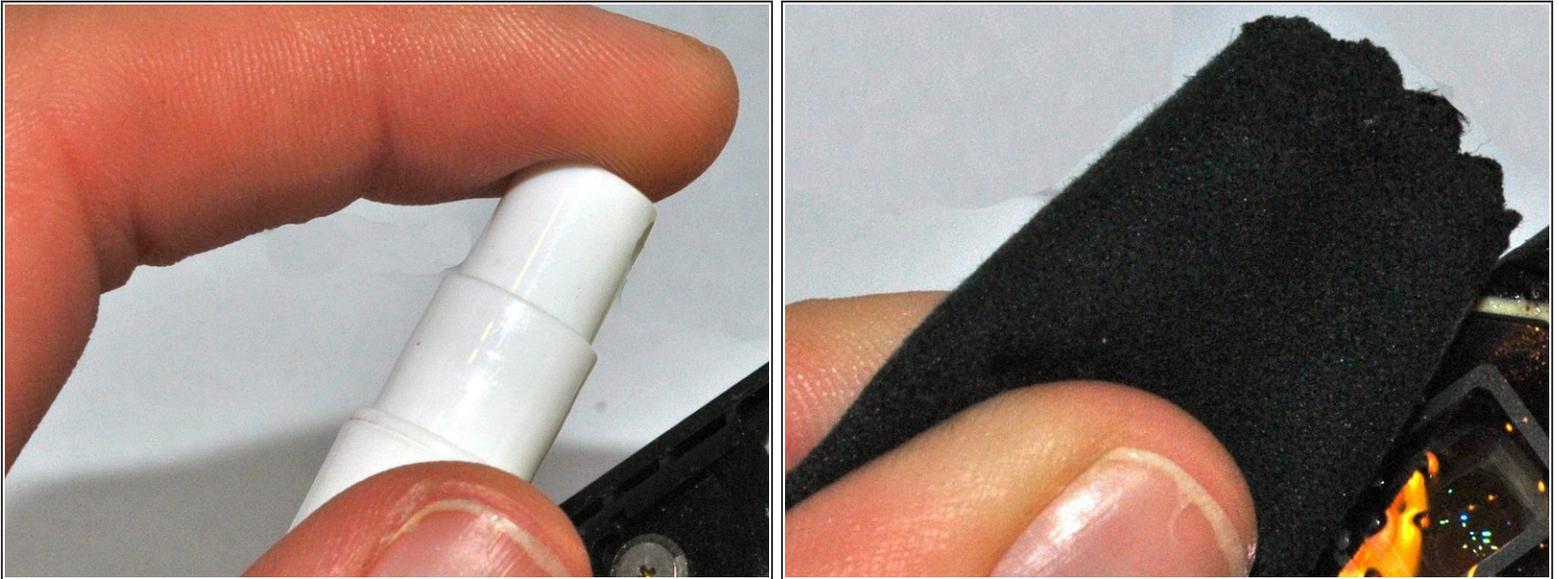

- Remove the keys and clean using solution and a soft cloth. If the keys are damaged, you will need to replace them. You can purchase parts for your camera on [Olympus's website](#).

To reassemble your device, follow these instructions in reverse order.