



Nokia 6310i Screen Replacement

Disassemble your Nokia 6310i screen to fix display problems.

Written By: Spencer Silvestre



INTRODUCTION

This guide is to instruct the reader how to disassemble the Nokia 6310i so that they can access the screen.

TOOLS:

- [iFixit Opening Tools](#) (1)
 - [T6 Torx Screwdriver](#) (1)
-

Step 1 — Battery




- Press and hold the battery release button and slide the battery away from the Nokia logo

Step 2 — SIM card



- Slide the SIM card lock away from the SIM card.



 The SIM card pops out. Remove the SIM card.

Step 3 — Back Cover



- Unscrew and remove the four T6 Torx screws.

Step 4

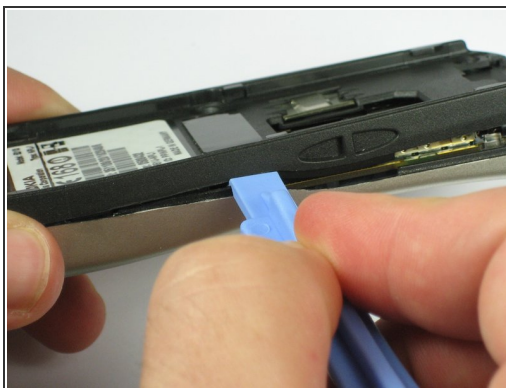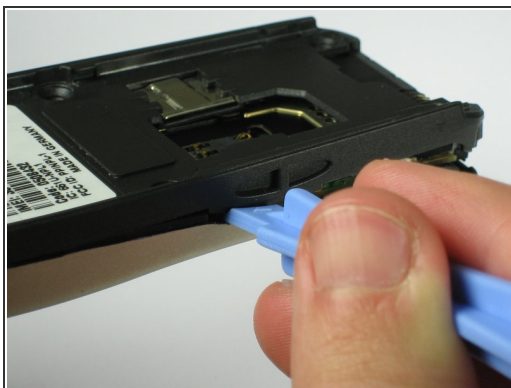


- Insert a plastic opening tool between the faceplate and the black backplate. Gently pry them apart, working from the lower end to the upper side of the phone.

Step 5




- Use the plastic opening tool to separate the top part of the backplate.
- ⓘ The plastic clips at the top require slightly more force to separate.

Step 6 — Antenna

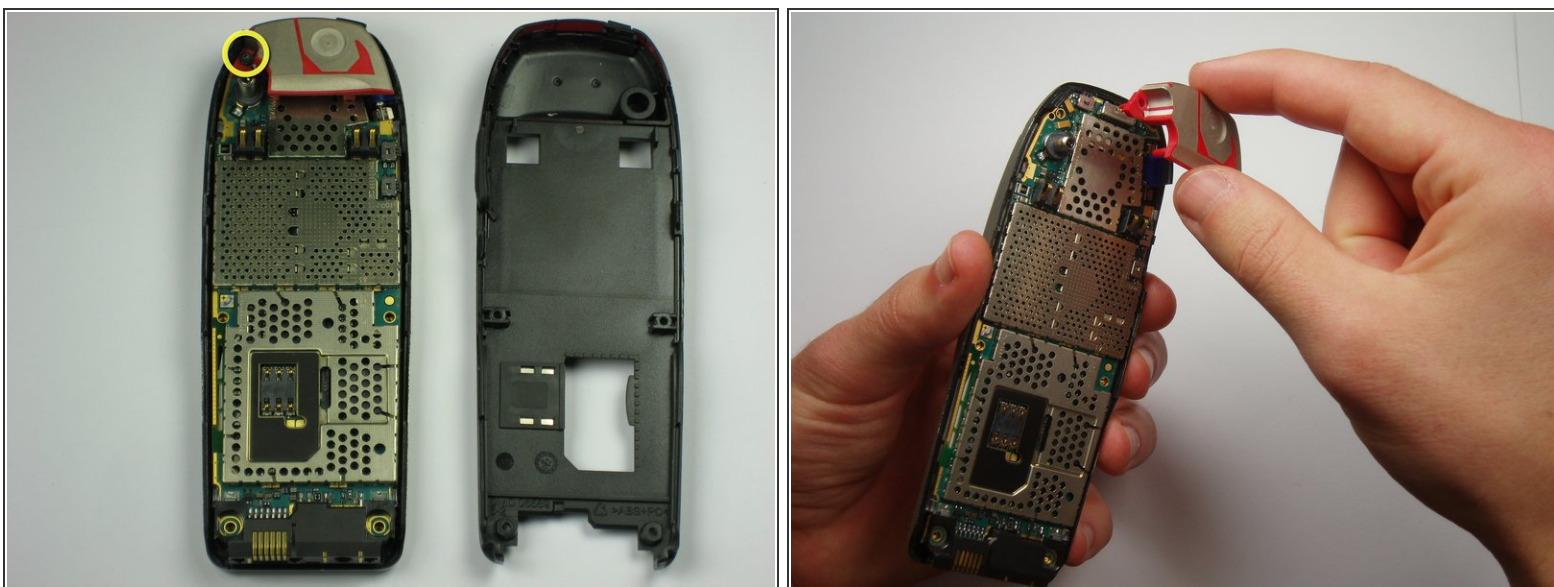


- Remove the screw holding the antenna to the circuit board.
- Carefully lift off the antenna from the circuit board.

Step 7 — Motherboard

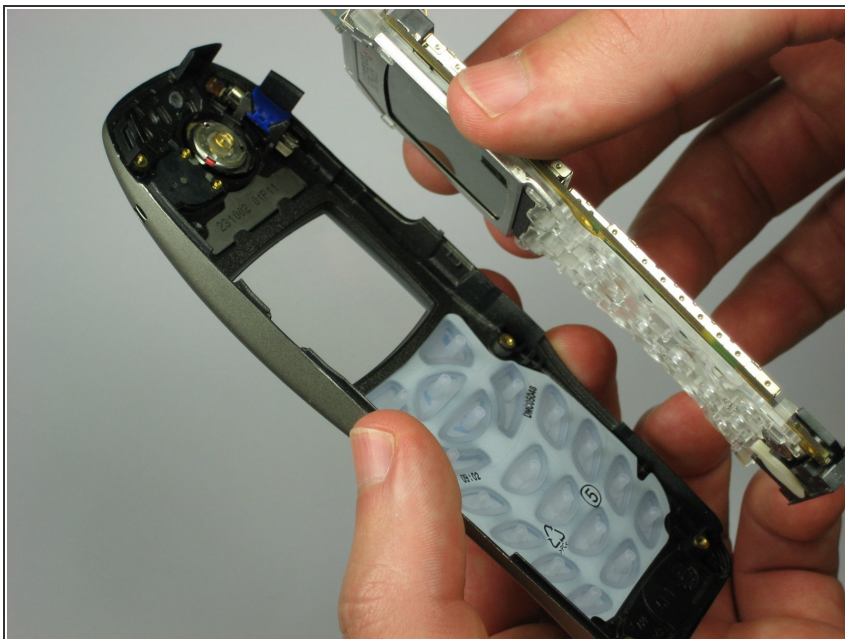

- Lift off the motherboard from the faceplate.

Step 8 — Screen

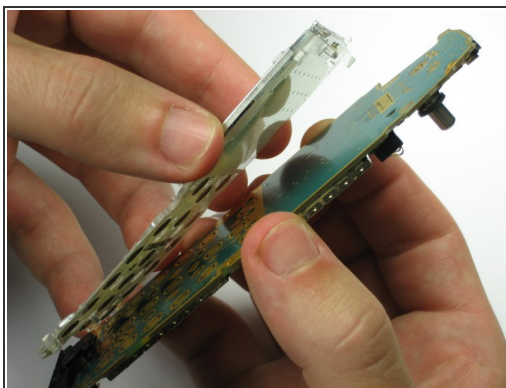

- Remove the screen from the motherboard by carefully pushing the four tabs around the edge.
- Carefully pull the screen away from the motherboard.

To reassemble your device, follow these instructions in reverse order.