



Nikon Coolpix S3100 disassembly

This is prerequisite to disassemble the camera.

Written By: Jorge



INTRODUCTION

Follow these first three steps to accomplish the next guides.



TOOLS:



- [Phillips #000 Screwdriver](#) (1)
-

Step 1 — Nikon Coolpix S3100 disassembly




- Remove 8-2.46 mm screws from both sides and bottom of camera using a #000 Phillips screwdriver.
 - Remove 2 screws from left side. (picture 1)
 - Remove 4 screws from bottom. (picture 2)
 - Remove 2 screws from right side. (picture 3)


Step 2

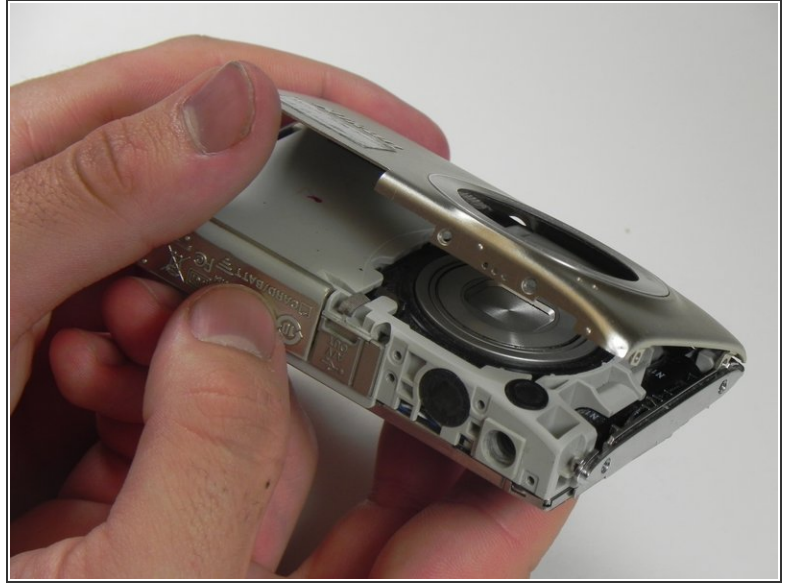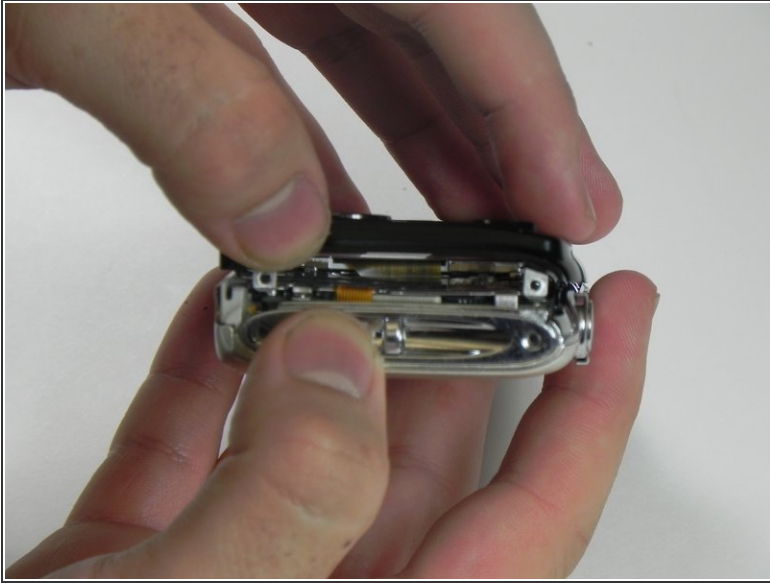

- Remove black cover pulling up with left thumb. Hold silver cover with right thumb.
- Remove silver cover lifting up with left thumb. Hold the camera with right thumb.

 Once internal circuit board is exposed, the red and blue wire terminals at top center can provide a nasty shock from the charged flash capacitor (silver can to left of terminals). BE CAREFUL!

Step 3

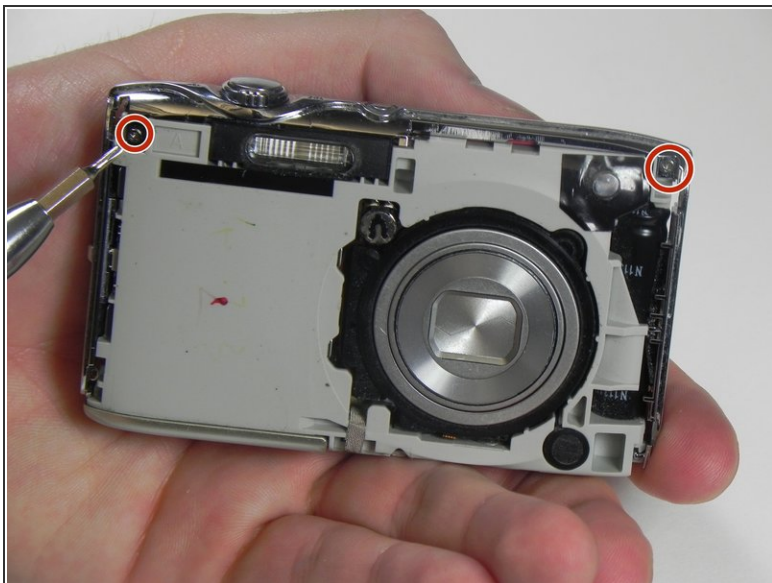

- Remove 2-2.10mm screws in the front of the camera using a #000 Phillips screwdriver.
 - Remove the two screws.
- Gently pull up to detach the frame. (picture 2)

To reassemble your device, follow these instructions in reverse order.