


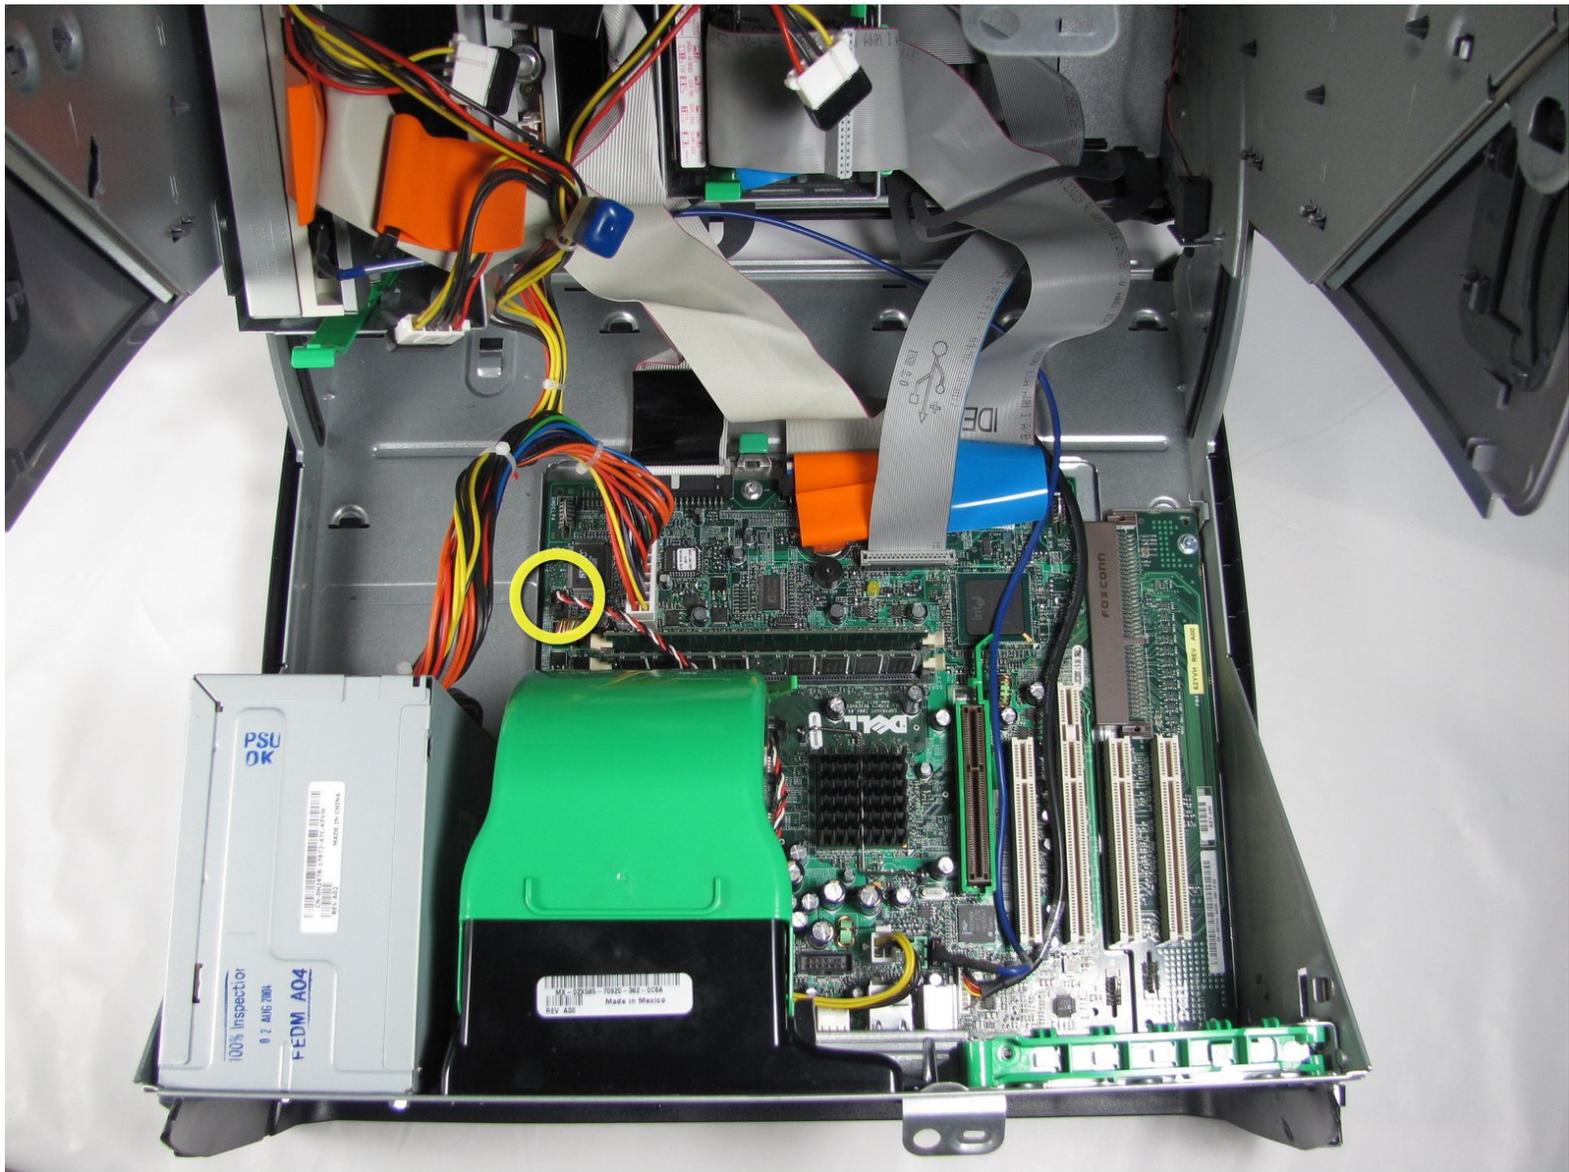

# Dell OptiPlex GX260 Main Fan Replacement

This guide shows how to remove the main fan from the PC case.

Written By: Kevin Schapansky



 **TOOLS:**


- [2.5 mm Flathead Screwdriver](#) (1)

## Step 1 — Case



- Lay the Dell OptiPlex GX260 down on a clean flat surface with the rear towards you.
  - Push the oval shaped buttons located on the top and bottom of the PC simultaneously and lift the case straight up.
- i** Note: Some force may be required to push in the oval buttons open the PC case.

## Step 2 — Main Fan

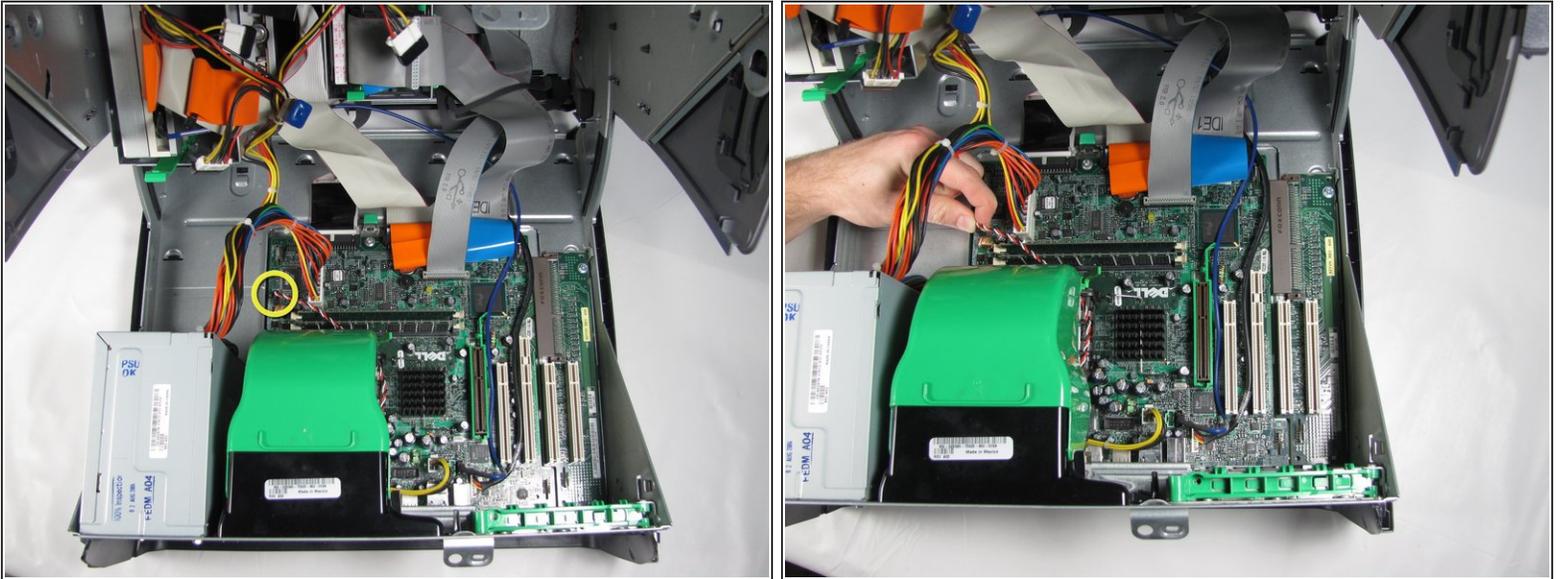

- Disconnect the fan cable from the motherboard.

## Step 3



- On the rear of the desktop, push the two circled black buttons straight in with a small pointed object while pulling up on the fan.
- Once the fan is released, lift it straight up and out of the case.

To reassemble your device, follow these instructions in reverse order.