 




Skil 88 Trigger Mechanism Replacement

Removing and replacing the trigger mechanism of the Skil 88 drill.

Written By: Matt

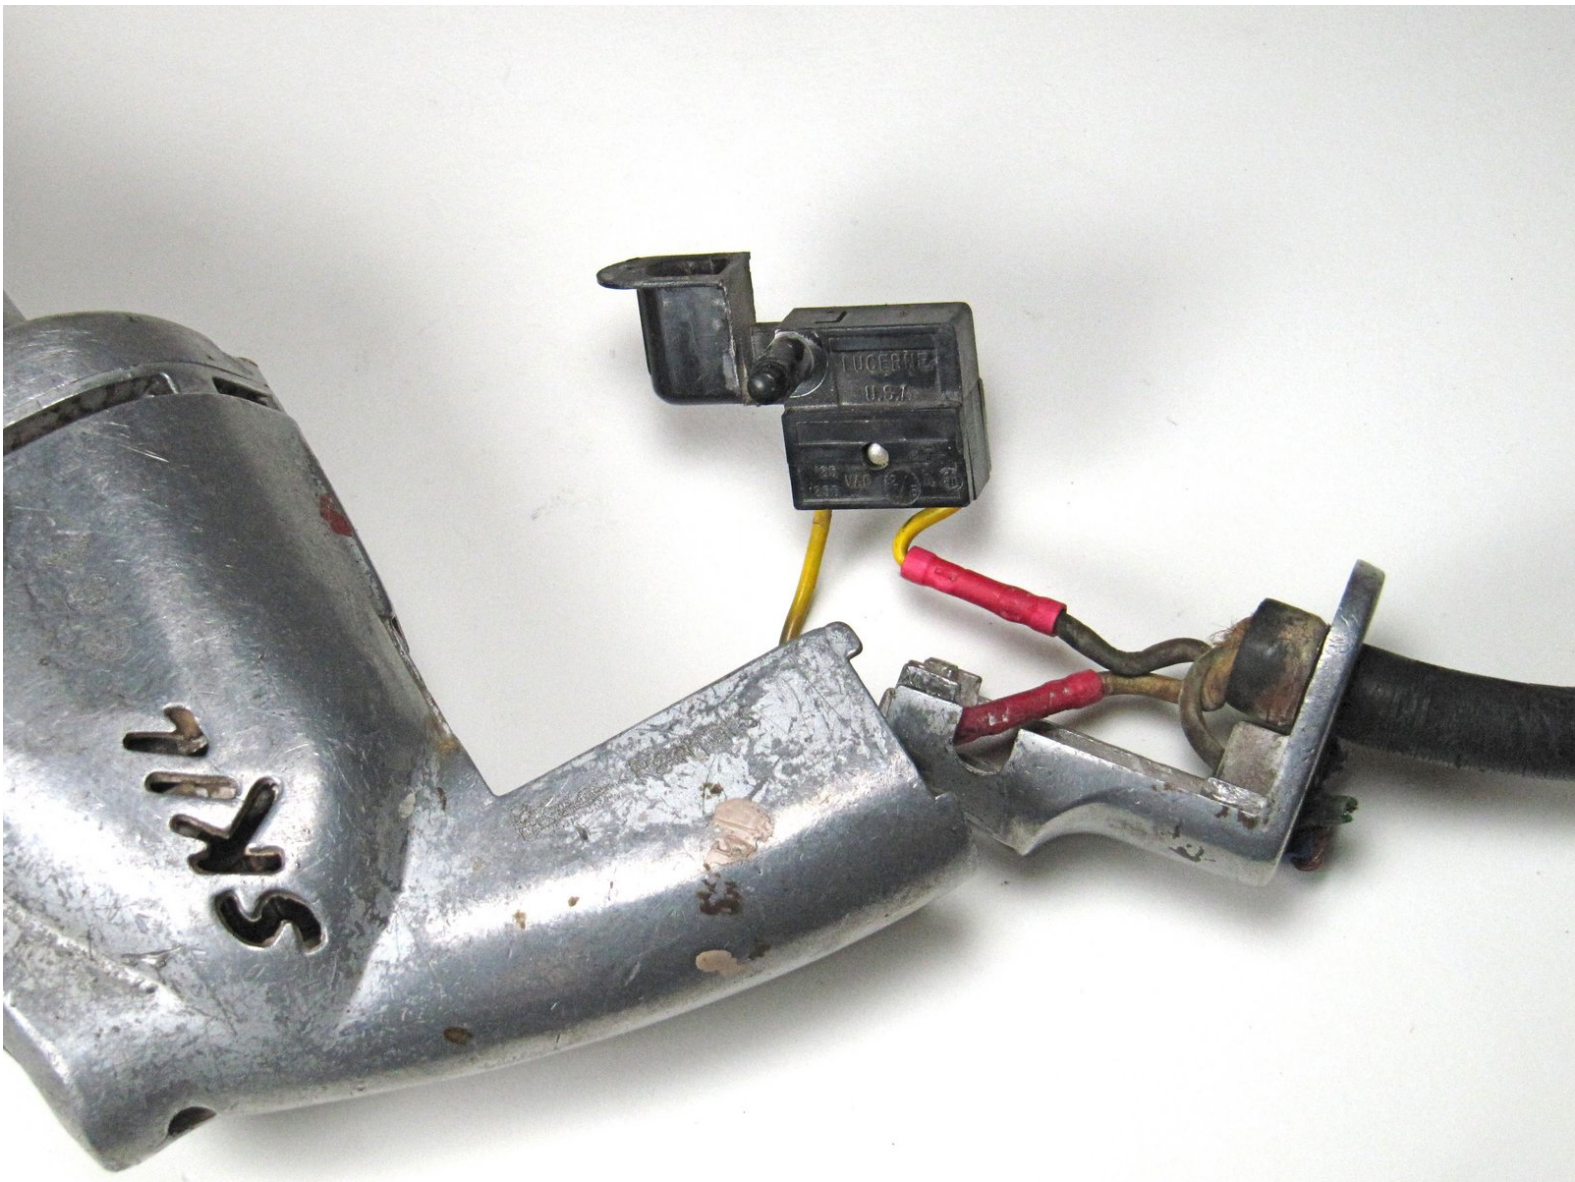

INTRODUCTION

After opening the trigger housing, one of the things you can do is replace and remove the trigger mechanism. It's as simple as getting the housing open.



TOOLS:

 
 
 
- [.25" Socket Wrench](#) (1)
-

Step 1 — Trigger Housing



- Use the socket wrench to remove the 0.5" length screw from the bottom of the handle.

Step 2

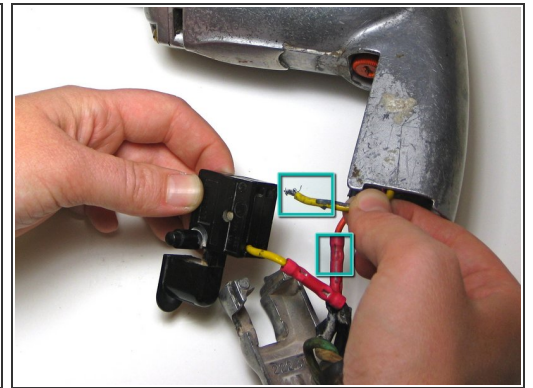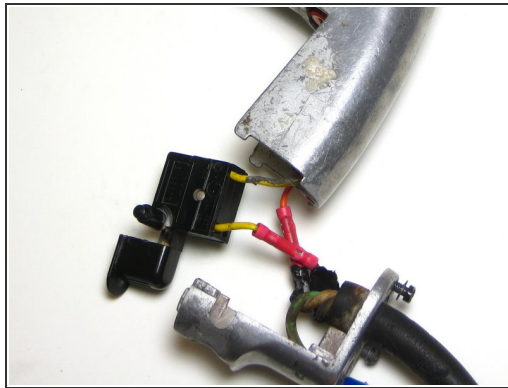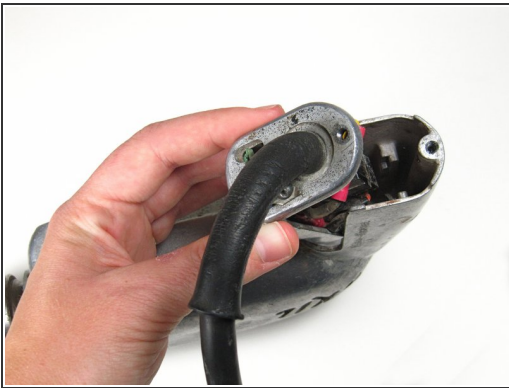


- Separate the cord from the handle.

Step 3 — Trigger Mechanism



- ⚠ Make sure that the drill is completely unplugged.
- Locate the two wires attached to the black trigger.
- Pull the wires out of the trigger. It may take a bit of force.

 Step 4

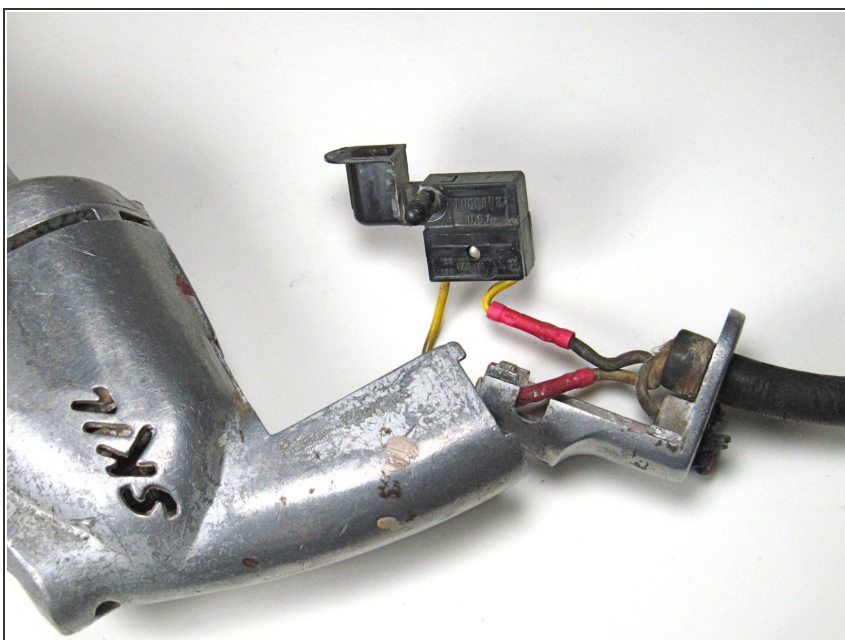

- Push the wires into the new trigger piece.
- Make sure the wires go back into the correct holes.

To reassemble your device, follow these instructions in reverse order.