




Gigabyte P34G Battery Replacement

The battery supplies power to the laptop, so it...

Written By: yeunghayden

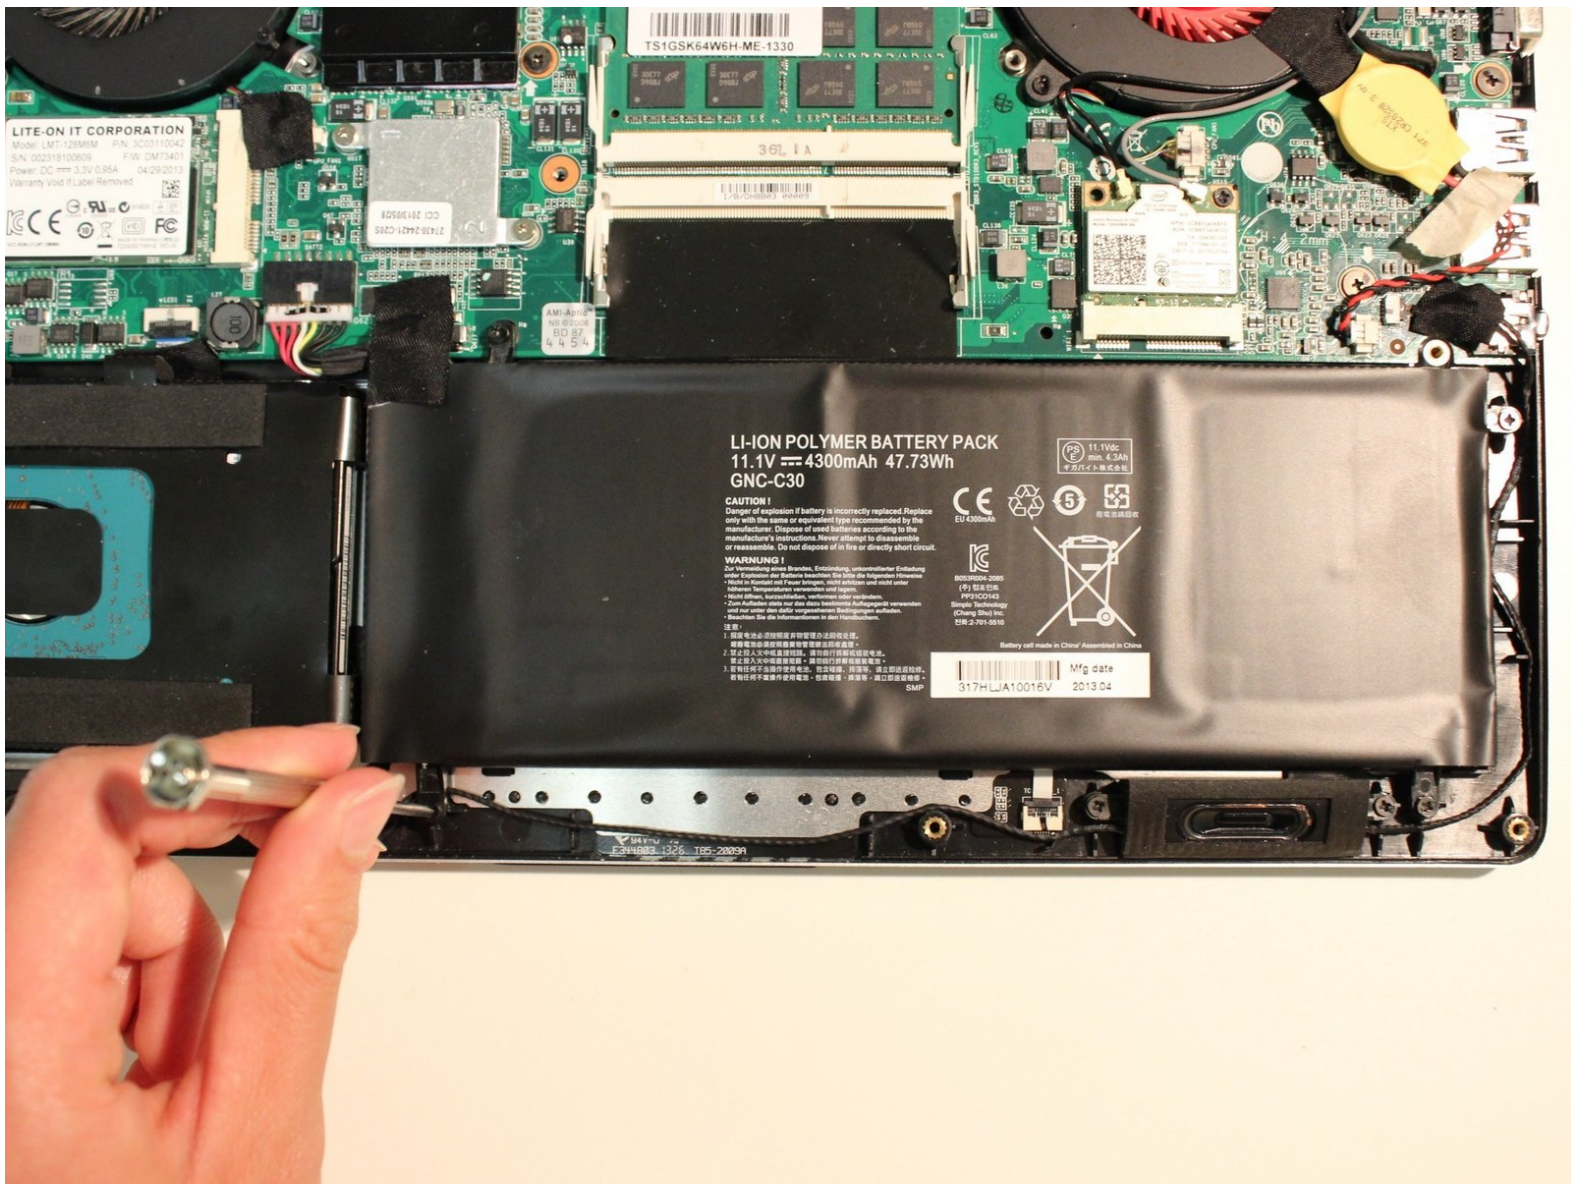

INTRODUCTION


The battery supplies power to the laptop, so it is essential for the battery to be in good condition for optimal performance.

Make sure you are grounded before starting. To ground yourself, simply touch a metal object that is in contact with the floor for a few seconds.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Battery

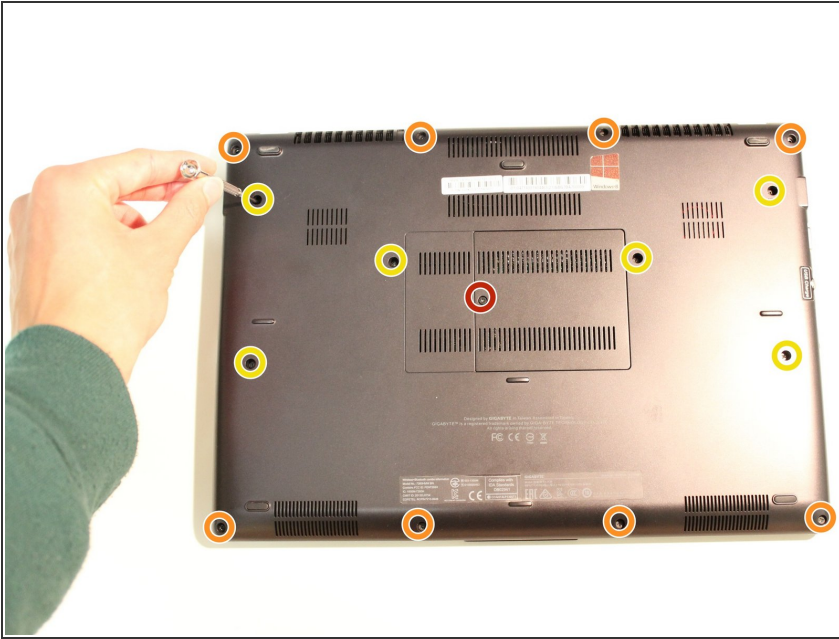

- Remove all 15 screws on the underside of the laptop using a Phillips #0 screwdriver.

❗ There are three different sized screws.

- x1 9.8mm Screw
- x8 5.6mm Screws
- x6 5.0mm Screws

Step 2



- Remove the four 4.5 mm screws using a Phillips #0 screwdriver.

📌 Save the screws in a safe place for reassembly later.

Step 3



- Pull the wires down towards yourself to gently detach the connector from the main drive.
- ☑ Save connector for reassembly later.

Step 4



- Carefully lift the battery for removal and discard properly.
- Replace with new battery.

To reassemble your device, follow these instructions in reverse order.