



Dell Inspiron 9100 Keyboard Replacement

This guide shows you how to replace the keyboard.

Written By: Ana




INTRODUCTION

This guide requires a Phillips #00 screwdriver

TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Battery

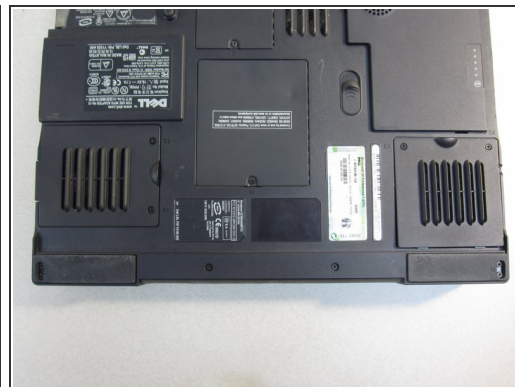

- Unplug the laptop from the power adapter and turn the power off.

⚠ Failure to unplug laptop before proceeding could result in risk of electric shock!

Step 2





- Slide the battery-lock tab and hold.
- Flip the battery away from the chassis to remove it.

Step 3 — Keyboard




- Turn the laptop around.

Step 4

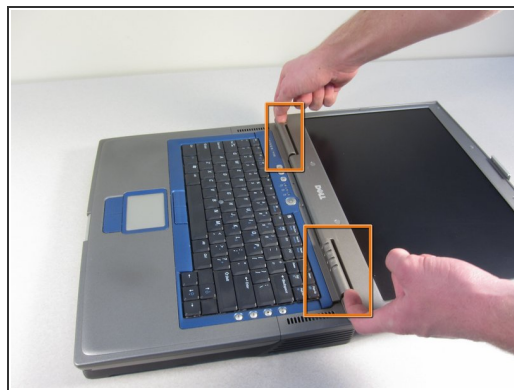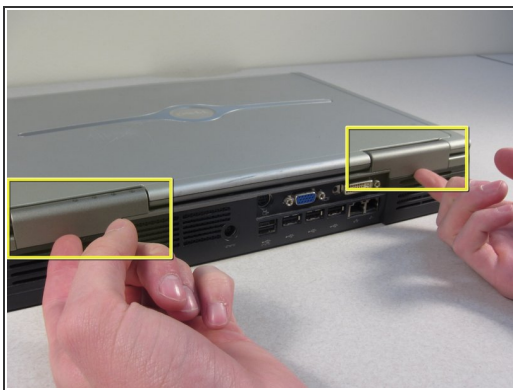


- Use your fingers to gently pull up on the hinge covers. They will release with an audible snap.
- Fold the screen back to 180 degrees.
- Using your index fingers, pull up the hinge cover.

Step 5

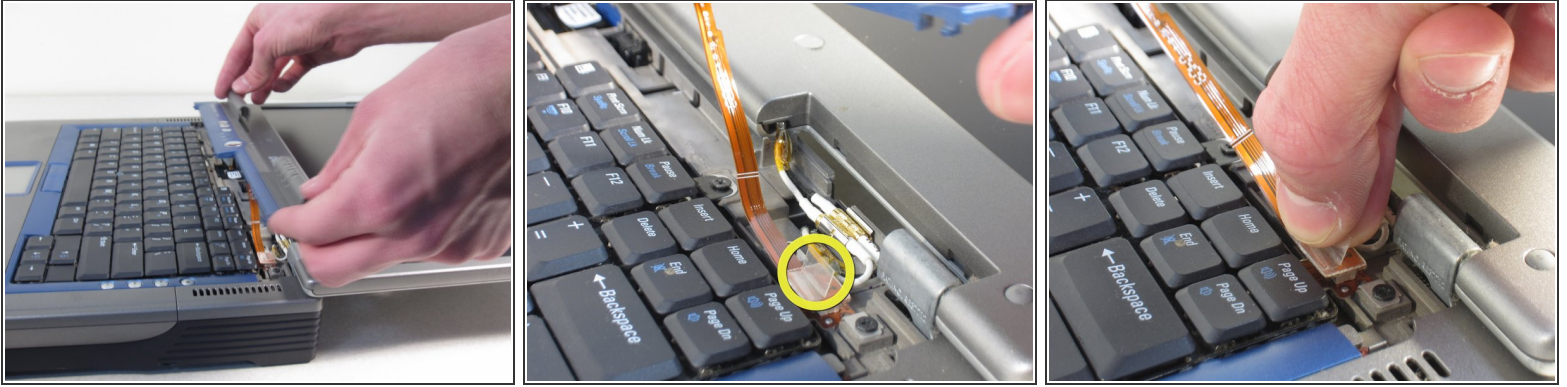




- After the hinges pop, pull the hinge cover gently.
- Pull the clear tab on the right side of the laptop up. This tab will disconnect the hinge cover from the laptop.

Step 6

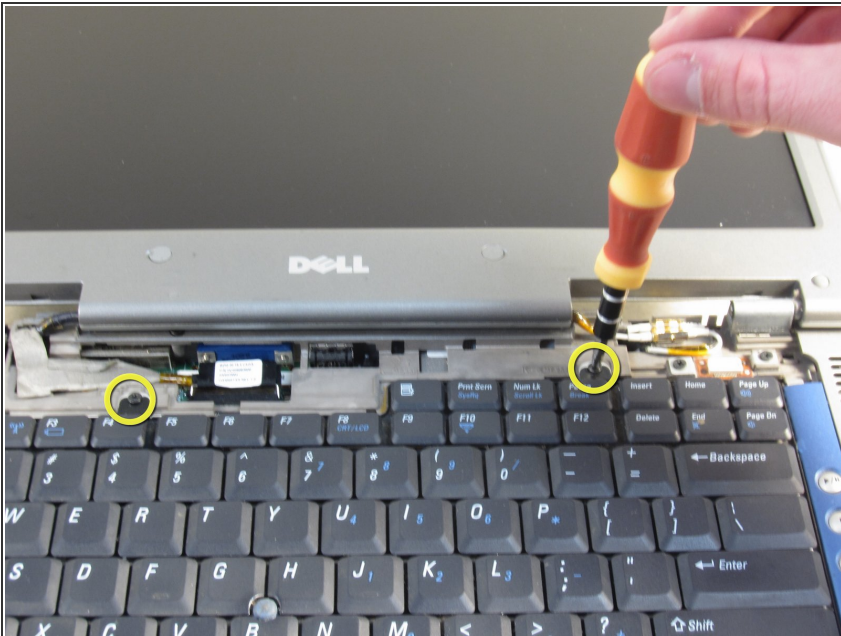

- Remove the two 3mm screws on the top of the keyboard (nearest to the screen)

Step 7

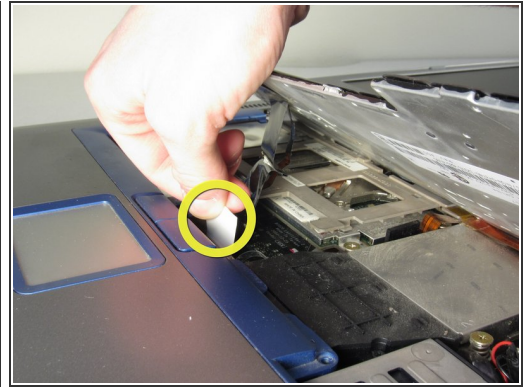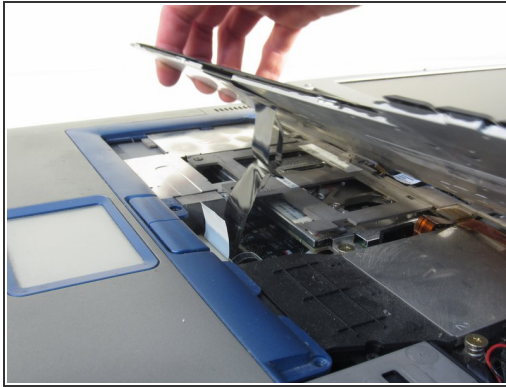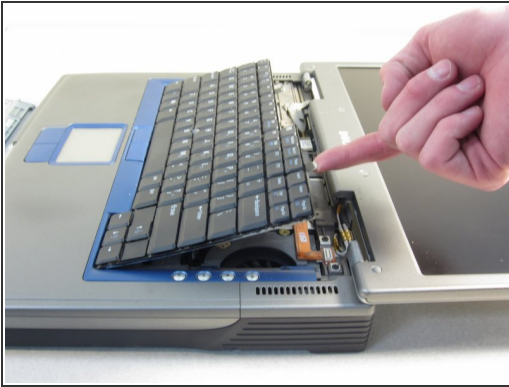

- Tilt the keyboard away from the screen.
- Pull up on the white tab underneath the keyboard to release the keyboard.

To reassemble your device, follow these instructions in reverse order.