



Canon PowerShot S410 Back Cover Replacement

This guide demonstrates how to remove the...

Written By: Randy Lormand



INTRODUCTION

This guide demonstrates how to remove the cameras back panel for cleaning or replacement.

TOOLS:

Phillips #0 Screwdriver (1)

Step 1 — Battery



① Turn the camera with the bottom side facing up.


- Locate the panel labeled "Batt. Open"
- Place your finger on the panel and slide it in the direction of the arrow.
- The slot will swing open revealing the battery pack.

Step 2



- Pull the orange lever and the battery will spring out slightly.

Step 3

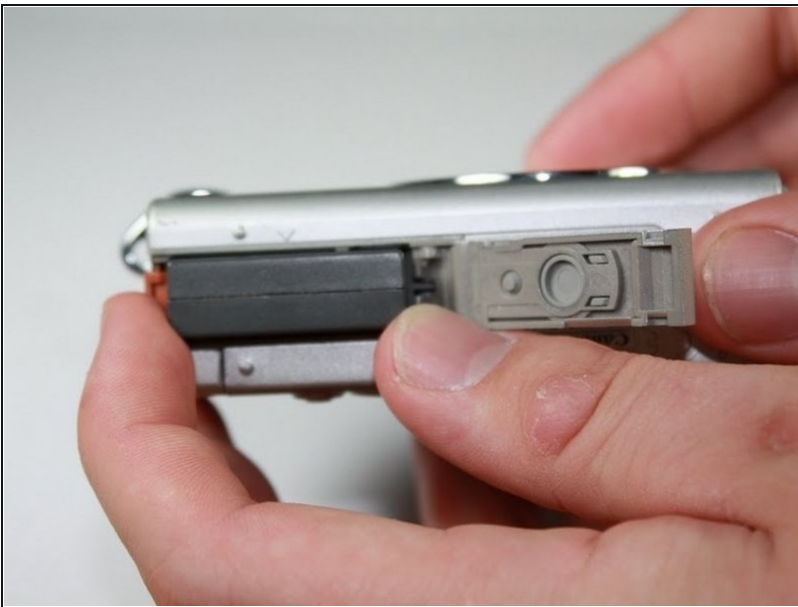

- Grasp the battery and fully pull it out of its slot.
- ☑ When placing the new battery back in the slot, the arrow on the battery must align with the arrow on the camera.

Step 4 — Back Cover



- ① Start by laying the camera flat with the LCD screen facing up.
- Using the Phillips #0 screwdriver, remove the 3.8mm screw in the upper right corner.

Step 5



- ① Position the camera with the bottom facing up.
- Twist the screwdriver counter-clockwise to remove the 4.8mm screw.
- Repeat to remove the two 2.3mm screws.

Step 6



- ① Position the camera so that the rubber "AV Out Digital" tab is facing upward.
- Slide the rubber tab to reveal the bottom screw.
- Using the screwdriver, remove the two 3.7mm screws.

Step 7



- ① Turn the camera with the back side facing you.
- Grip the edges of the back plate, and carefully slide it off.
- ① If there is any resistance in movement, double check there are no screws left in the chassis.

To reassemble your device, follow these instructions in reverse order.

