


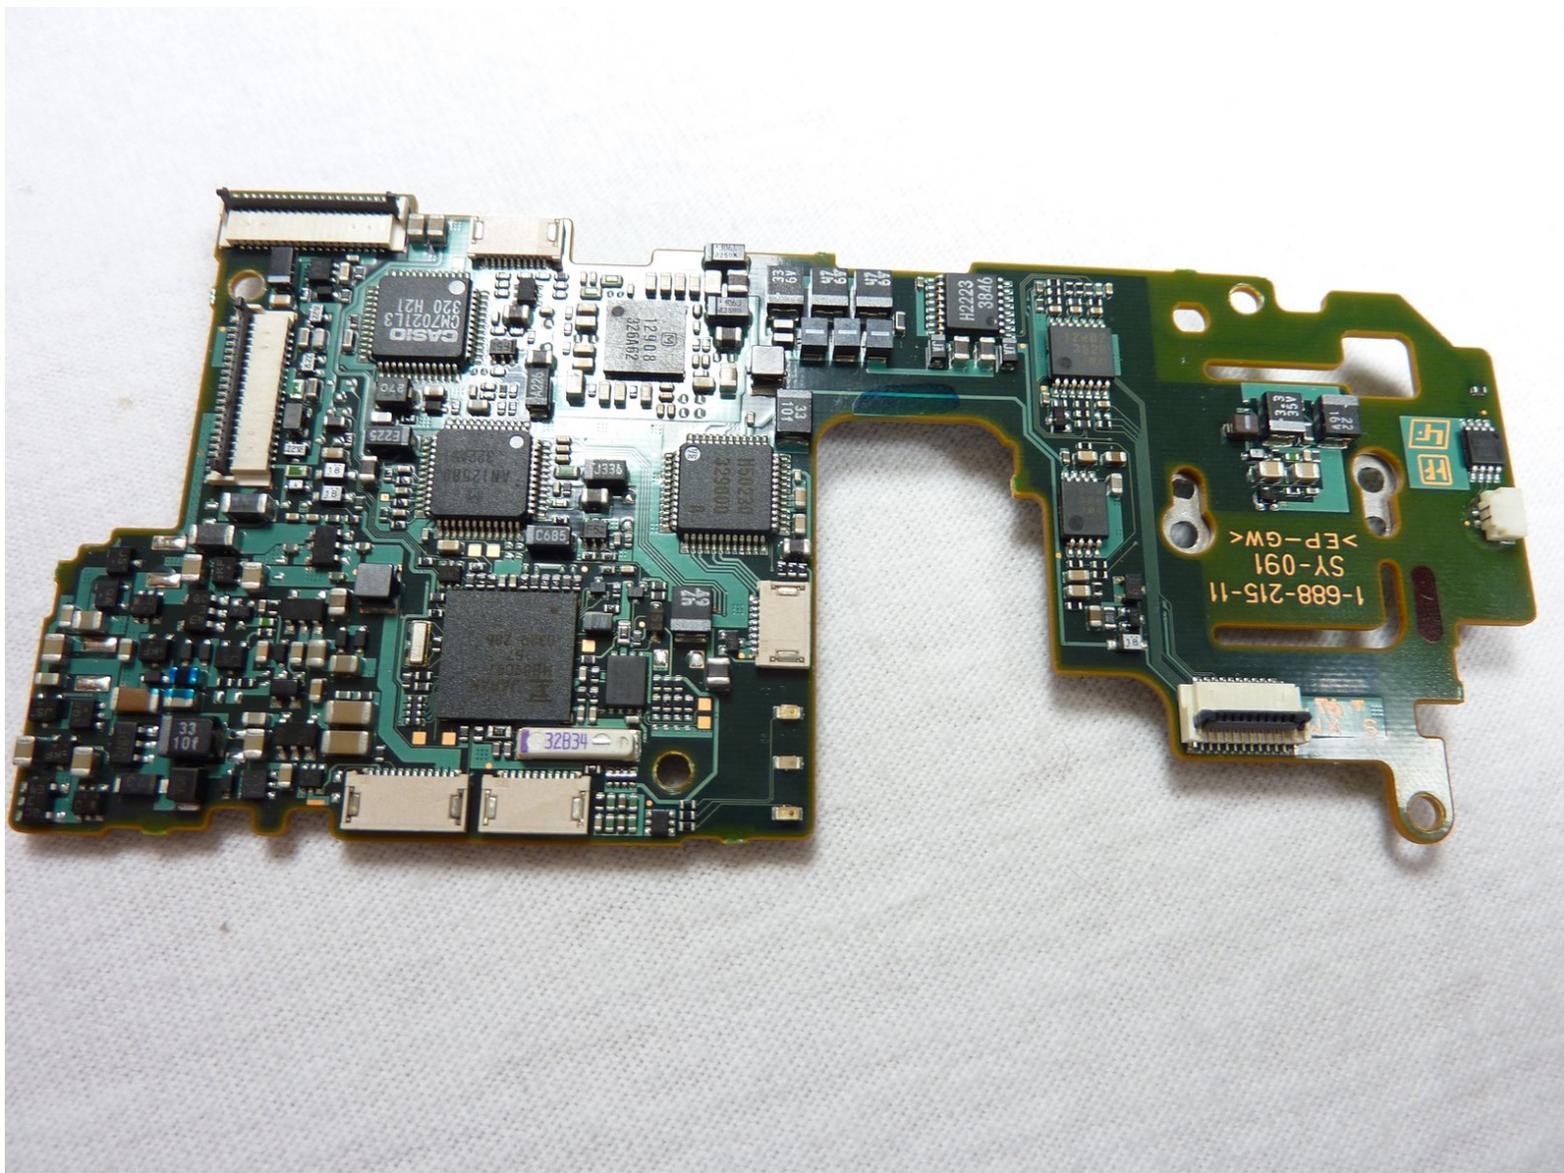

Sony Cyber-shot DSC-P52 Motherboard Assembly Replacement

This guide will illustrate the steps required to remove the motherboard and flash from this camera.

Written By: Trevor



INTRODUCTION

This guide serves to assist in the replacement of the flash and motherboard.



TOOLS:

- [Phillips #0 Screwdriver \(1\)](#)



PARTS:

- [Sony Cybershot DSC-P52 Motherboard Replacement \(1\)](#)

Step 1 — Outer Case




- Open the battery compartment and remove the batteries.
- Remove all of the visible screws on the outside of the case.
- ⓘ There should be three of them that are all easily located.

Step 2



- Open the memory card compartment.
- Remove the screw next to the memory card slot.

Step 3

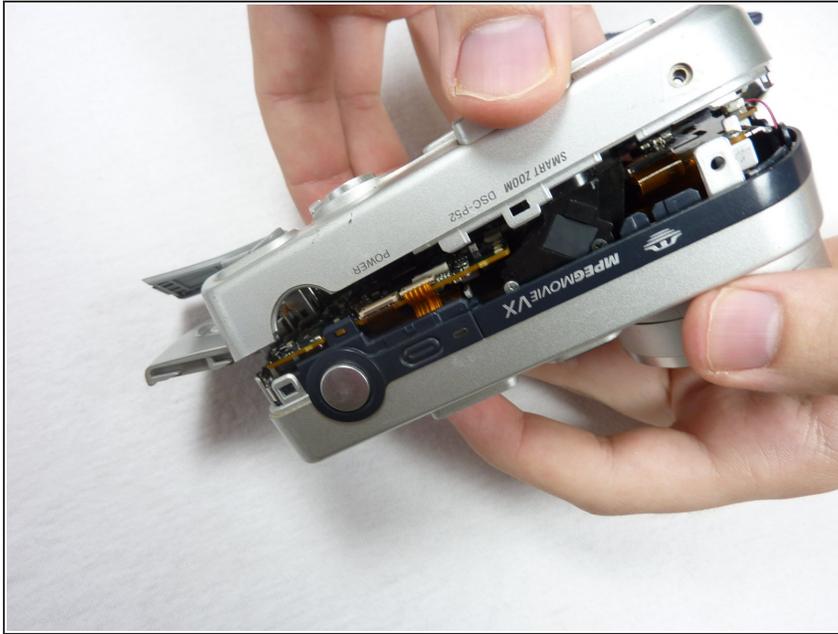


- Pull apart the front and back cover pieces carefully.
- ⓘ The front cover should come completely free with little effort.
- ⓘ The back cover will still be attached to the circuit board.

Step 4




- Simultaneously unclip all of the clips holding in the circuitry. Remove the back case.
- ⓘ The circuitry will still be connected to the back case by ribbon cables.

Step 5

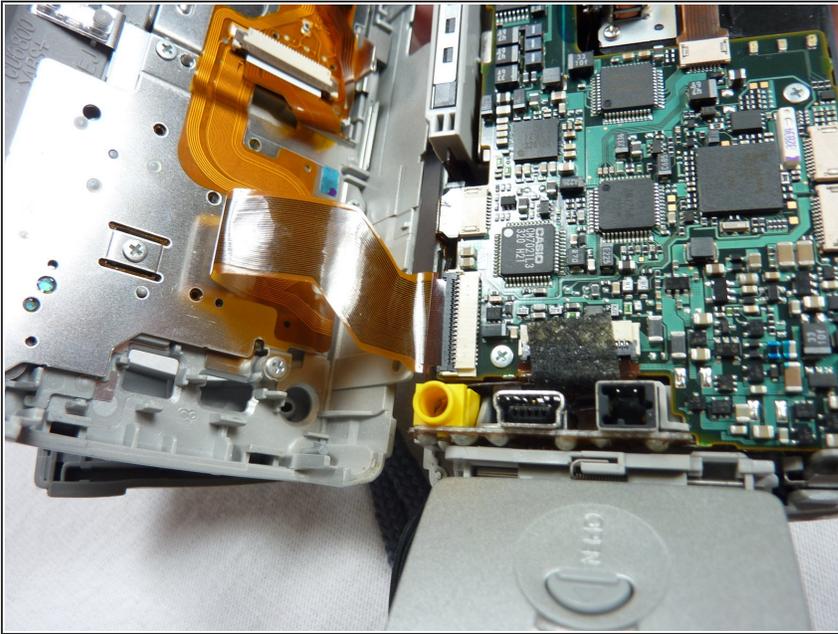


- Open the case as shown.

Step 6

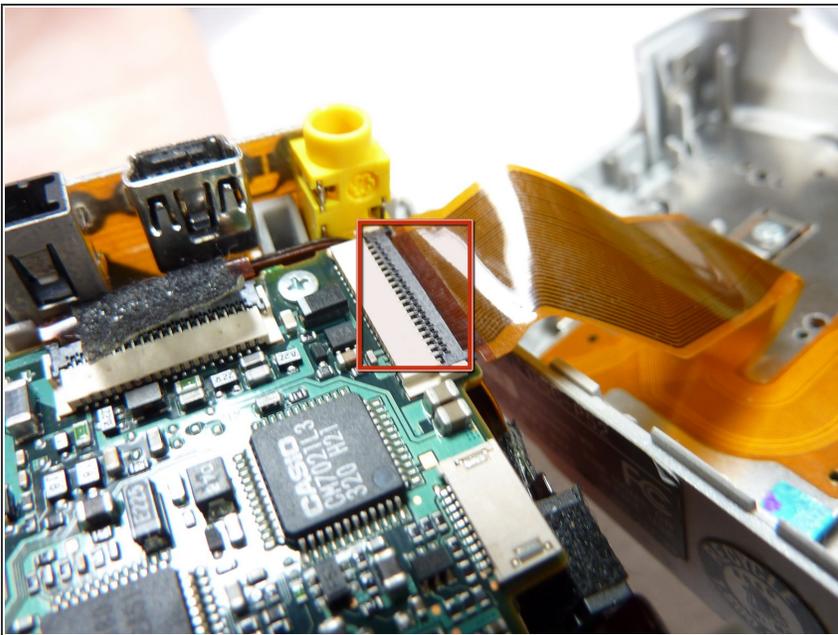


- Unclip the clip holding the ribbon cable in.
- ⓘ Other ribbon cables might not have a clips.

Step 7

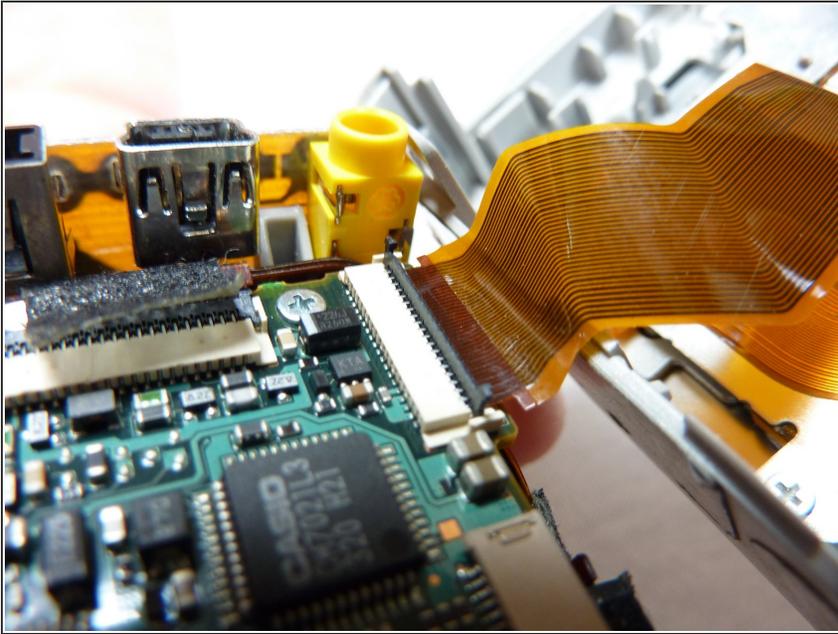


- Pull the ribbon cable out.

Step 8 — Motherboard Assembly

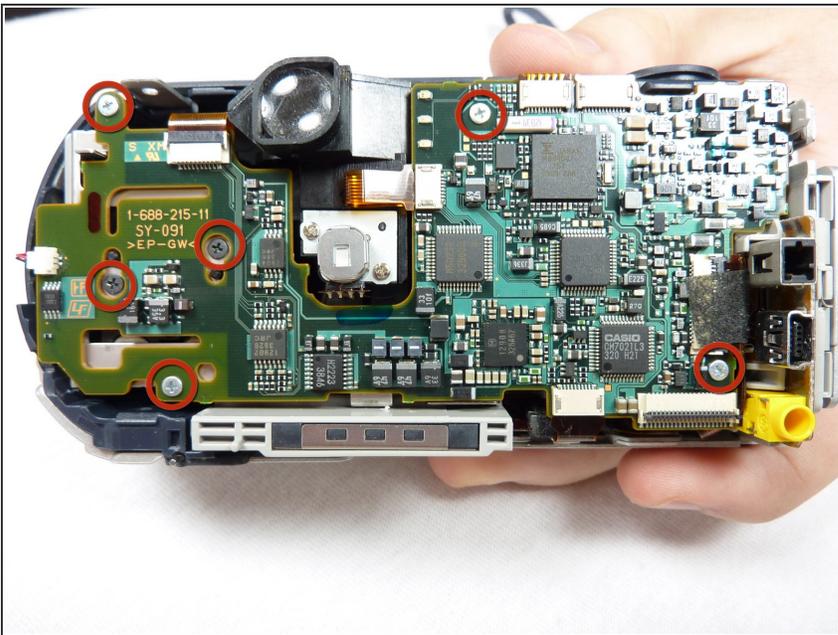


- Remove all six screws on the front side of the motherboard circled in the picture.
- Pull the motherboard from the rest of the housing.
- ⓘ It will still be connected to the flash unit.

Step 9

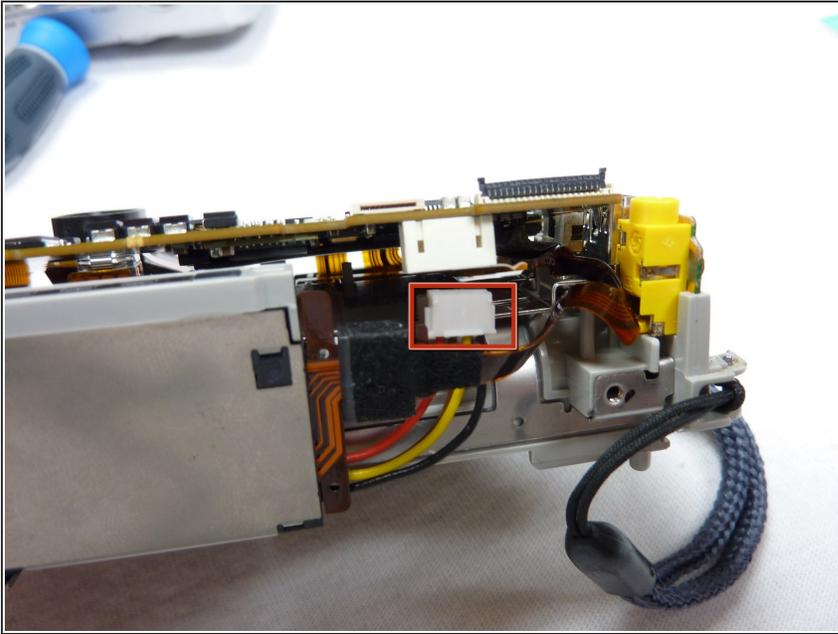

- Remove the cable on the back side of the motherboard.

Step 10

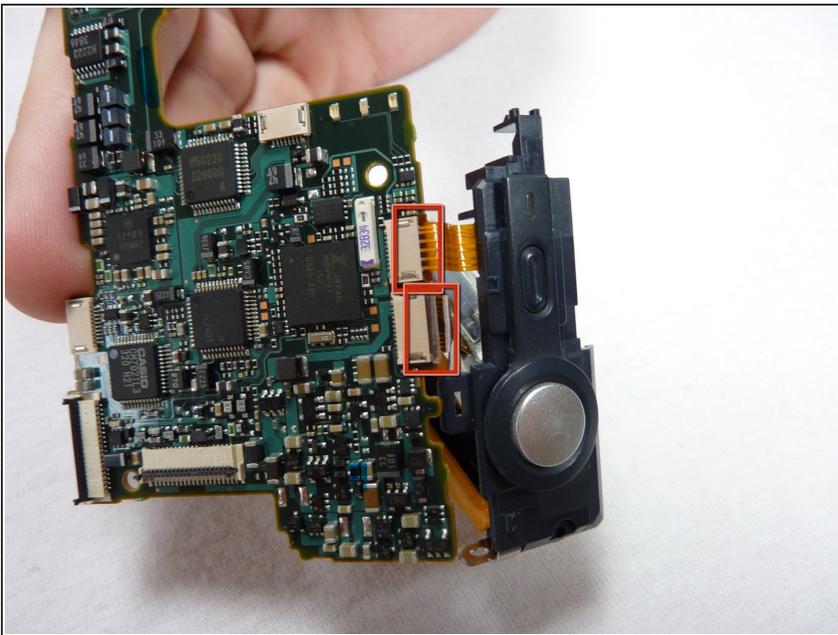

- Detach the ribbon cables shown.
- ⚠ Careful! Touching the leads of the large yellow capacitor can result in a painful shock.
- Remove the flash unit from the motherboard.

To reassemble your device, follow these instructions in reverse order.