


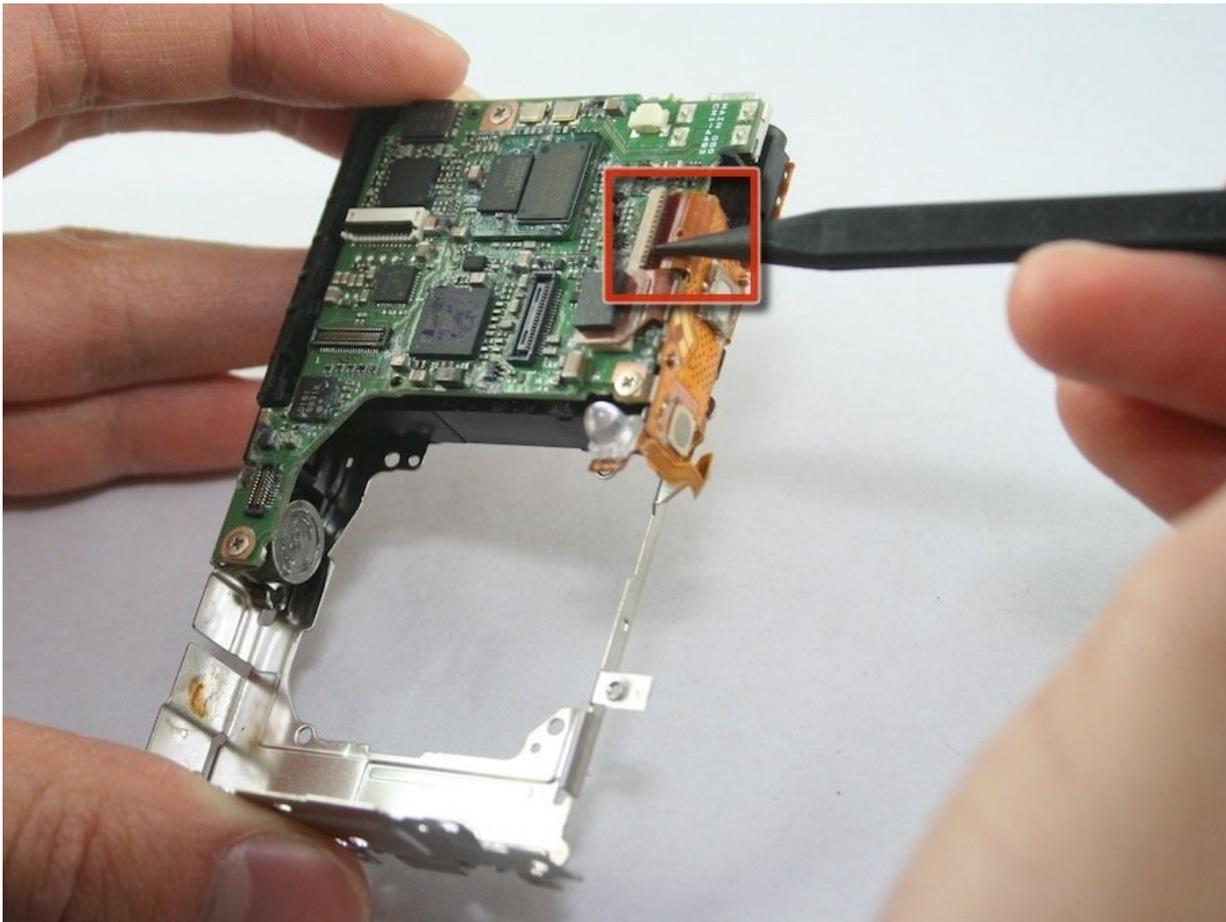

# Canon PowerShot SD1100 IS Function Buttons Replacement

This guide should be used if our guide, &quot;, does...

Written By: Wyatt Chan



## INTRODUCTION

This guide should be used if our guide, "Cleaning Function Buttons", doesn't fix your function buttons.

---

### TOOLS:

[Spudger](#) (1)

[Tweezers](#) (1)

---

### Step 1 — Front and Rear Cover



- Remove wrist strap and battery.

## Step 2




- Remove 2 screws from each side of the camera (4 total, 0.102 in).

- Remove 2 screws from the bottom on the camera (0.138 in).

⚠ Do not mix the 4 side screws with the 2 bottoms ones; they are different sizes.

## Step 3

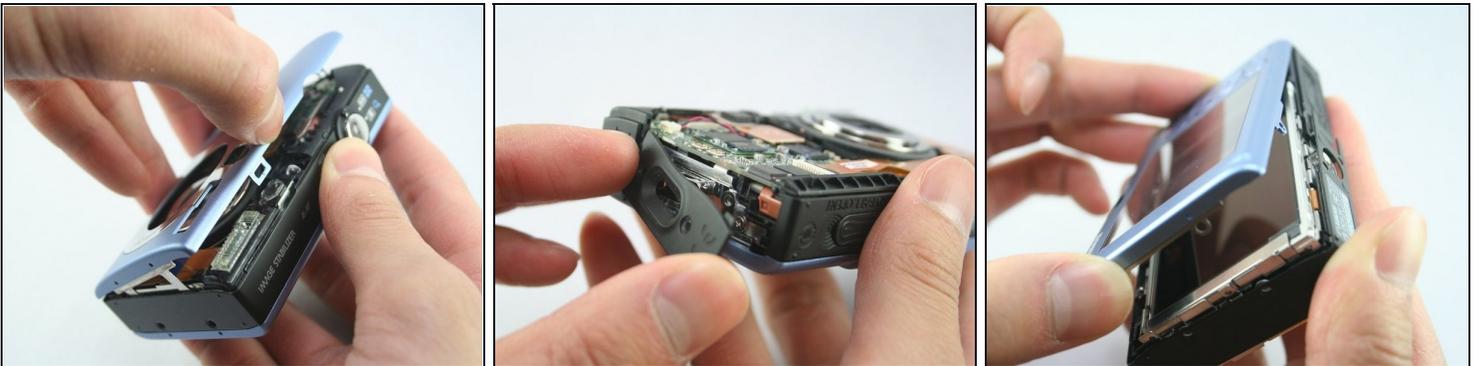

- Gently pull off the front cover.

ⓘ The plate on the side should come off.

- Gently pull off the back cover.

## Step 4




- The cases should now be removed.

## Step 5 — Top Button Assembly



- Use the spudger to disconnect the black tab.

## Step 6

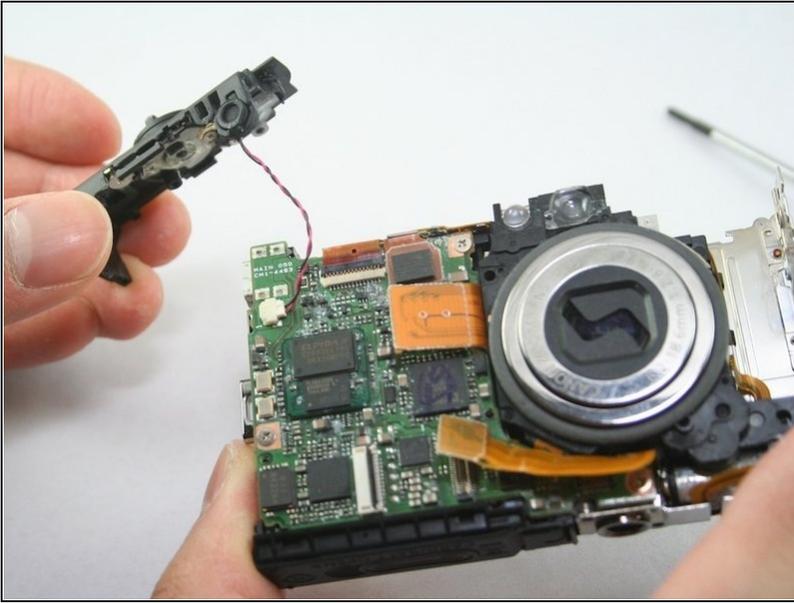

- Gently pull off the shutter button assembly.

## Step 7




- Use the [tweezers](#) to disconnect the microphone cable.

## Step 8




- The shutter button assembly should now be removed.

## Step 9 — Function Buttons

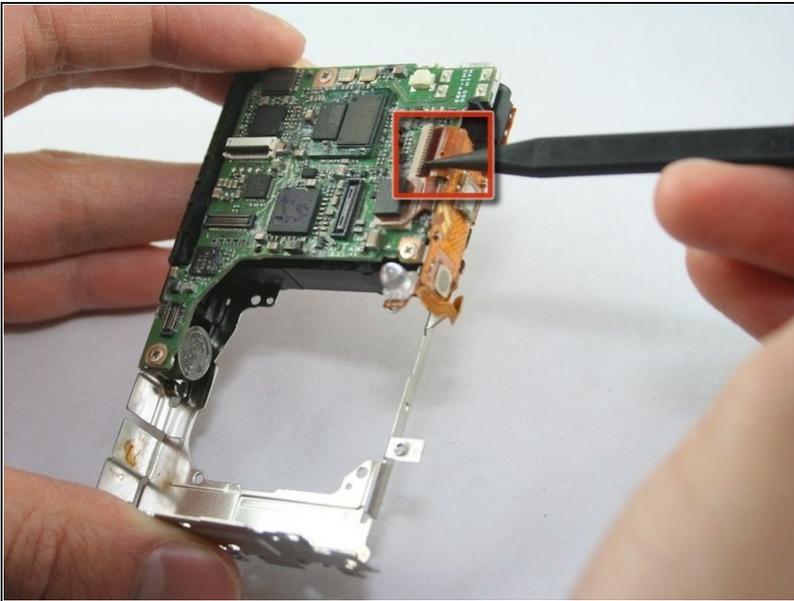


- With the spudger, flip up the black tab on the main ribbon.

## Step 10

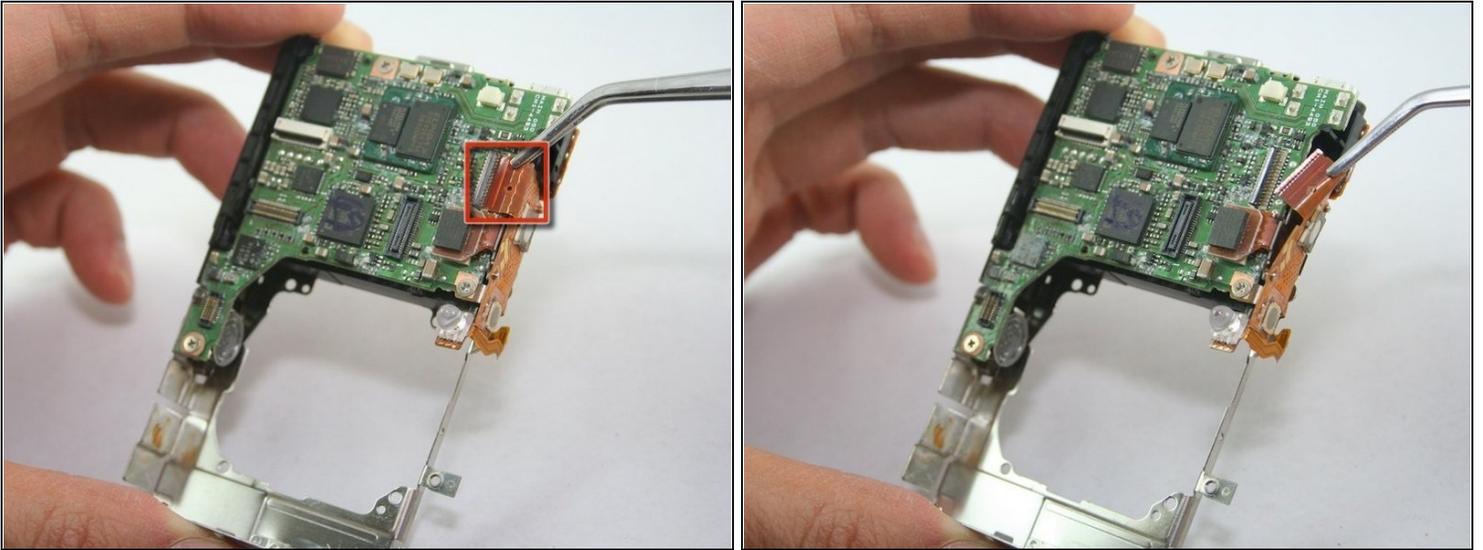


- Gently pull straight out on the ribbon to disconnect it from the logic board.

## Step 11

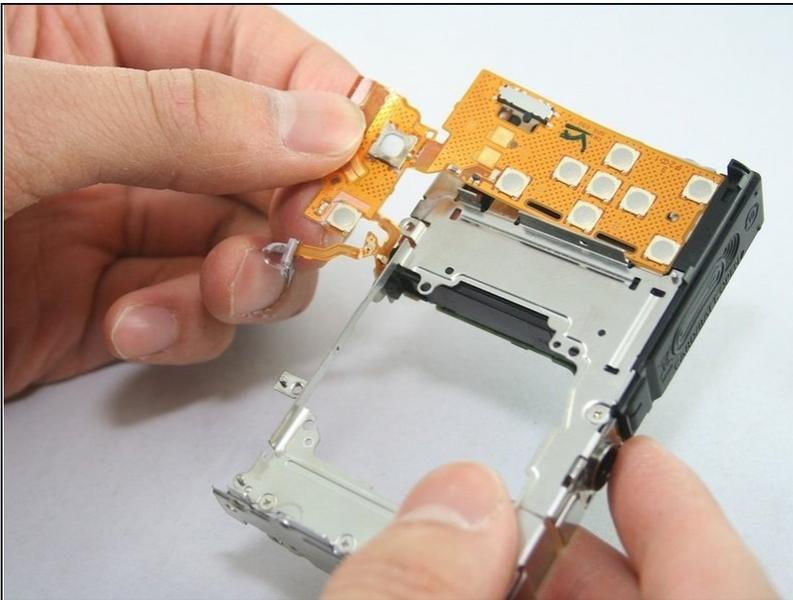

- By hand, gently unfold the function button board and lift it off the frame.

## Step 12

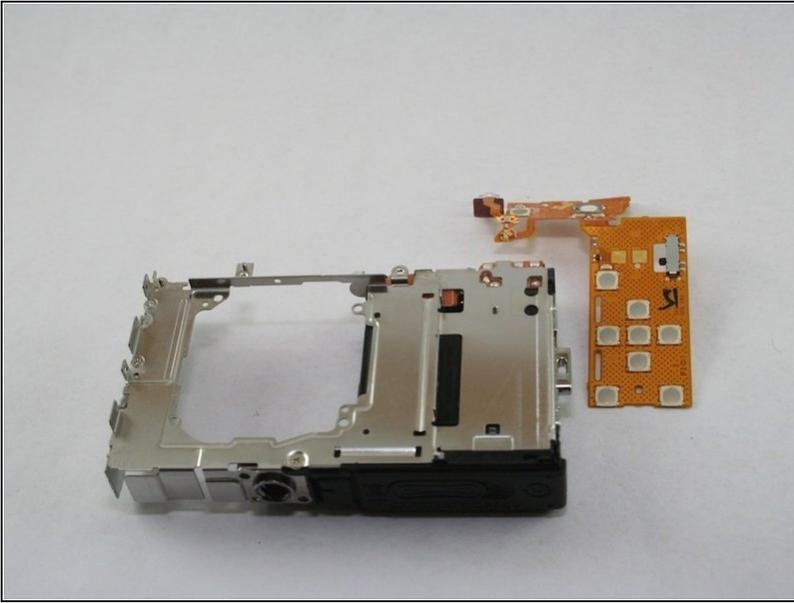

- Congratulations! The function button board can now be replaced.

---

To reassemble your device, follow these instructions in reverse order.