



# Presto PopLite 04820 Chute Replacement

This guide shows how to replace the Chute. The Chute is the piece above the popping chamber that guides popped kernels to a bowl.

Written By: Emanuele Rocco



---

## INTRODUCTION

This is a replacement guide for the chute. The chute helps guide the popcorn kernels to a bowl. This repair may be needed if the Chute has been broken over time. Be sure that you are only working on the Presto PopLite 04820 when it is unplugged and it has cooled down.

---

### TOOLS:

- [Phillips #2 Screwdriver](#) (1)
-

## Step 1 — Chute



- ⚠ Make sure you unplug the device before disassembling.
- Remove the butter melter/measuring cup.

## Step 2



- Remove the cover.

### Step 3



- Remove the three 49 mm Phillips #2 screws.
- Once you have removed the screws, remove the chute from popper base.

To reassemble your device, follow these instructions in reverse order.