



# Munchkin Mozart Magic Cube Battery Cover Replacement

This guide will show you how to remove and replace the battery cover of the Munchkin Mozart Magic Cube.

Written By: Panos Valavanis





## TOOLS:

- [Phillips #2 Screwdriver](#) (1)
-

## Step 1 — Battery Cover



- Remove two 6 mm Phillips #2 on either side of the On/Off Plate.

## Step 2



- Carefully remove the battery door.

### Step 3



- Gently pull out battery cartridge, and replace the batteries.

### Step 4



- Lastly, re-insert the battery cartridge followed by the face plate, and then tighten the screws.

To reassemble your device, follow these instructions in reverse order.