




Nikon N80 Battery Replacement

This is a guide for replacing the batteries in your Nikon N80 Camera.

Written By: Maegan Vloria

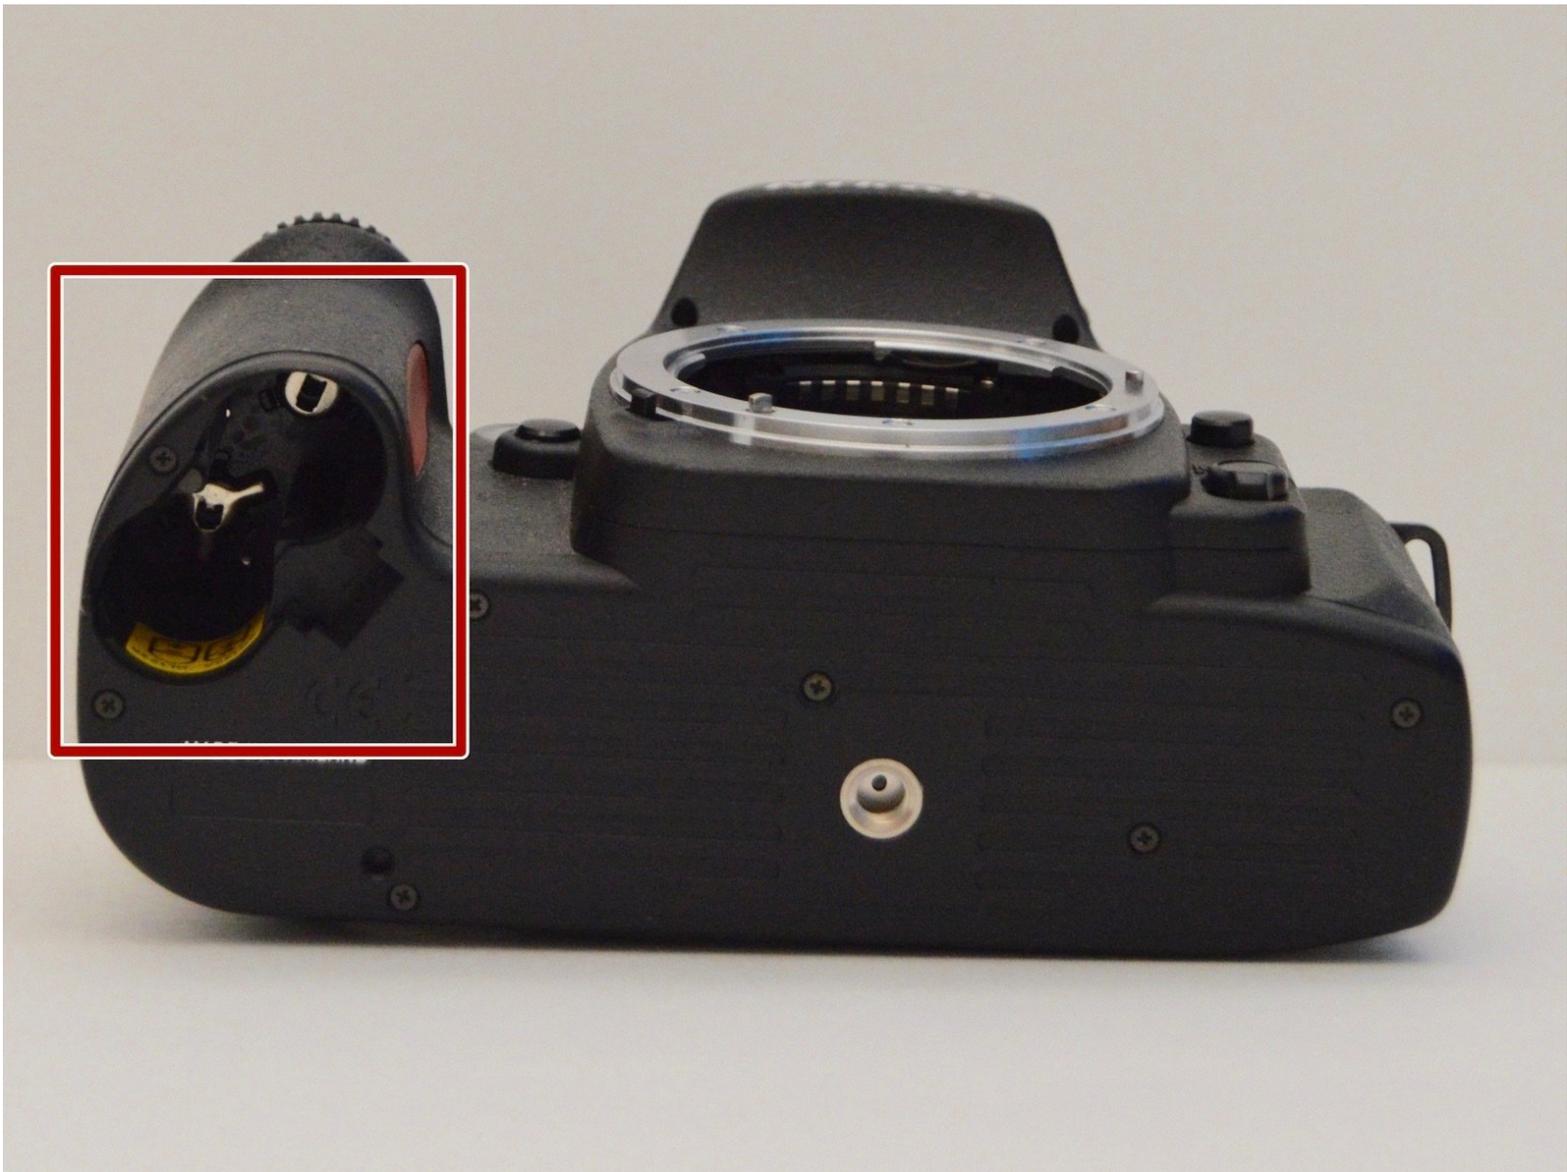

INTRODUCTION

Is your camera not powering up? You may need to change those batteries! This guide will explain how to replace the batteries in a Nikon N80/F80 Camera.

Step 1 — Battery



- Make sure the On/Off switch is in the Off position.

Step 2




- Turn the camera upside down to reveal the battery chamber cover.
- ⓘ This camera is missing the battery chamber cover.
- Slide on the lock lever and remove the battery chamber cover.

Step 3



- Turn the camera back over and let the two CR123A/ DL123A batteries slide out.
- Discard the old batteries responsibly.

Step 4

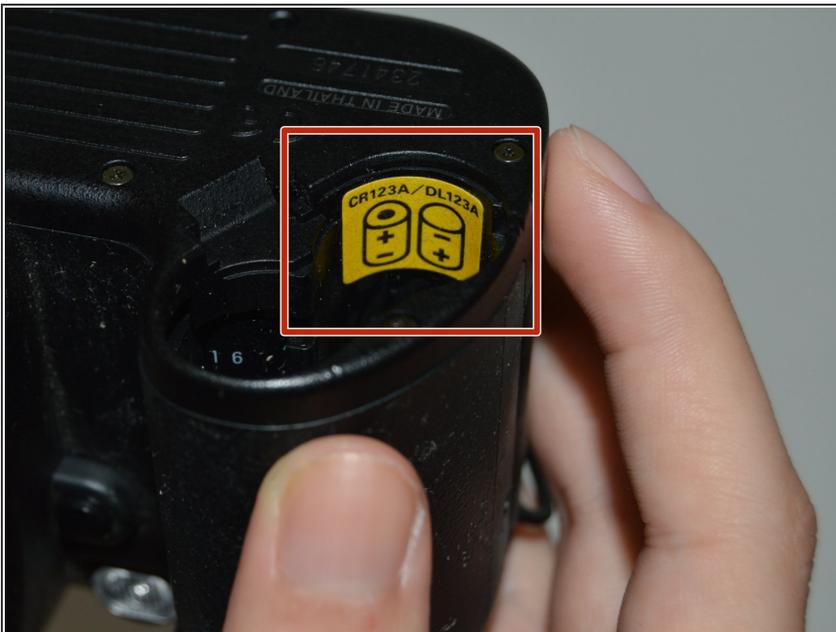

- Use the image on the yellow sticker within the battery chamber to properly place the new batteries back in their compartments.

To reassemble your device, follow these instructions in reverse order.