




Logitech Harmony Smart Control Reset Button Replacement

In this guide we will instruct how to replace the reset button inside the Harmony Hub.

Written By: Zachary Robinson

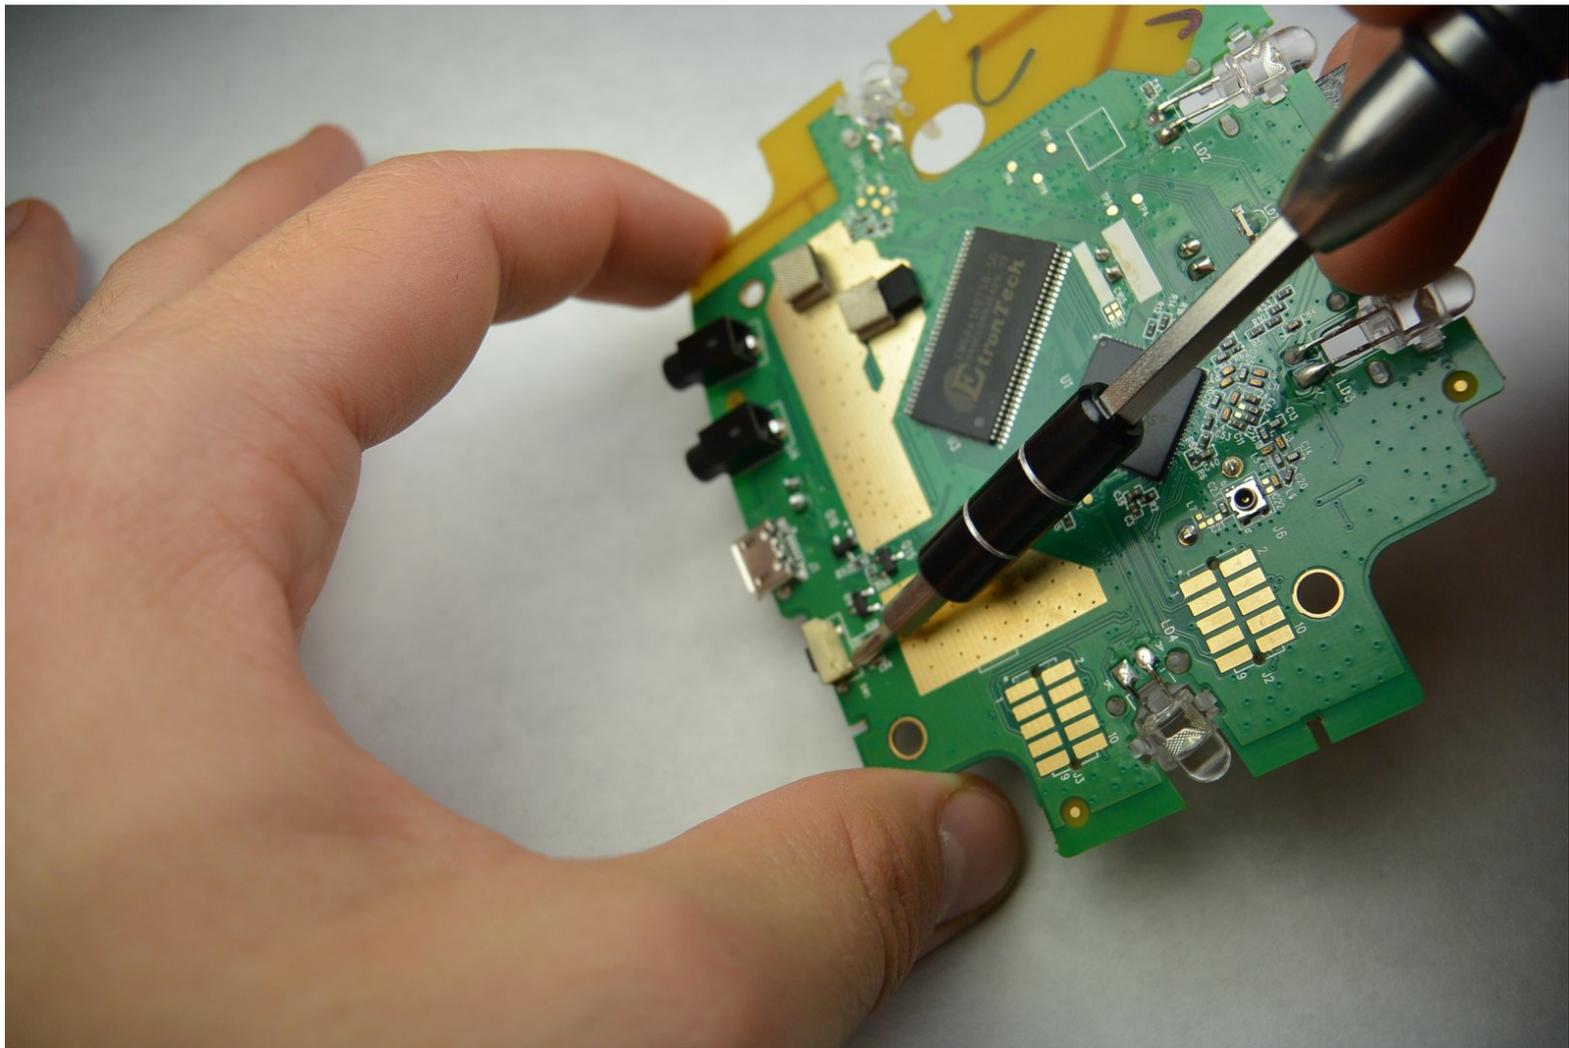

INTRODUCTION

This guide requires soldering, for soldering guide click below.

[Soldering Guide](#)



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Soldering Iron](#) (1)



PARTS:

- [Solder](#) (1)
-

Step 1 — Reset Button




- Using a plastic opening tool, lift up the rubber pad.
- From the bottom of the device, with your fingers, pull back the rubber pad. This will expose the screw holes.
- On the bottom of the hub, repeat the step above for the second rubber pad.

Step 2




- With the PH00 bit, remove the four 6mm Phillips screws.

Step 3

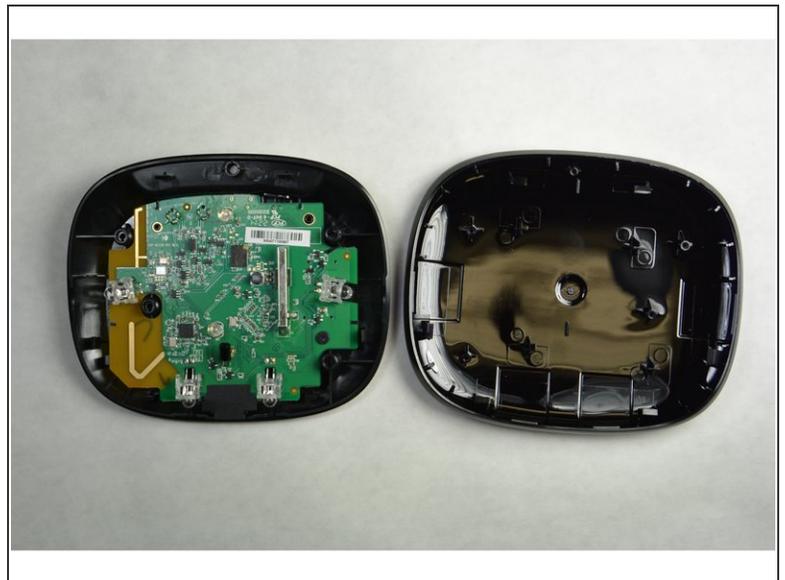


- With the plastic opening tool, separate the pieces of plastic from each other

Step 4

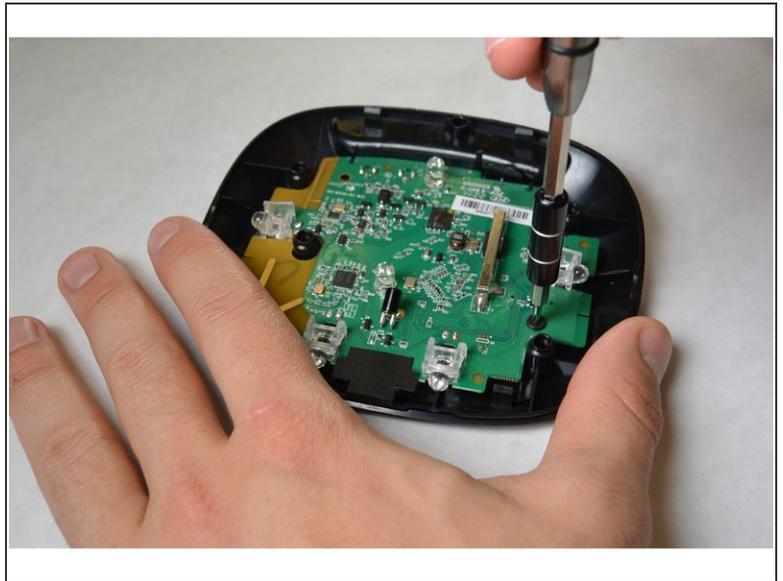



- With the PH00 bit, remove the three 4mm Phillips screws.

Step 5

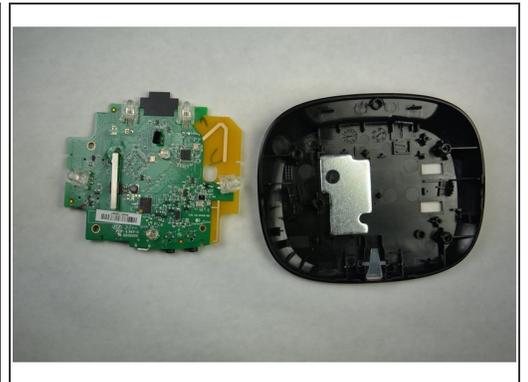

- From the yellow corner, pry the circuit board from the housing..

Step 6

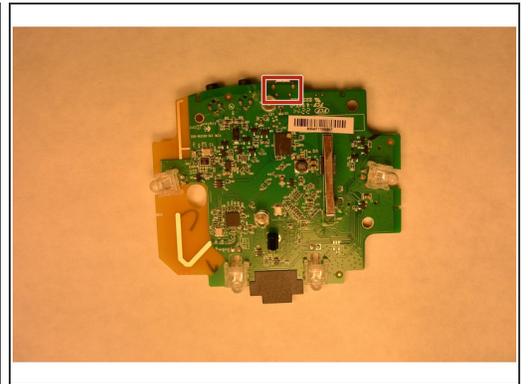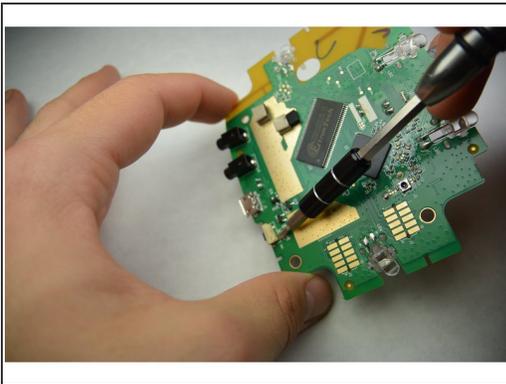

- Locate the defective reset button.
- Turn the board around to expose the reset solder.
- Using soldering iron, remove solder and reset button. Replace reset button and solder.

To reassemble your device, follow these instructions in reverse order.