



# Hamilton Beach 70740 Mixing blade Replacement

Written By: David Gedeon



---

## INTRODUCTION

If your blades are broken , or don't lock correctly to the bowl, use this guide to easily replace them.

---



### PARTS:

- [Chop/Mix Blade, Black - 70670 \(Part # 990049101\)](#) (1)
-

## Step 1 — Mixing blade



- Use your hands to remove the lid by lifting straight up.

## Step 2



- Grasp the plastic part of the blade and lift straight up to remove.

To reassemble your device, follow these instructions in reverse order.