




Dell Inspiron 600m Battery Replacement

Take out the battery of your laptop, required...

Written By: Taylor Woods

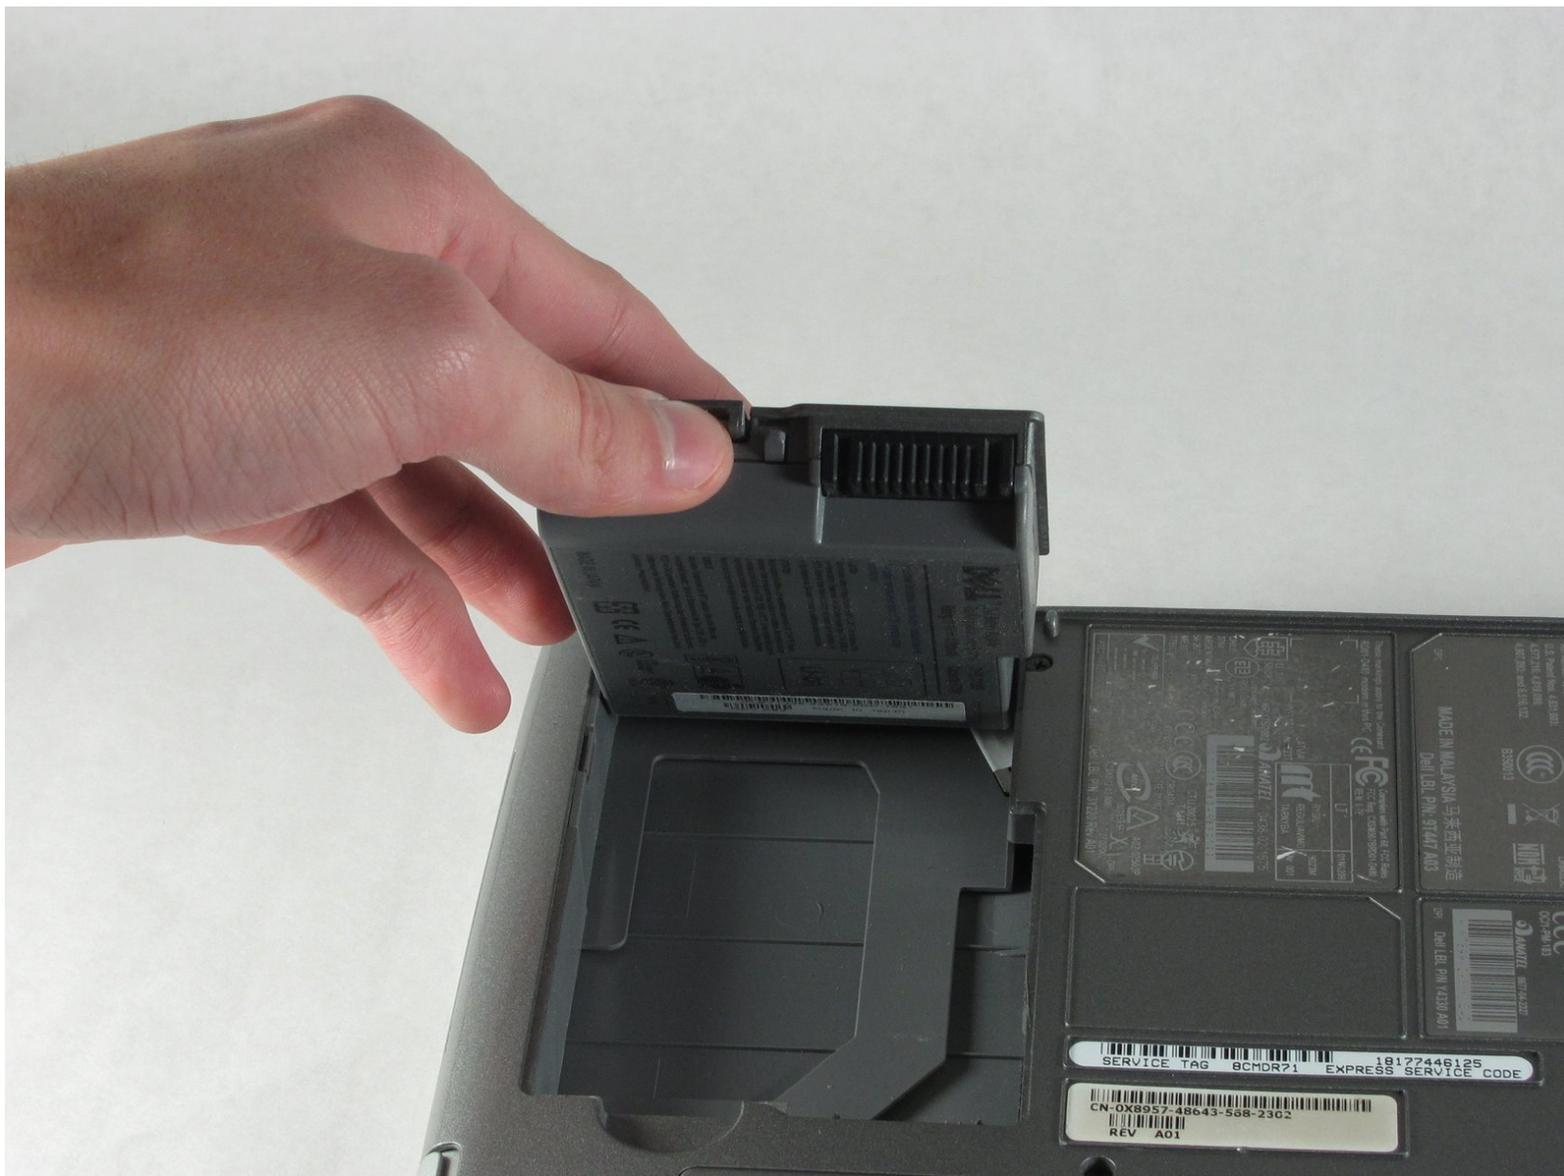

INTRODUCTION

Take out the battery of your laptop, required before any other disassembly.

Step 1 — Battery



- Flip laptop upside down and locate the battery as shown in the images.
- Push in the tab on the battery and lift up. The battery should detach very easily.

To reassemble your device, follow these instructions in reverse order.