


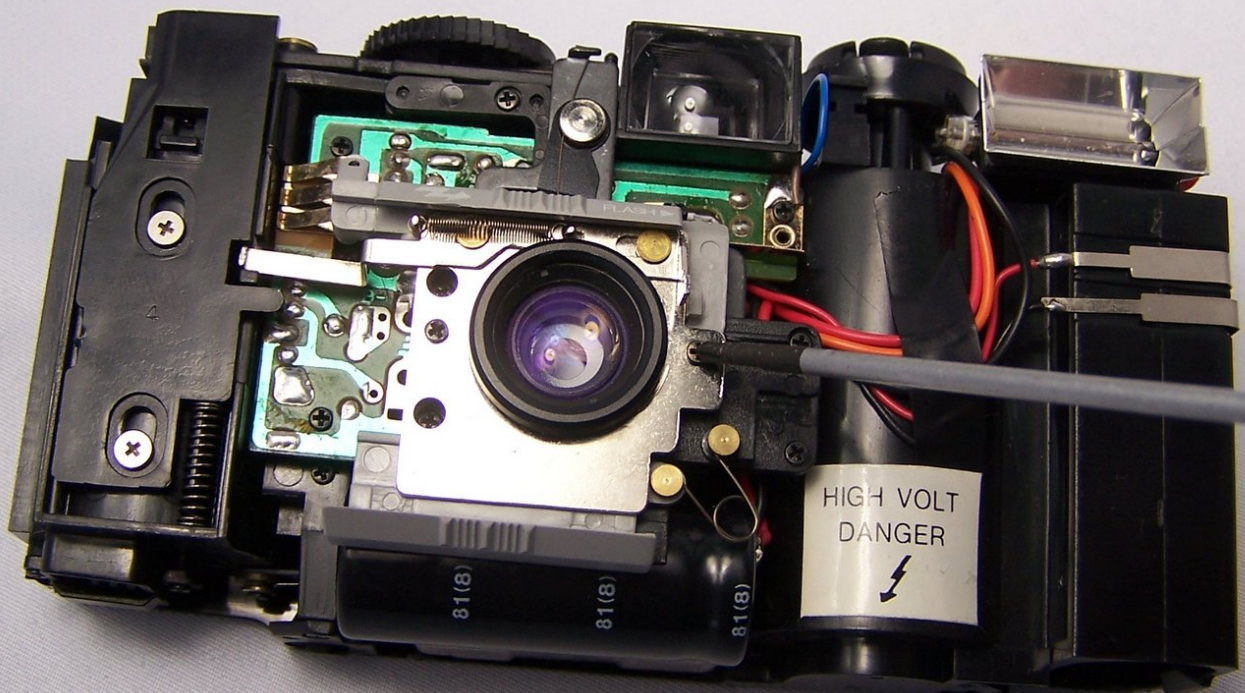

Kodak S100 EF Flash Replacement

This will instruct the repair of the flash for the Kodak S100 EF.

Written By: Nick



INTRODUCTION


To start, the Front Cover Teardown guide must be used. Later, soldering guides will be used.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [Soldering Workstation](#) (1)
-

Step 1 — Front Cover

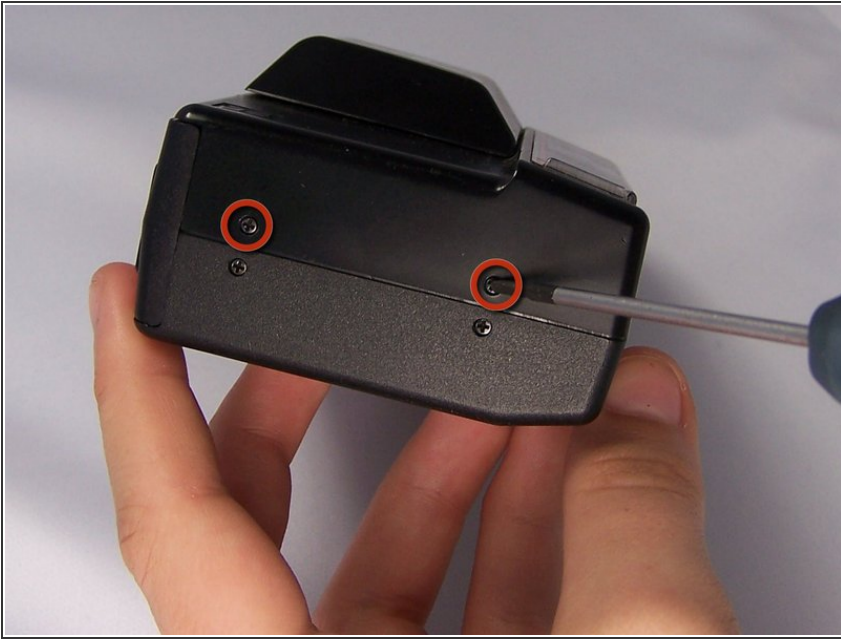


- ① Have the camera facing upwards and the flash closest to you.
- Unscrew the two 6.2 mm Phillips screws on the top half of the camera.

Step 2




- ① Flip the camera over to the other side-with flash farthest from you.
- Unscrew top two 6.2mm Phillips screws on this side.

Step 3

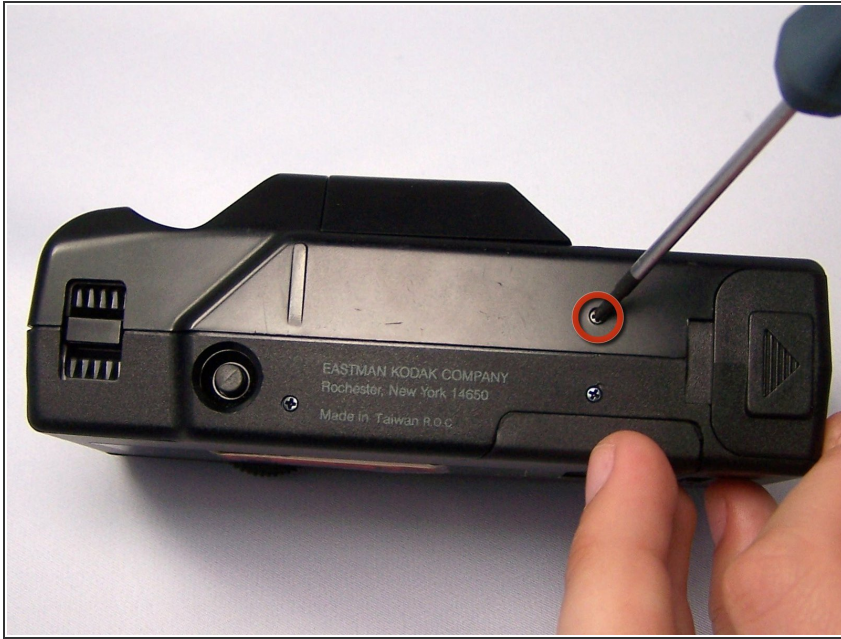

- ❗ Turn the camera so the bottom is facing up with the front-facing away.
- Unscrew the 6.2mm Phillips screw on the top right.
- The front cover is now unscrewed and should be lifted evenly and removed.

Step 4 — Flash

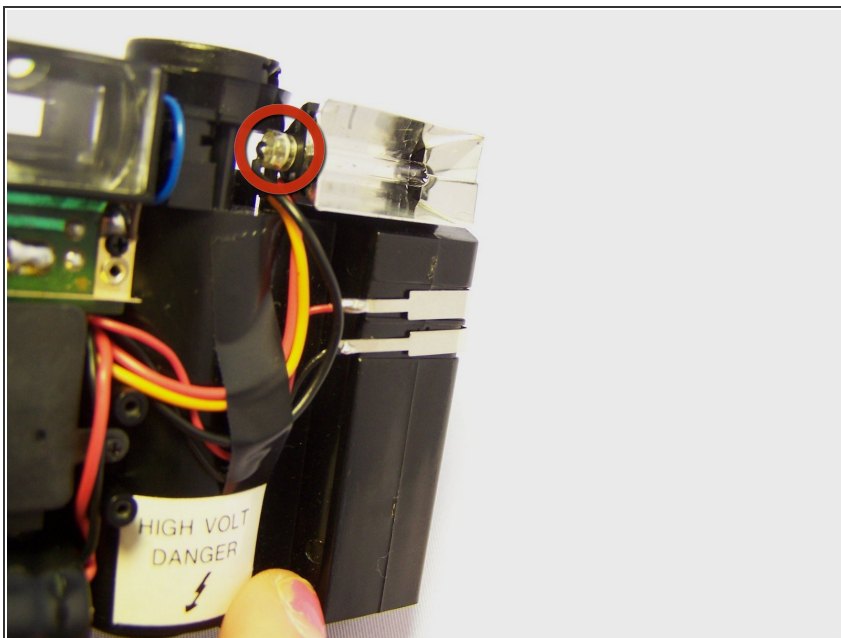

- Once the front cover is off, desolder the connections at both ends of the flash.
- If unfamiliar with soldering, refer to the guide [How To Solder and Desolder Connections](#)

To reassemble your device, follow these instructions in reverse order.