



Nook Tablet Screen Bezel Replacement

Replace the screen bezel of your Nook Tablet.

Written By: Jacob Metzinger



 
INTRODUCTION

Use this guide to replace the screen bezel of the Nook Tablet. Removing this plastic frame is a prerequisite for accessing most of the Nook's internal components.

TOOLS:


- [T5 Torx Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Screen Bezel

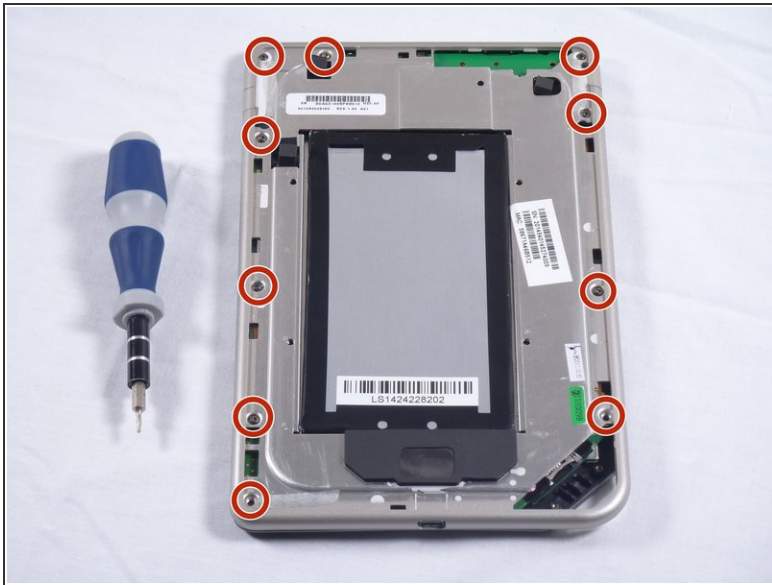

- Remove the ten T5 screws from around the edges of the silver midframe.

 Step 2

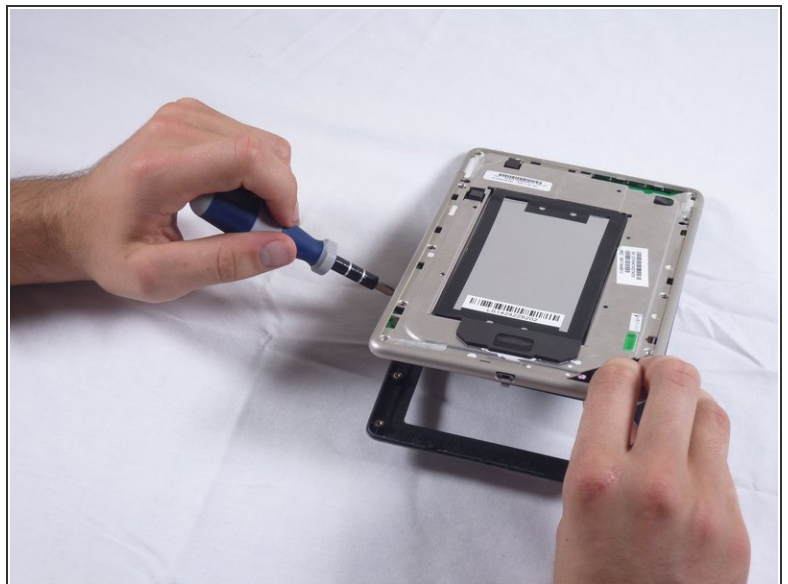

- Using a spudger or plastic opening tool, carefully pry the screen bezel away from the silver midframe.

To reassemble your device, follow these instructions in reverse order.