


Nintendo Wii U Motherboard Replacement

The motherboard is an essential, key component...

Written By: Emily Vasquez

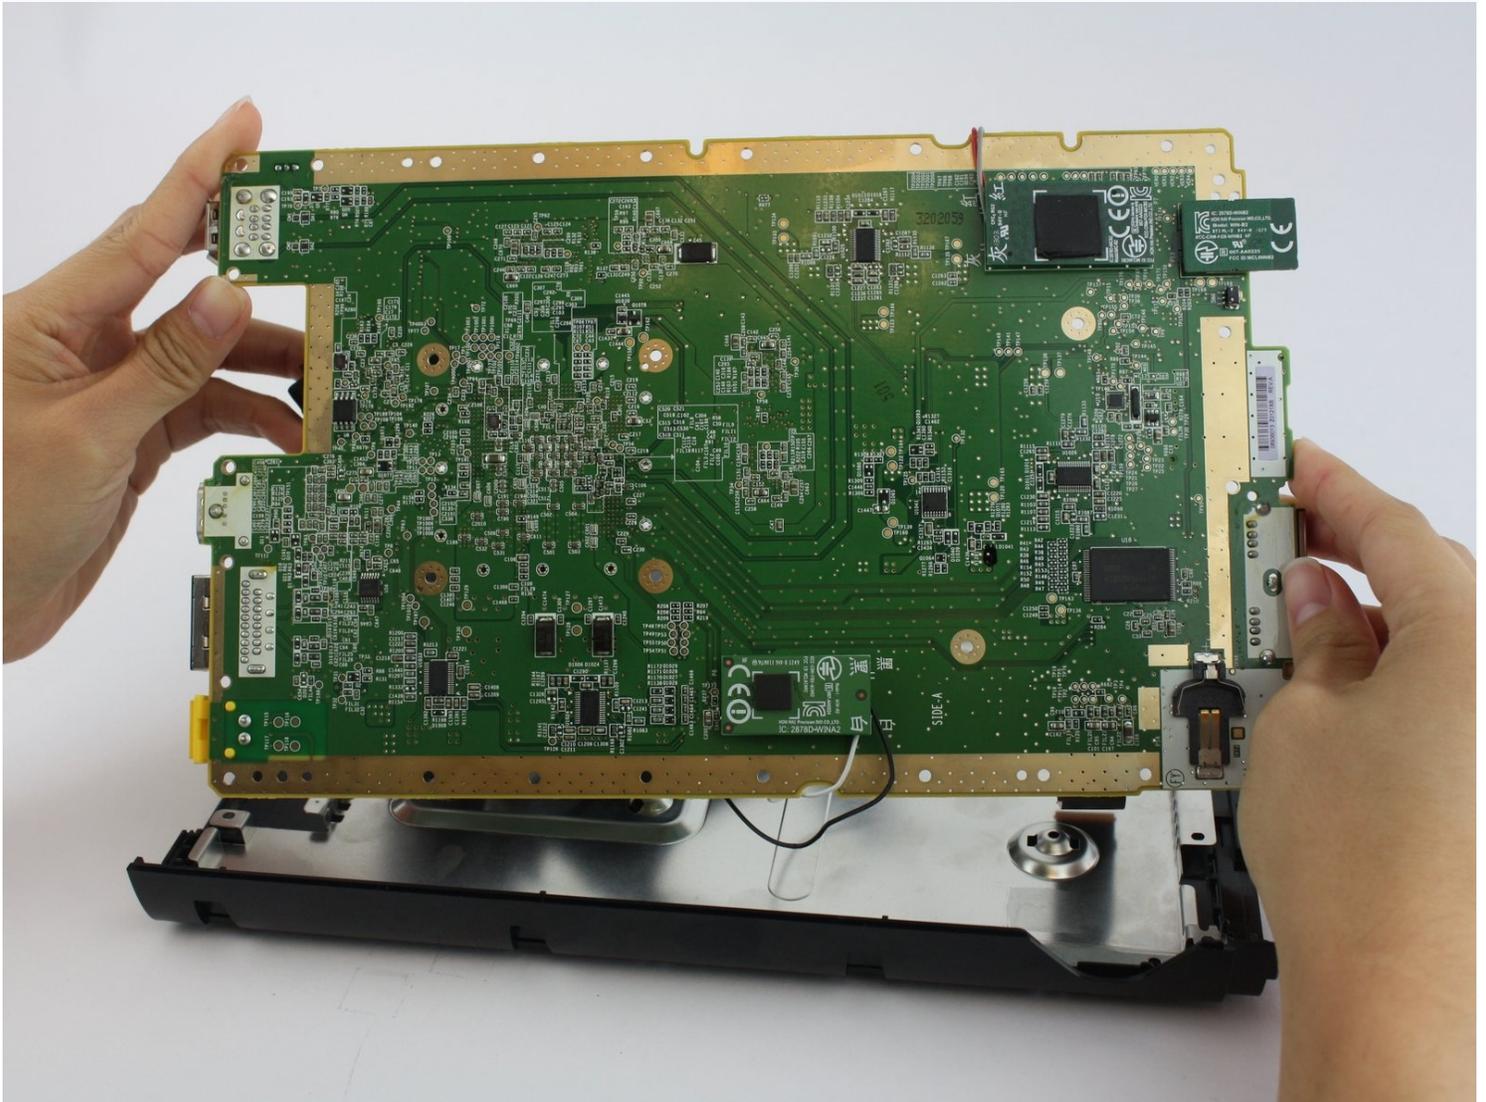

INTRODUCTION

The motherboard is an essential, key component that gaming consoles revolve around. If troubleshooting does not help your Wii U and you are in need of a motherboard replacement, this guide will easily walk you through the process.

TOOLS:

Spudger (1)
Phillips #0 Screwdriver (1)
Phillips #00 Screwdriver (1)
Phillips #1 Screwdriver (1)
Tri-point Y0 Screwdriver (1)
Y1 Tri-point Screwdriver (1)

PARTS:

Nintendo Wii U Faceplate (1)
Nintendo Wii U Motherboard & Paired Optical Drive (1)
Nintendo Wii U Heat Sink (1)

Step 1 — Console Outer Case




- With the bottom of the console facing up, remove the following 6 screws hidden underneath the white square stickers:
 - Three 5.1mm Phillips #000 screws
 - Two 6.1mm Tri-wing Y0 screws
 - One 13.2mm Tri-wing Y1 screw

Step 2




- Rotate the console 180 degrees so that the exhaust vents are facing you.
- Remove the two 7.1mm Phillips #00 screws.

Step 3

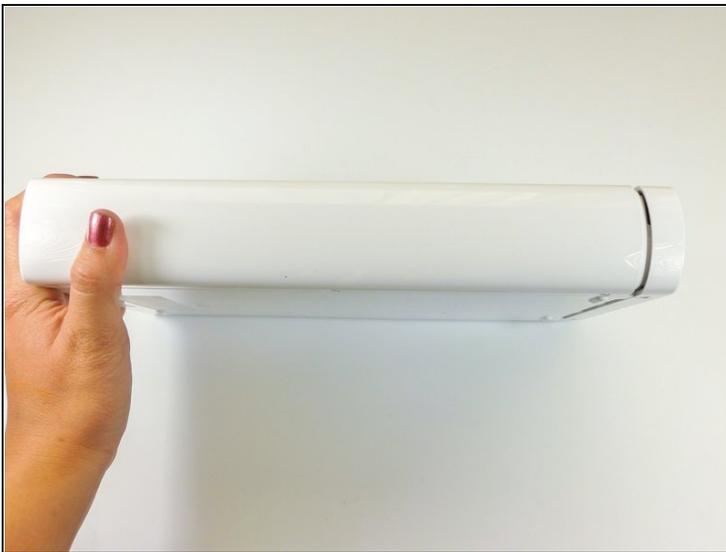

- On the side opposite of the exhaust vents, slide the cover faceplate towards the back of the console and pull upwards to release it.

Step 4

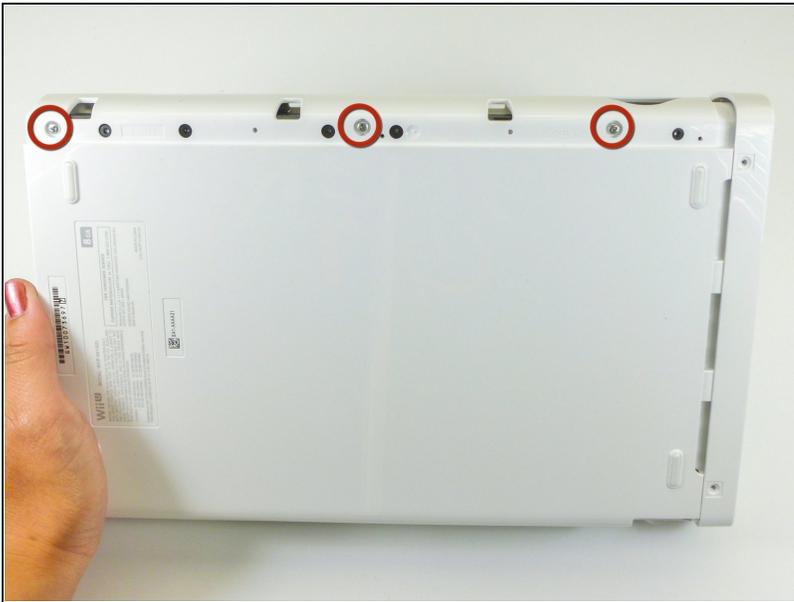

- On the bottom of the console beneath the previously removed faceplate, remove the three 13.2mm Tri-wing Y1 screws.

Step 5



- On the back of the console, lift up and release the main top cover.

Step 6 — Front Faceplate




- Rotate the device so that the front plate is facing you.
- On each side of the console, remove the 3.5mm Phillips #0 screw connecting the DVD drive to the faceplate.

Step 7



- Rotate the device so that the front plate is on the right side and the ribbon cable is visible.
- The ribbon cable is connected to the system by a latch which holds in the blue tab. Flip this latch up to unlock it.
- Lift up on the blue tab to release the ribbon cable.

Step 8

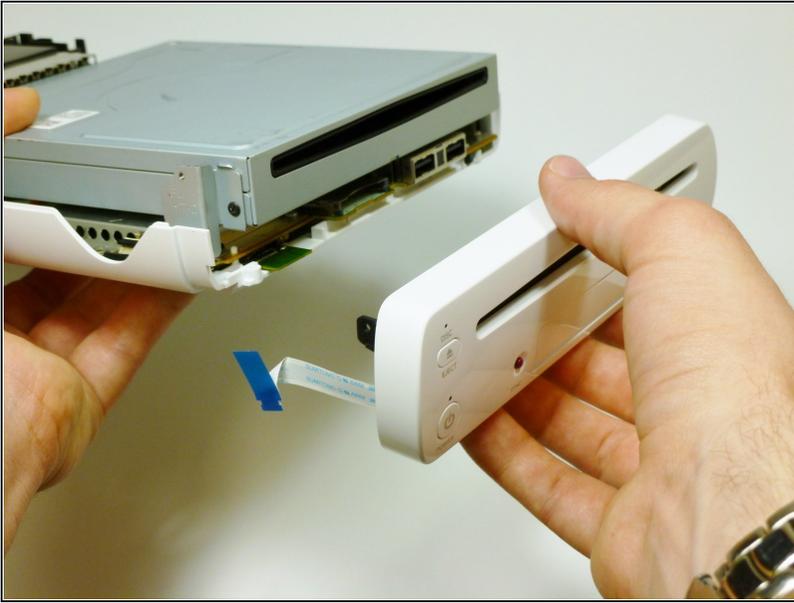


- Remove the front faceplate.

Step 9 — DVD Drive



- On each side of the DVD drive, remove the two 4.6mm Phillips #0 mounting screws.

Step 10

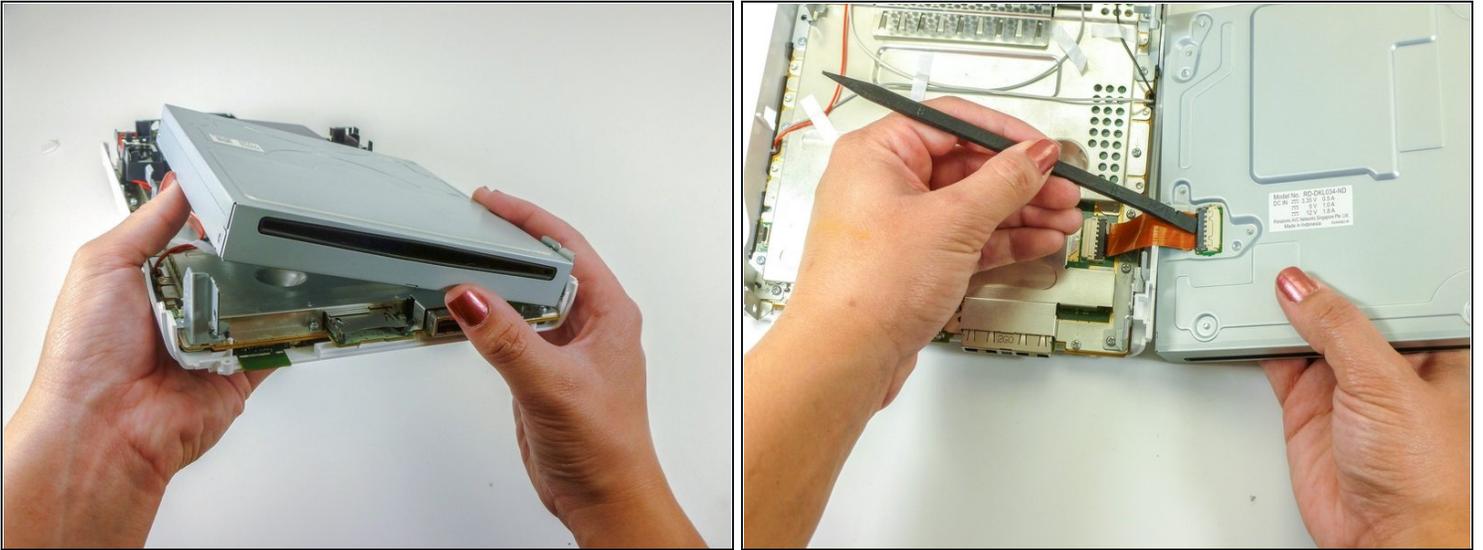


- Rotate the device so that the disc drive slot is visible.

⚠ A ribbon cable is attached to the bottom right side of the disc drive. The ribbon cable can rip if it isn't removed properly.



- Lift the disc drive out of the mount and turn over to the right so it lies like a book.
- Use a spudger to release the ribbon cable.

Step 11

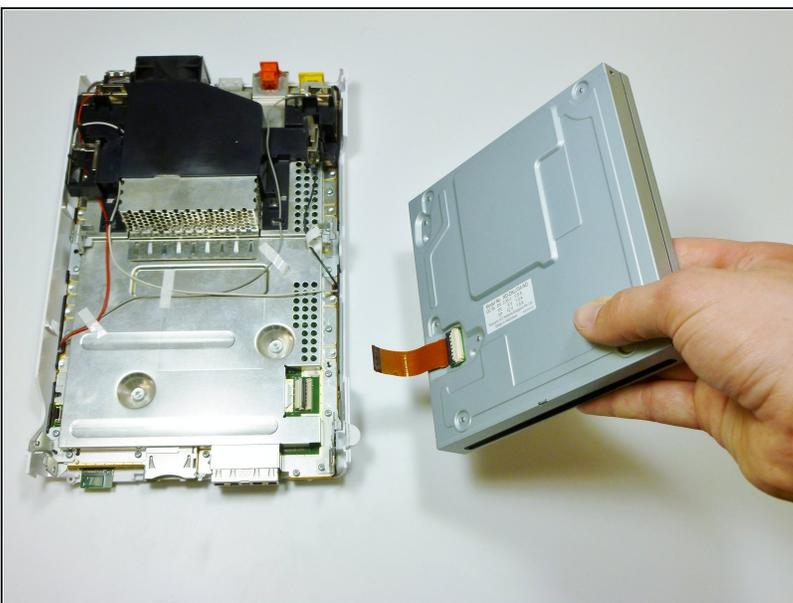




- Remove the disc drive.

Step 12 — Motherboard

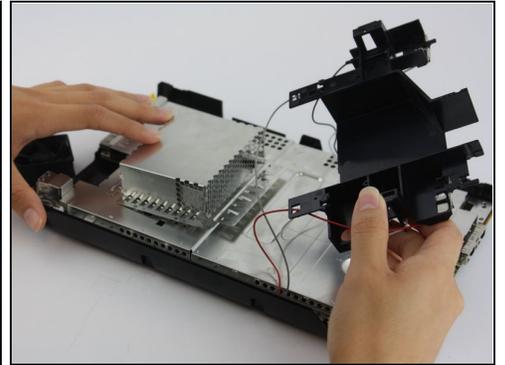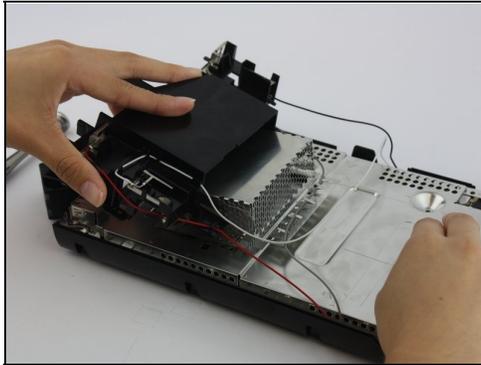



- Remove the black plastic shielding by unscrewing connecting screws with a Phillip's Head screwdriver.
- ⓘ You will have to carefully adjust the antenna cables out of the way in order to proceed comfortably.

Step 13

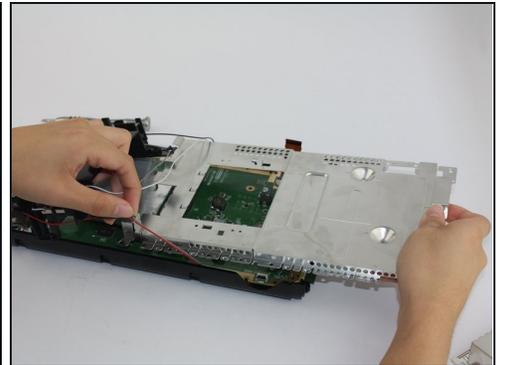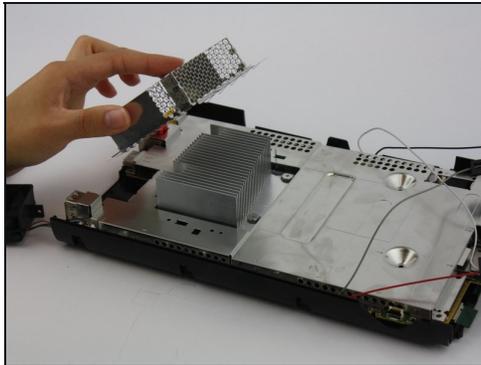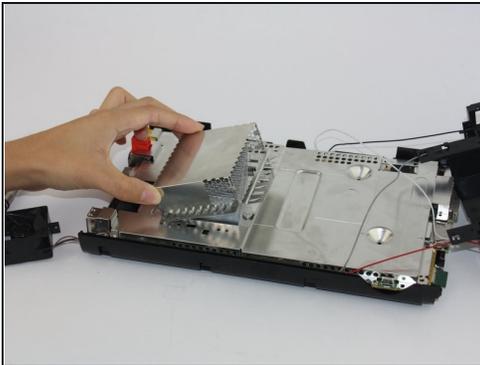

- The metal cap does not require unscrewing and should lift up with ease.
- Unscrew all the screws that outline the perimeter of the board using a Phillips Head (PH1) screwdriver.
- Remove the silver shielding plate once all screws are removed. Be careful when pulling it under the affixed antenna cables.

Step 14

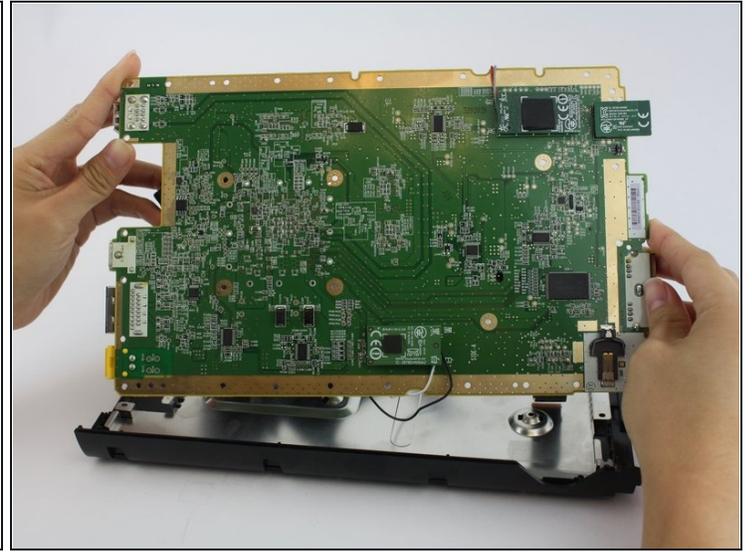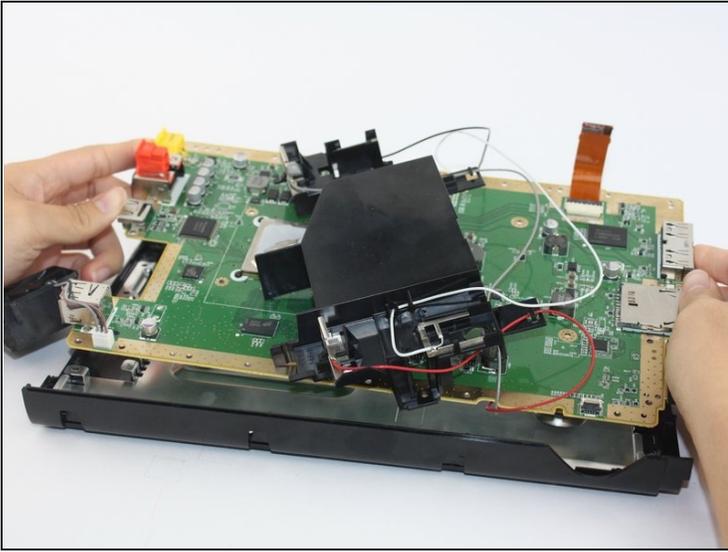

- At this point, the motherboard should easily separate from the lower tray.

To reassemble your device, follow these instructions in reverse order.