



Canon PowerShot SD400 Camera Case Replacement

Replacing the camera case is a simple installation, and can be performed quickly.

Written By: Yi Huang Ke



INTRODUCTION

This guide will demonstrate how to replace the Camera Case of the Canon PowerShot SD400.

The casing is the plastic outer shell of the camera that protects the interior components from weather and damage. Should the casing become cracked, or otherwise compromised, it is important to replace the casing as soon as possible to prevent other components from being damaged.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Camera Case



- Remove the 6 screws holding the casing in place located on the bottom, left and right sides of the camera using a **Phillips Screwdriver**.

☑ Be sure to save the removed screws to allow for easier reassembly.

Step 2



- Gently separate the camera casing.
 - Once opened, the strap plate and disk pieces will also separate from the camera.

To reassemble your device, follow these instructions in reverse order.