




One Education Infinity:One Speaker Replacement

This guide will demonstrate how to remove the speakers in your One Education Infinity:One laptop.

Written By: Taylor Bratsch

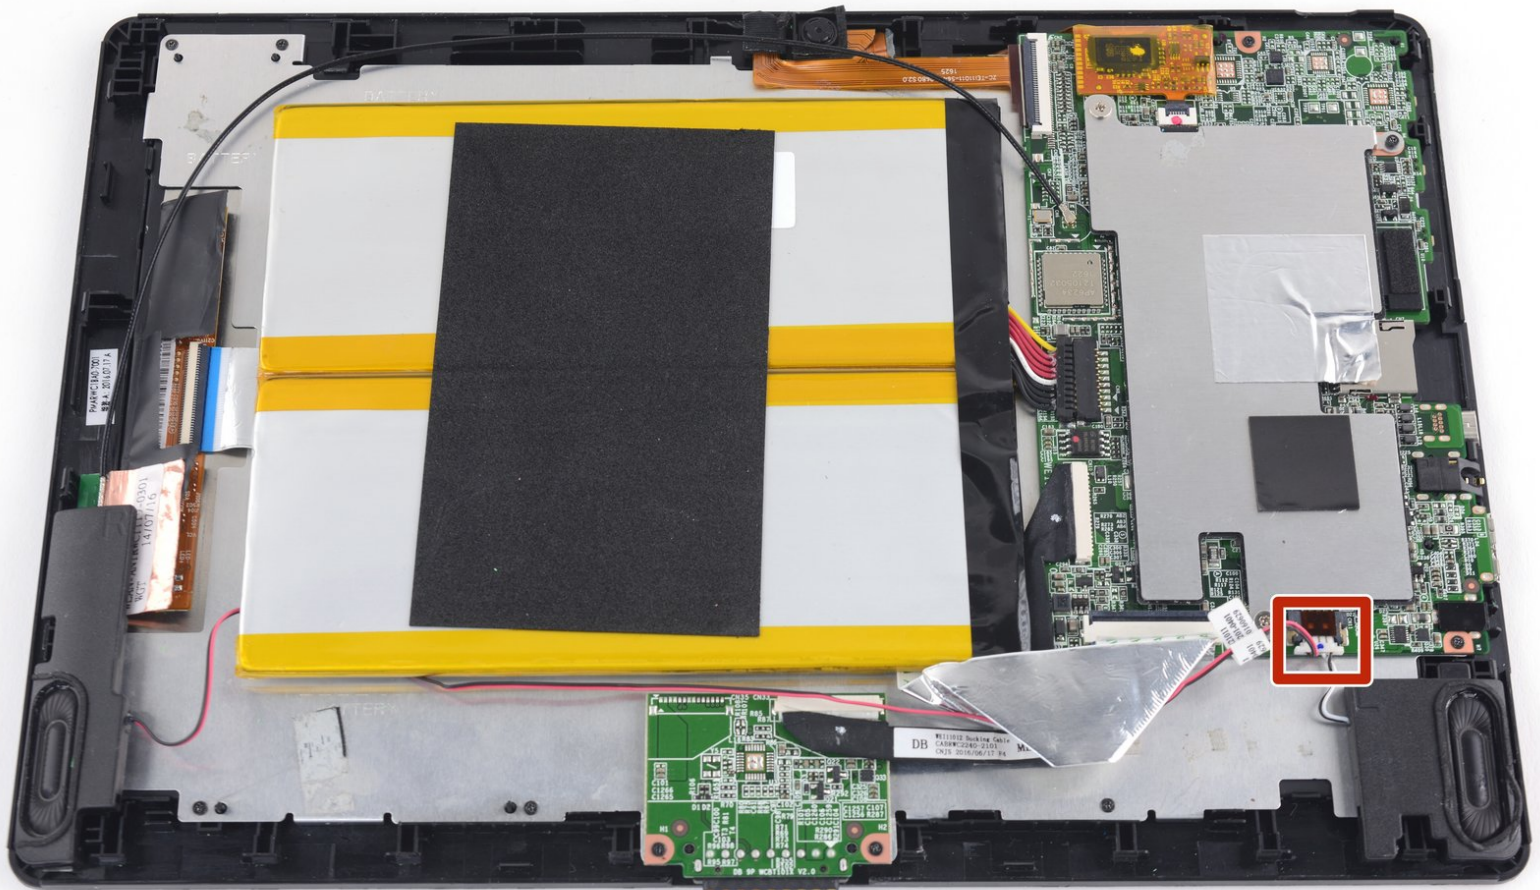

INTRODUCTION

This guide will illustrate how to replace the speakers in the One Education Infinity:One laptop.



TOOLS:


- [Jimmy](#) (1)
 - [Heavy-Duty Spudger](#) (1)
-

Step 1 — Top Case



- Insert a Jimmy or other prying tool into the seam between the screen and back case.
- Trace around the edges until all clips are released.
- Lift the back case away from the tablet.

Step 2 — Speaker

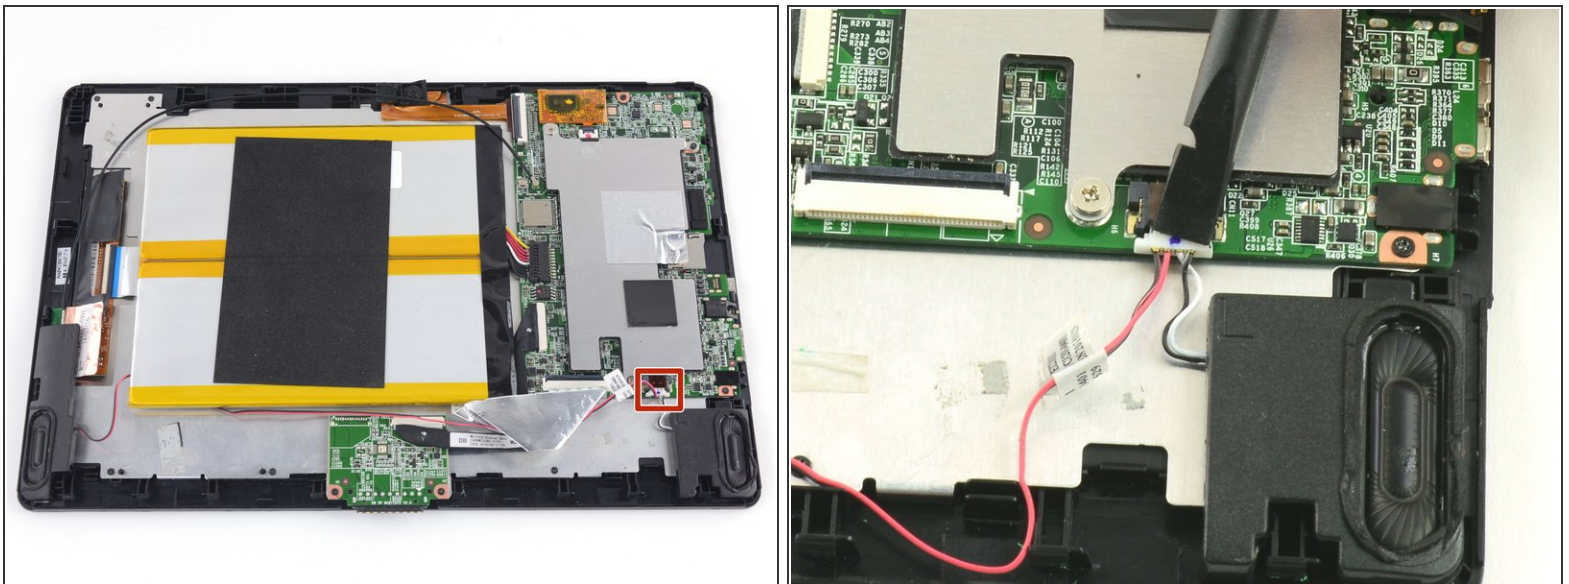

- Use a spudger to release the speaker wires by pushing the bundled cabled connector away from the motherboard.

⚠ Be sure to pull out the white connector instead of the individual wires to avoid damage to the device.

Step 3



- Use a spudger to lift the speakers out of the device.

To reassemble your device, follow these instructions in reverse order.