




Amazon Fire HD 7 (4th Generation) Rear facing camera replacement

Replace faulty or broken rear-camera for your kindle.

Written By: Omir Rosado

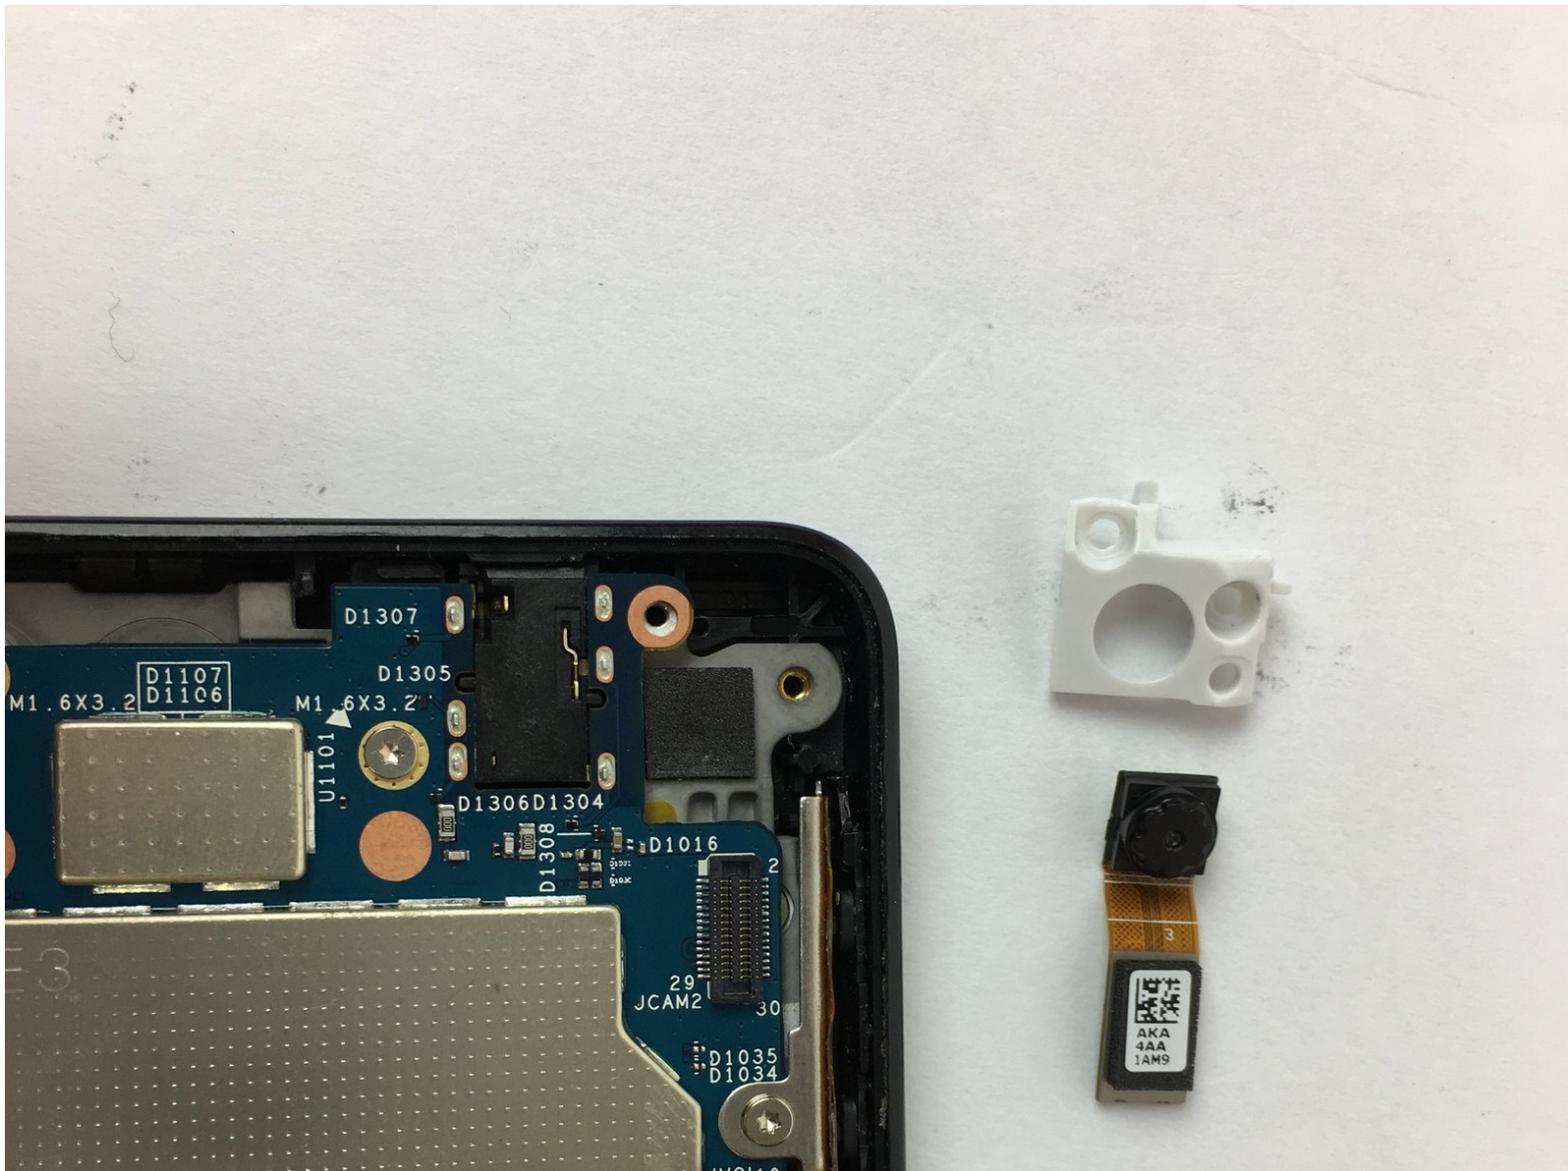

INTRODUCTION

This device has a 2 megapixel Rear-facing camera and this guide will help you locate and replace this part.

TOOLS:

- [T5 Torx Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Rear-facing camera



- Insert the plastic opening tool behind the rear case to free the clips holding the case together.
- Work your way around the device to free all the clips.

Step 2



- There are an additional nine clips surrounding the battery area. Place the plastic tool into the clips and lift to disconnect them.
- Once all clips have been released, the back case can be pulled free to reveal the inside of the device.

Step 3



- Use a nylon spudger to unclip the connection from the motherboard.

Step 4



- Unscrew the two screws using a T5 screwdriver.
- ⚠ The camera lens are sensitive. Be careful when removing and handling camera.
- Once freed from the screws, gently lift and remove the camera.

To reassemble your device, follow these instructions in reverse order.