




Magnavox MWD200F Disk Drive Replacement

This guide will instruct you to remove the Magnavox MWD200F disc drive for replacement, repair or cleaning.

Written By: Taryn

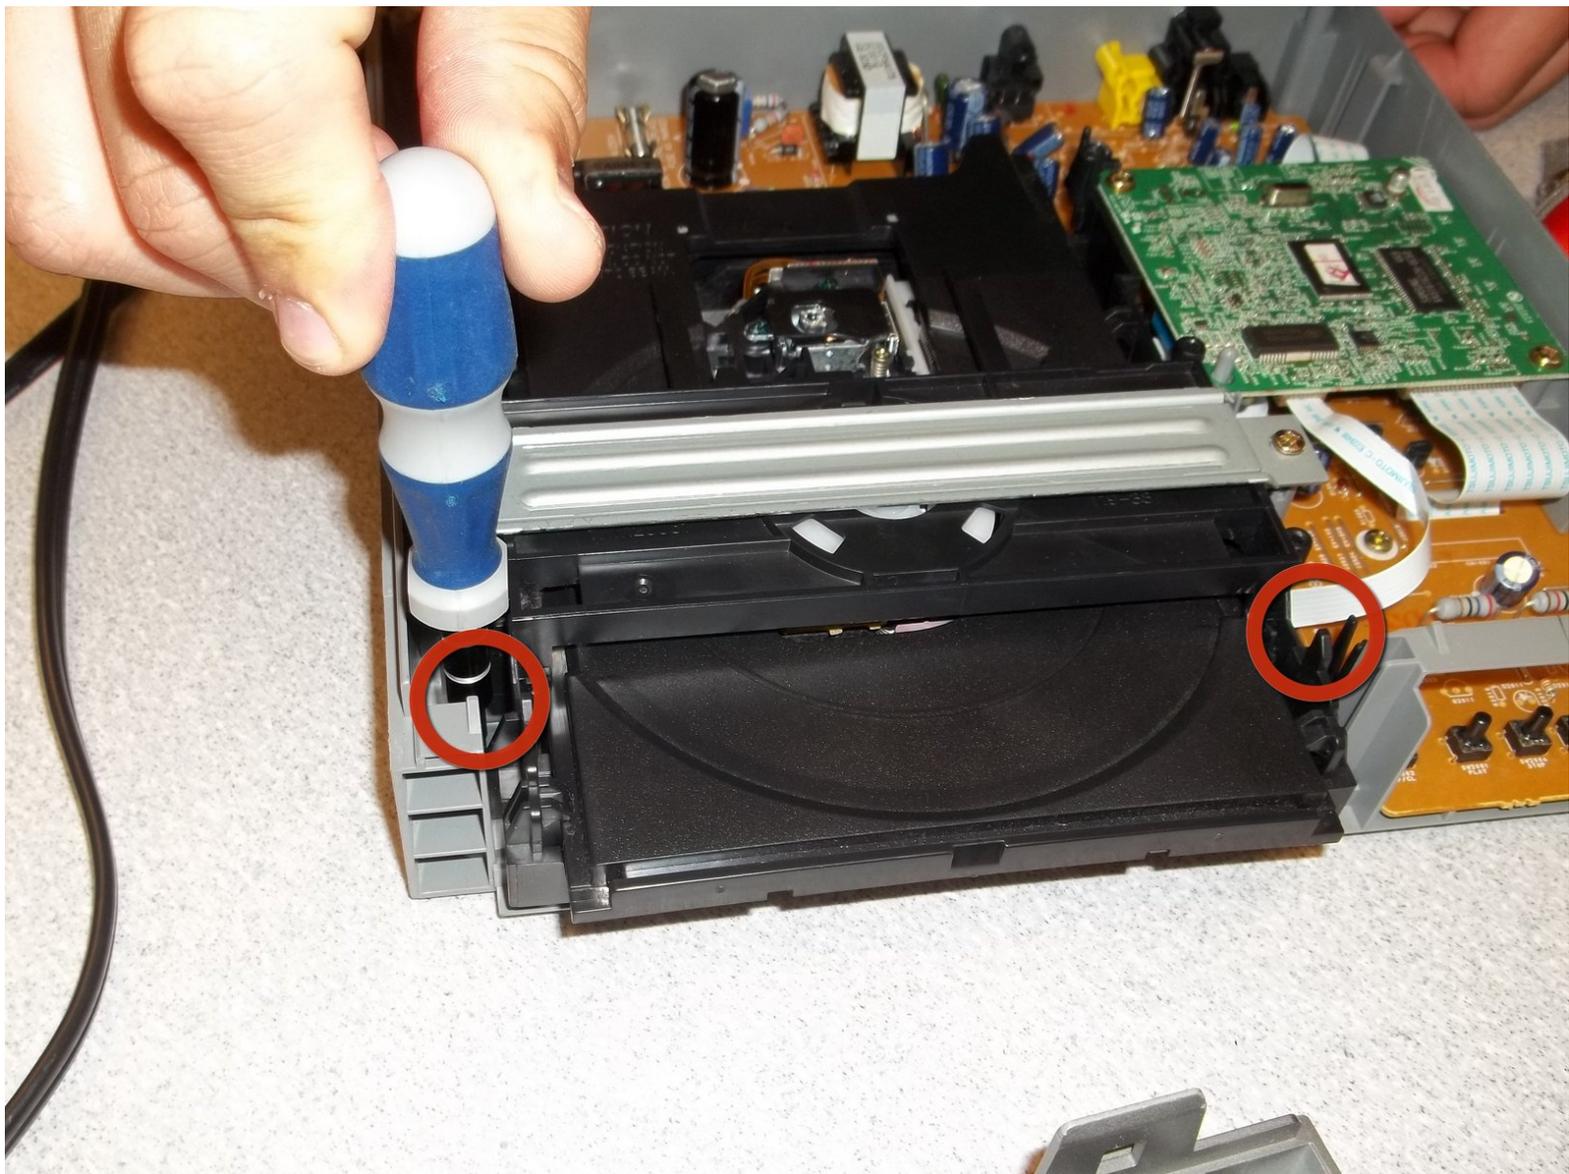

 **TOOLS:**

- [Phillips #2 Screwdriver](#) (1)

Step 1 — Faceplate




- Use a Phillips #2 screwdriver to remove the two screws on the top of the device toward the back.

Step 2




- Remove the plastic cover by lifting up the back and pulling it away from the faceplate.

Step 3

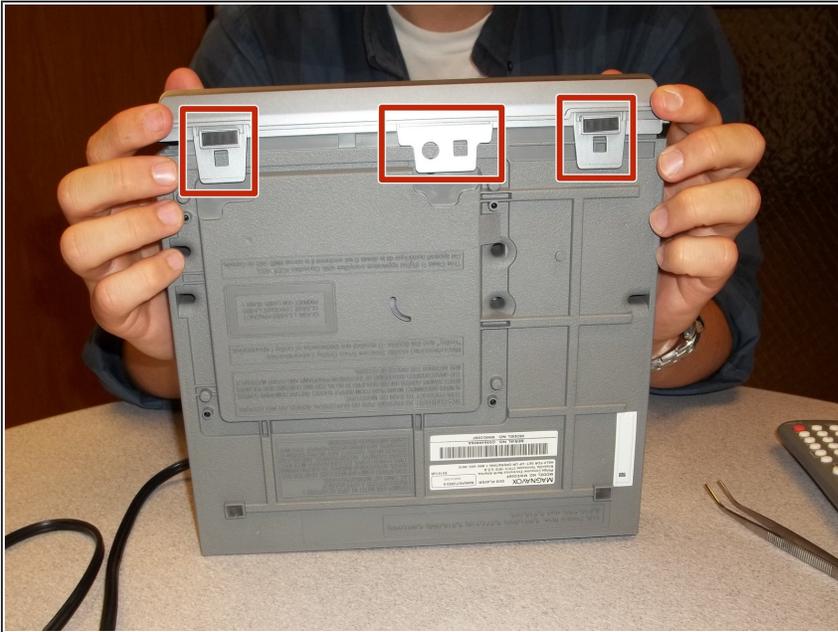



- Unclip the three latches on the bottom of the device.

Step 4

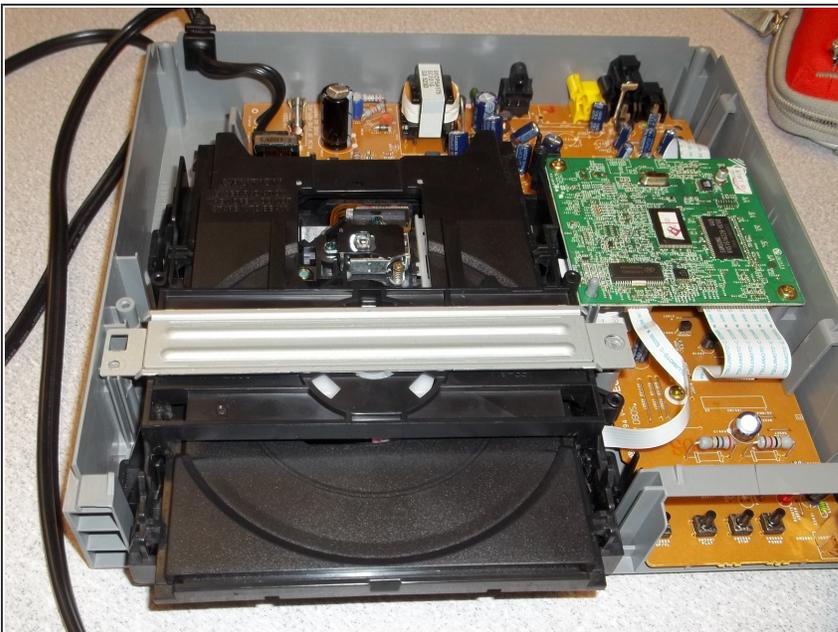


- Pull the faceplate off.

Step 5 — Disk Drive

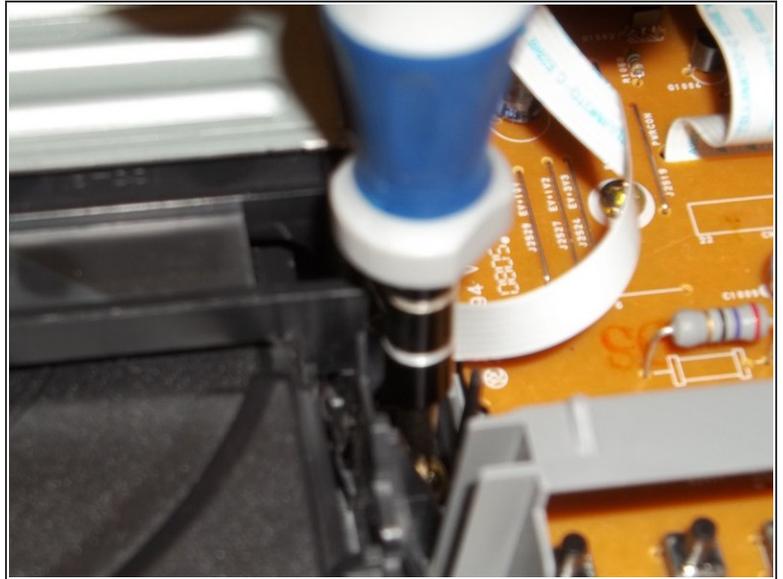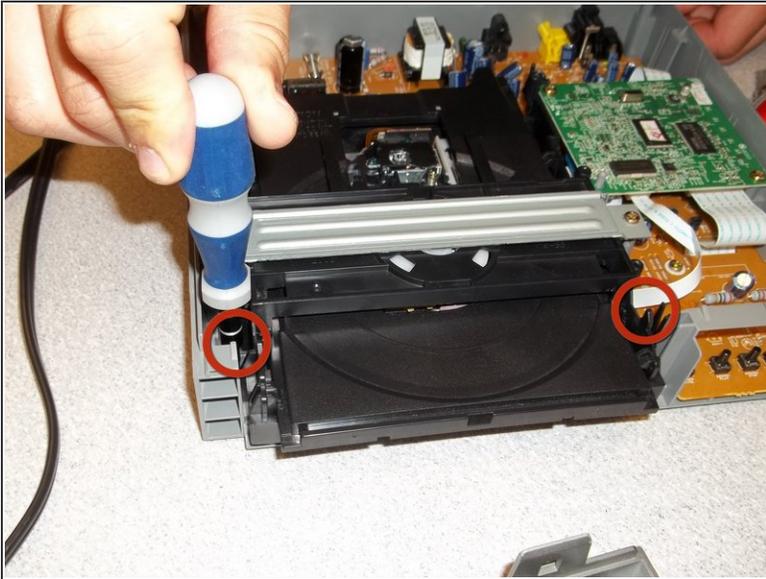


- Use a Phillips #2 screwdriver to remove the two screws at the base of the disk drive.

Step 6

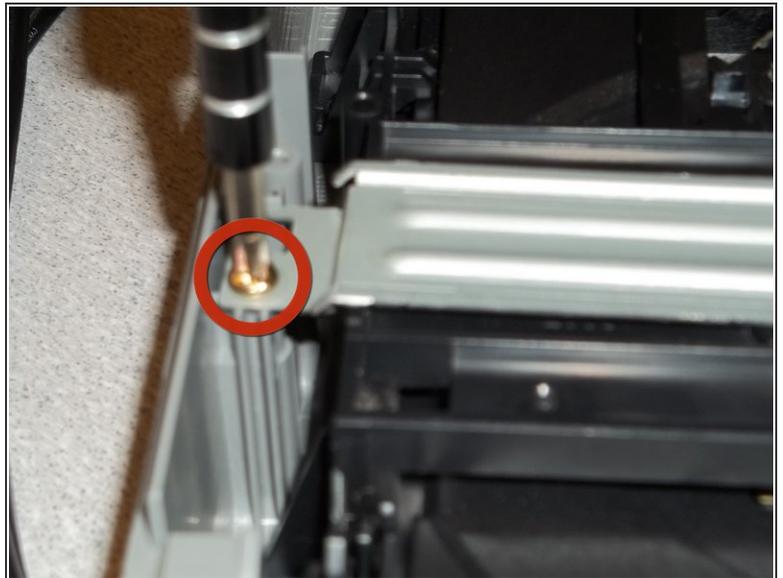


- Use the screwdriver to remove two screws on either side of the silver security bar.

Step 7

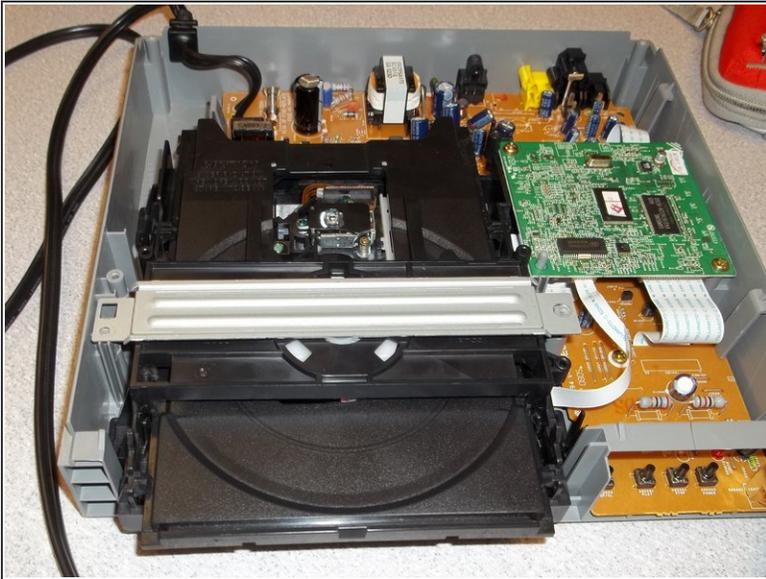

- Pull out the silver security bar and set aside.

Step 8

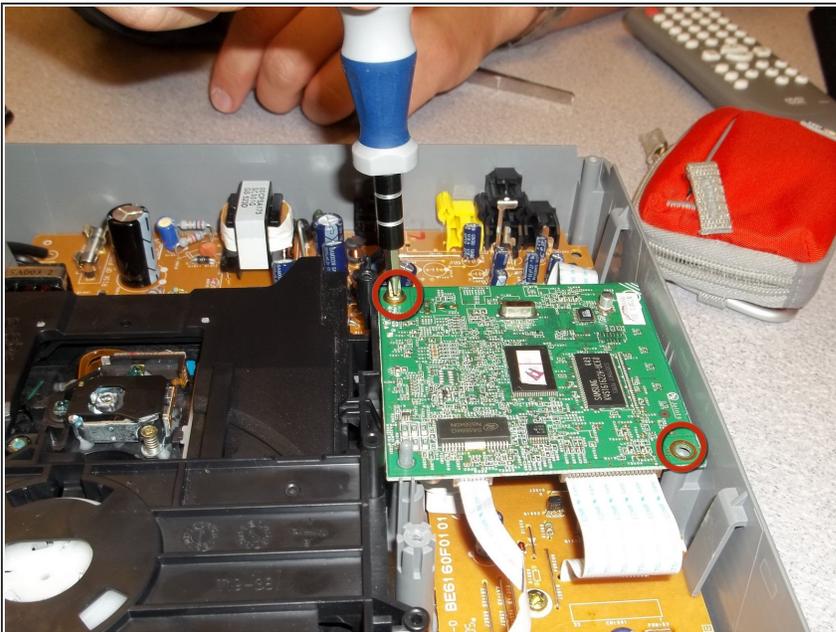

- Take out the two screws on either side of the green circuit board.

Step 9




- Carefully lift the board just enough to remove the disk drive.

Step 10



- Remove the two screws at the back of the disk drive.

Step 11

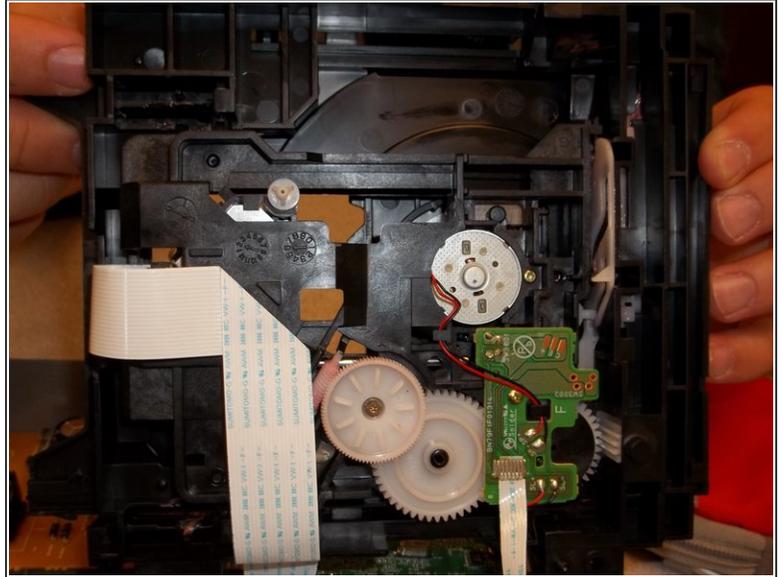

- Gently lift the disk drive out of the DVD player.
- ⓘ The disk drive is still attached but you are now able to get to underneath it for cleaning and maintenance.

To reassemble your device, follow these instructions in reverse order.