

Sony Vaio SVE111B11L Screen Replacement

This guide shows how to remove the screen of a...

Written By: John Noll



INTRODUCTION

This guide shows how to remove the screen of a Sony Vaio SVE111B11L. This repair may be needed if the screen melts or cracks. To replace the screen follow the guide in reverse order.

√ TOOLS:

Phillips #0 Screwdriver (1) iFixit Opening Tool (1)

Step 1 — Battery



- A Remove the charging adaptor. Some charge may still be in the battery or computer. DO NOT touch connectors or copper yellow connector.
- Locate the battery on the bottom of the computer.
- Flip the computer so that the battery faces you.




 Locate the two latches with the words "lock" and "release" on them.

Step 3



 Push the latches towards each other and lift the battery to remove it.

Step 4 — **Keyboard Assembly**

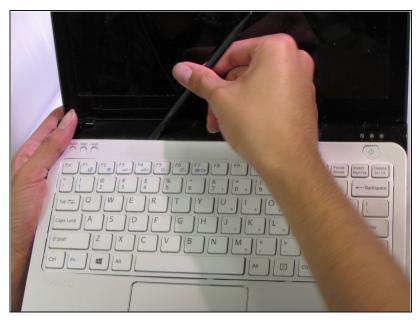

- Remove the memory door on the bottom of the computer to access the screw for the keyboard.
- i The screws for the memory door do not come out.

Step 5



 Remove the 6.7 mm screw that holds the keyboard assembly in place.




- i Be careful not to break the keyboard wire connection.
- Slide the wires out, away from the solder connections.
- Flip the computer over and open it.

Step 7





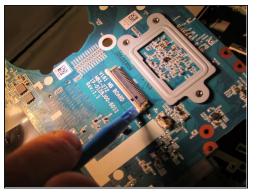

- Gently pry the keyboard assembly from the screen side, using an opening tool. You will need
 to lift the keyboard about two inches.
- Using an opening tool, gently pull out and slightly up on the connector clip.
- Gently lift the keyboard assembly up and out.

Step 8 — Motherboard



- A Remove charging adaptor. Some charge may still be in the battery or computer.
- ⚠ DO NOT touch connectors or copper yellow connector.
- Take the covers on the bottom of the laptop off.

Step 9



- Locate and remove the screws holding the motherboard down.
- Screws: L 4.6mm X D 1.85mm




• Locate the wires and connectors and remove them from the motherboard.


Step 11



Lift the mother board out and safely put it to the side.

Step 12 — Screen

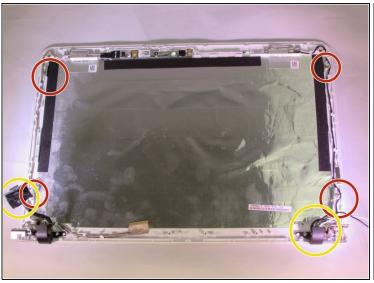


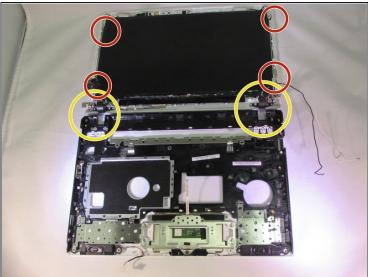

⚠ Remove charging adaptor and battery. Some charge may still be in the battery or computer.


⚠ DO NOT touch connectors or copper yellow connector.

- Locate screws. L 3.35mm X D 1.8mm
- Remove Screws.
- Lay the screen on a hard flat surface.
- Remove hinges and wires for ease of removal.

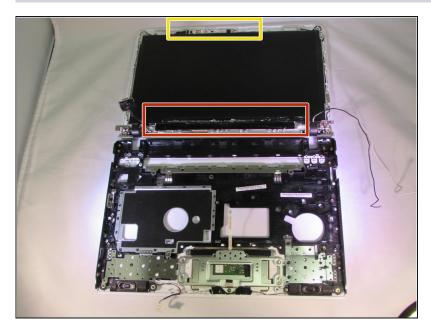

- Gently remove the screen cover.
- Be careful of the camera at the top of the screen.
- Be careful of the seal tape between the cover and the screen.

Step 14

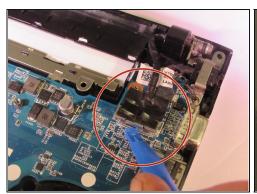





- Locate the wires and connectors.
- Unplug the wires from the connectors.
- Be careful of the yellow tape around the connection.





• Gently lift the screen assembly up and out.

To reassemble your device, follow these instructions in reverse order.