



Asus Eee PC 1201N RAM Replacement

This guide will show you how to replace the RAM in your Asus Eee PC 1201N netbook.

Written By: Trae Mikesell



INTRODUCTION

This guide will walk through the steps to replace the RAM in your device. It does not involve any major disassembly and only requires a screwdriver and plastic opening tool.

TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Battery



- Flip the netbook over.

⚠ Be sure to unplug the netbook and power off the device while working.

Step 2



- Push open both tabs on either side of the battery.



ⓘ The tab on the left will click open and stay in place until you close it.

Step 3



- Pull the tab on the right open, while you remove battery with your other hand.
- ⓘ Pull the battery straight out ensuring that you don't damage any connectors.

Step 4 — RAM

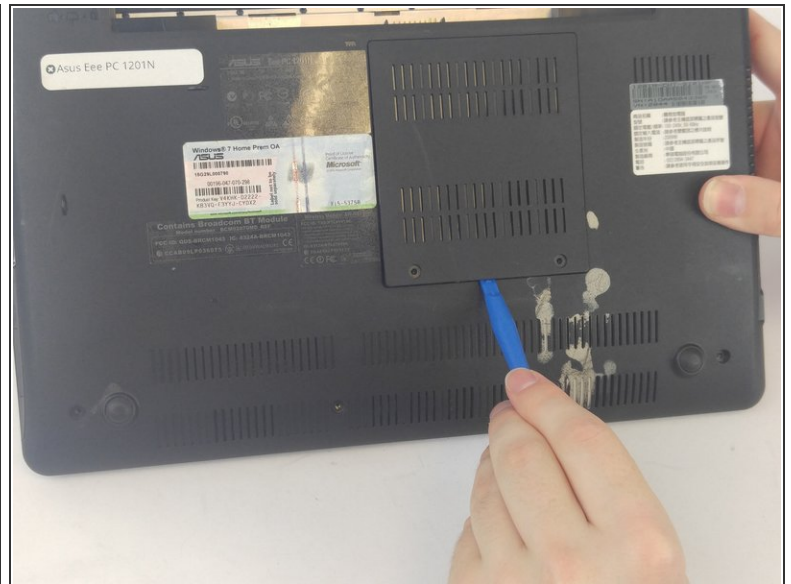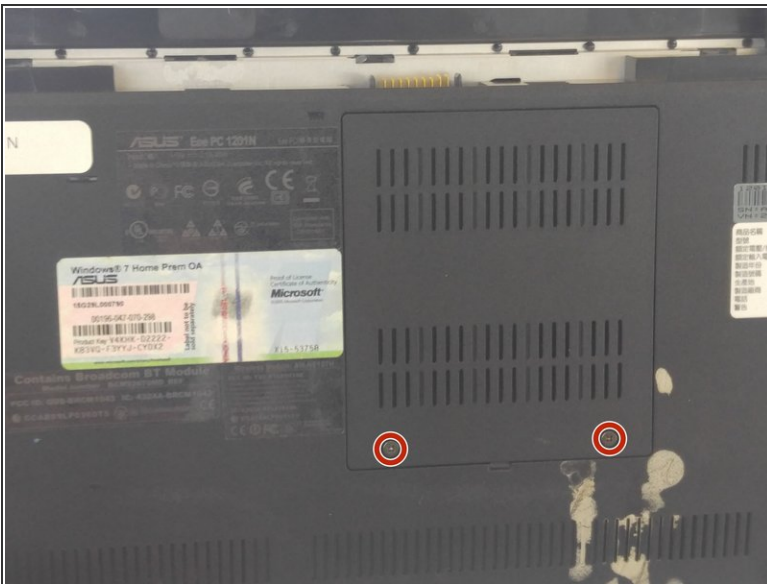

- Remove the two 4.6mm screws using the J0 Phillips head screwdriver.
- Then use the plastic opening tool to open the RAM door.

Step 5



- Push the tabs on the side of the RAM to release.

⚠ Only push the tabs over slightly to ensure you do not break them.

Step 6



- Remove the RAM by pulling it towards you.

To reassemble your device, follow these instructions in reverse order.