



# Sony BDP-BX620 Disk Drive Replacement

In this guide you will learn how to remove the...

Written By: Axel Cruz Jimenez



---

## INTRODUCTION



In this guide you will learn how to remove the disk drive from a Sony BDP-BX620.

---

### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
  - [Tweezers](#) (1)
-

## Step 1 — Outer Cover

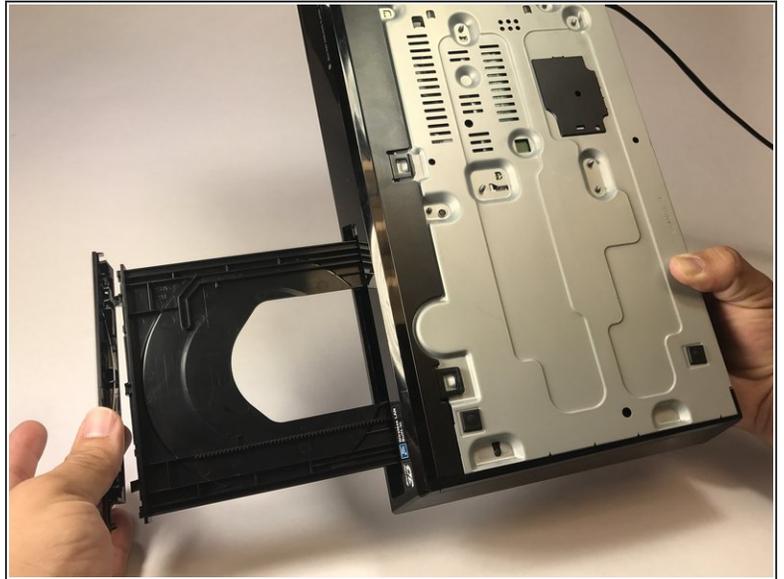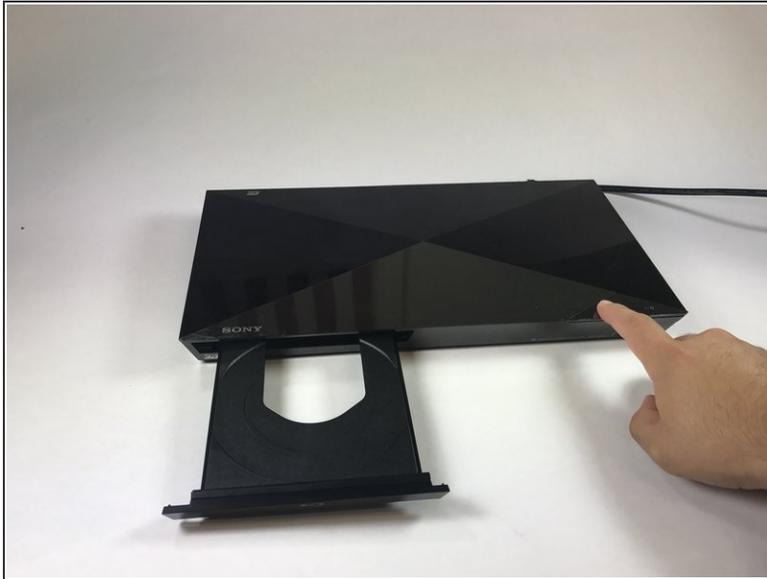

- Power on the device, eject the disk tray, and power off the device.
- Turn the device over.
- Lightly apply downward pressure on the black covering on the disk tray until it comes off.

**⚠ Caution, applying too much pressure can break the black covering.**

## Step 2



- Turn the device around.
  - Using a Phillips screw driver, remove the screws on both ends of the device circled red in the image.
  - Slide the side covers on either side towards the back of the device.
- i** There is a back cover on either side of the device.

## Step 3




**i** This step might require someone to help unclasp the plastic clips.

- Turn the device so that the bottom is facing up.
- In the bottom, unclip the three plastic clips circled in red.
- On either side, unclip the plastic clip circled in red
- Slide the black covering forwards to remove.

**i** All five clips have to be unclamped for the covering to be removed.

**!** Careful not to break the plastic clips when putting it back on.


## Step 4 — Disk Drive

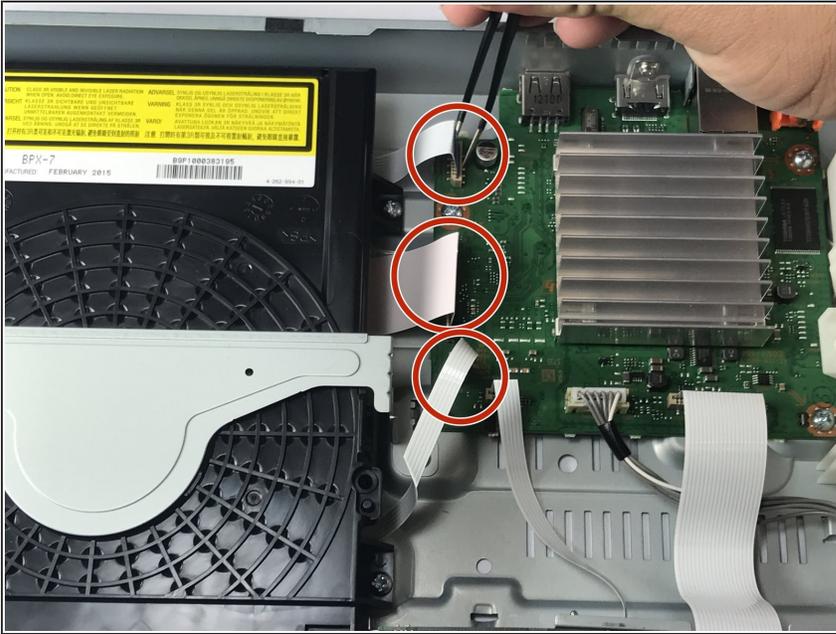

- Remove the no-fuss ribbon cable connectors by gently pulling on them.


⚠ Pulling harshly may break the flat cables.

## Step 5

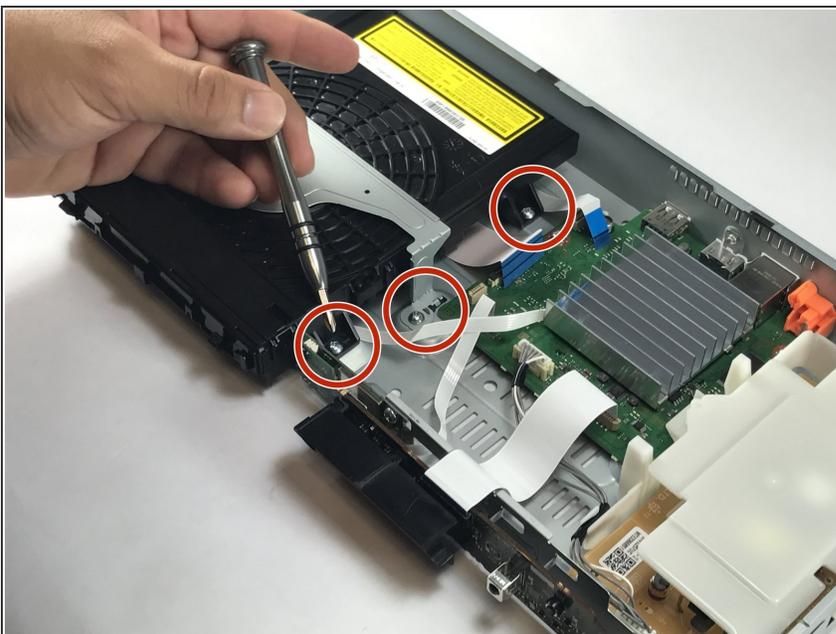

- Using the Phillips screw driver, remove the three screws.

## Step 6

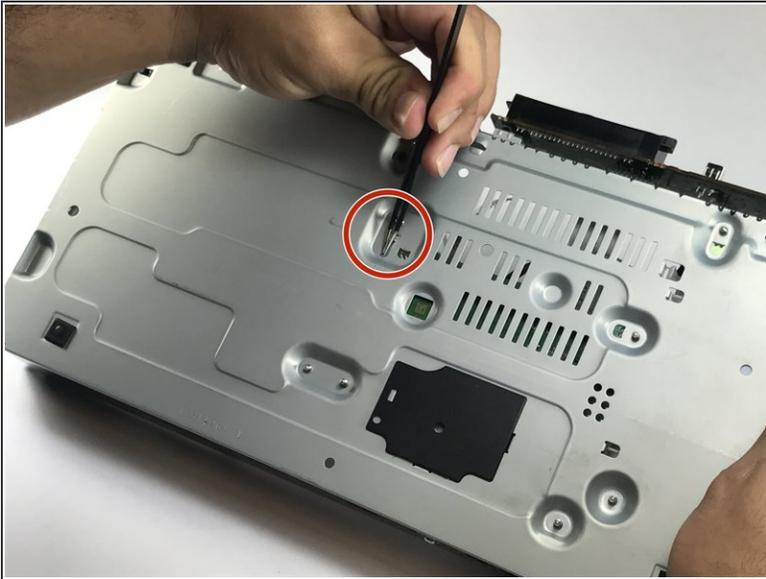

- Turn the device over and use tweezers to push the metal clasp until it comes off.
- Lift the metal brace located over the disk drive and remove the disk drive and the metal brace.

To reassemble your device, follow these instructions in reverse order.