


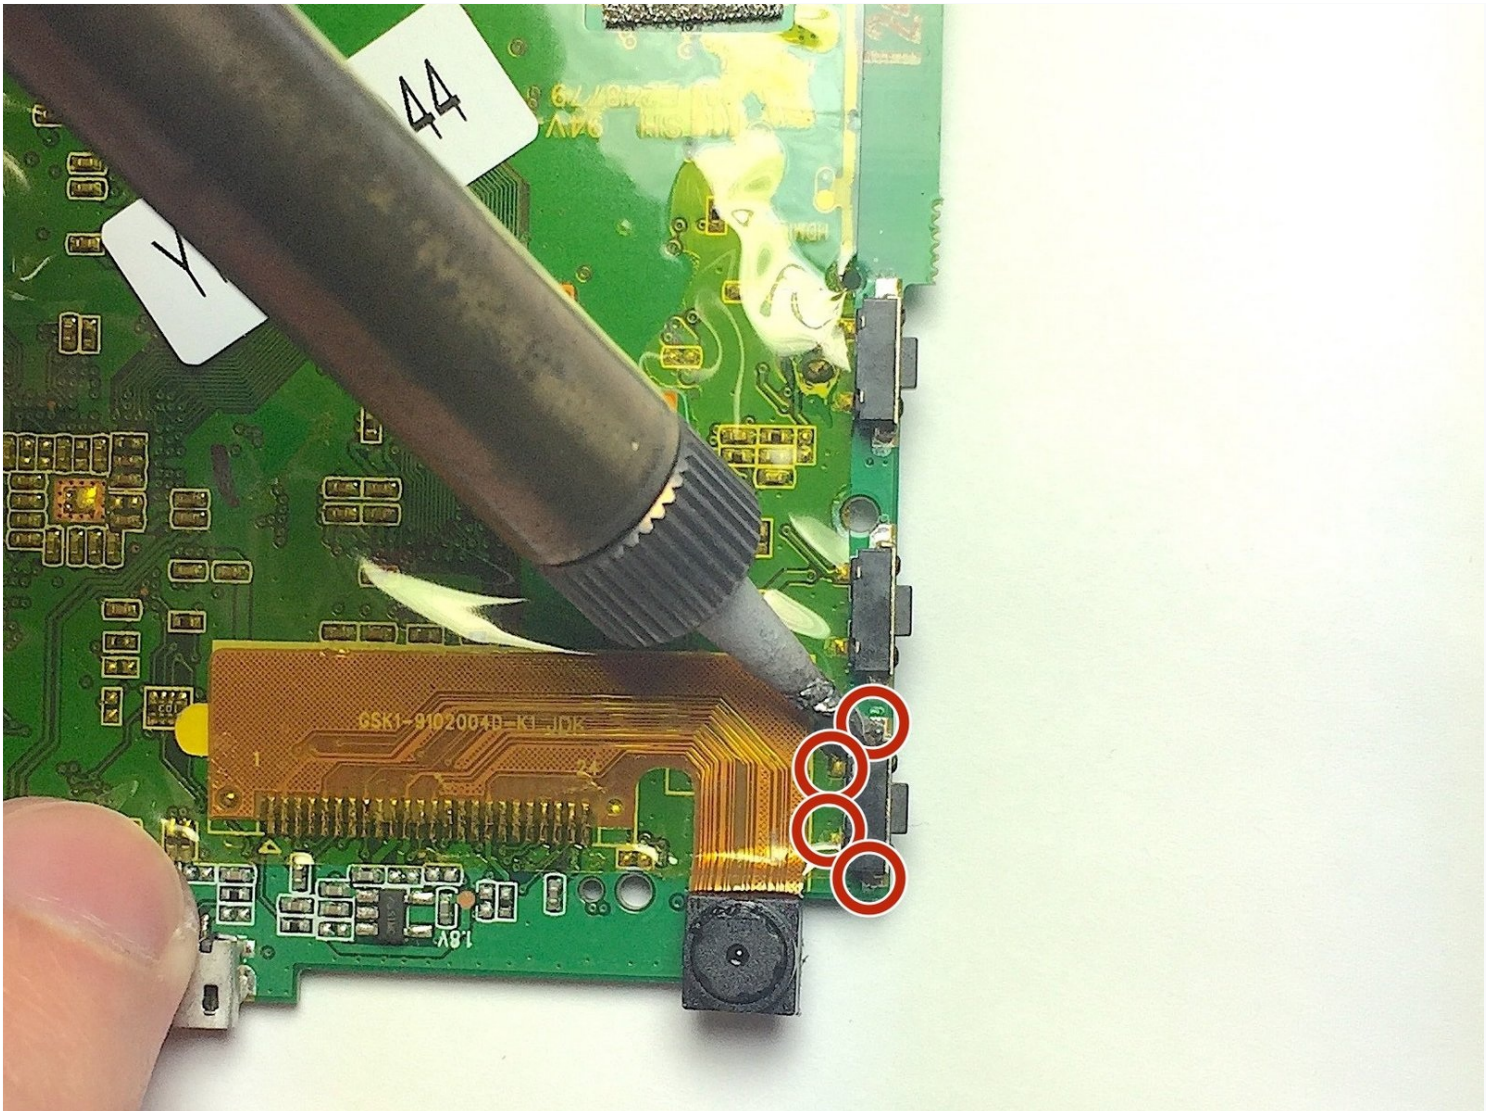

# Nextbook Premium 7SE Replace Power Button Replacement

It's important to note that replacing the...

Written By: Michelle Helweh



# INTRODUCTION

It's important to note that replacing the volume buttons includes using three prerequisite guides.

---

## TOOLS:

[iFixit Opening Tool](#) (1)

[Desoldering Braid](#) (1)

[Lead-Free Solder](#) (1)

[Staples](#) (1)

[Soldering Iron](#) (1)


[Spudger](#) (1)

[iFixit Precision 4 mm Screwdriver Bit / Nut](#)

[Driver 2.5 mm](#) (1)

---

## Step 1 — Back Cover

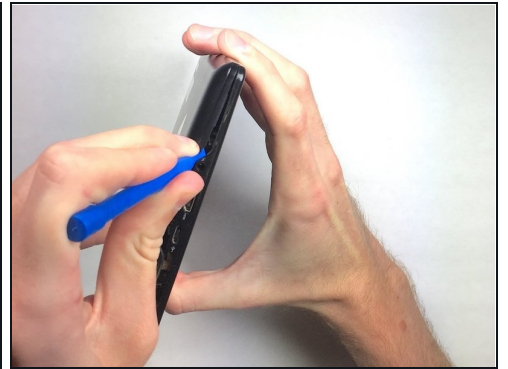

- Insert the plastic opening tool into the middle of the bottom edge of the device. The tool should be inserted within the seam between the back and front covers.
- Slide the opening tool to the right and slowly continue to separate the back cover from the device.

 Avoid prying on the buttons, as they are easily damaged.




## Step 2




- Pull the cover off of the device once about three quarters of the cover has been pried open using the plastic opening tool.

## Step 3 — Battery

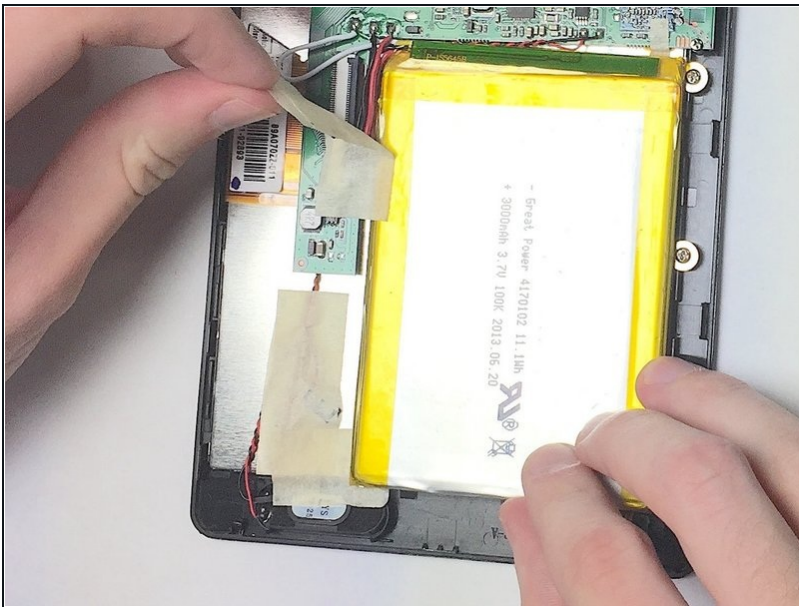

- Remove masking tape from the battery.


## Step 4

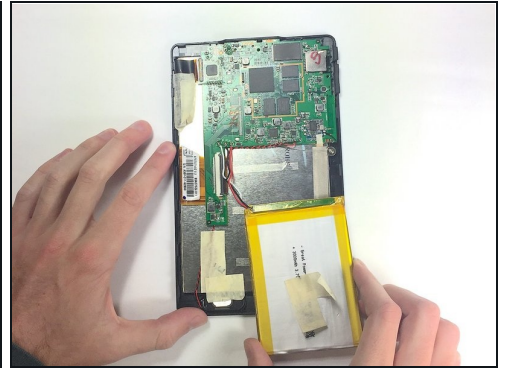

- Pry the battery from the base using the nylon spudger and move it away from the motherboard.

⚠ Handle the battery with care to avoid damaging it.

## Step 5

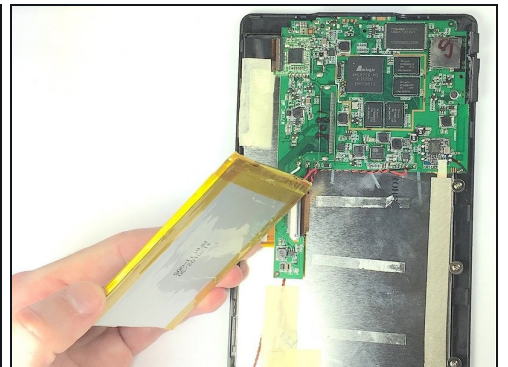


- De-solder the three contact points and remove the battery.

ⓘ See the following guide for instructions on how to solder. [How To Solder and Desolder Connections](#)

⚠ Use caution when operating the soldering iron.




## Step 6 — Motherboard

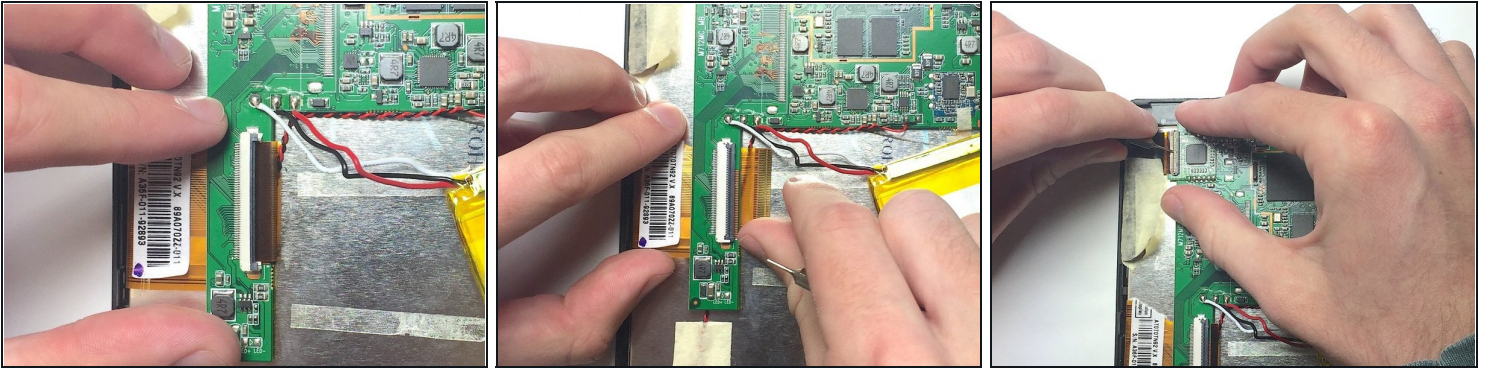

- Remove the two ZIF connectors attached to the motherboard by flipping up the black tabs before pulling the ribbon cable away.


⚠ Only use a fingernail or nylon spudger to flip up the retaining flap. Using metal tools may damage delicate components.

## Step 7

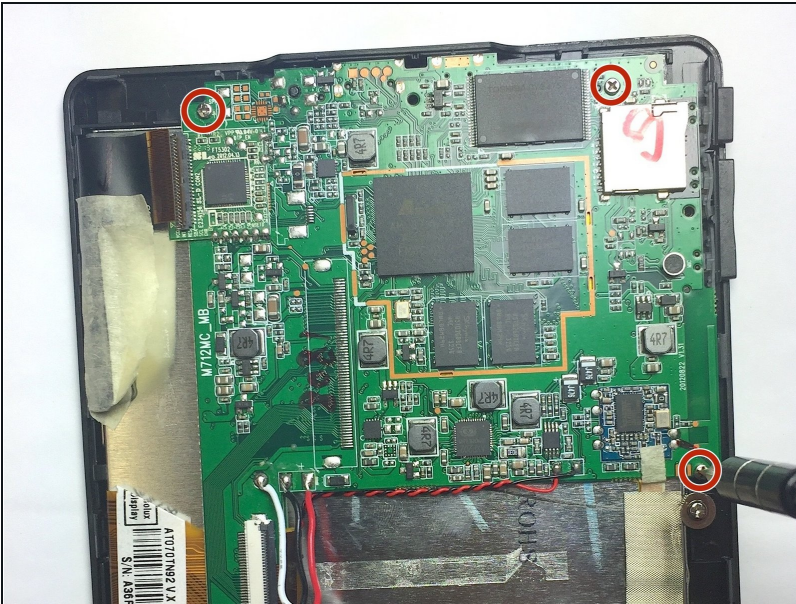


- Use the nut driver and J00 bit to remove the three 4 mm screws.

## Step 8

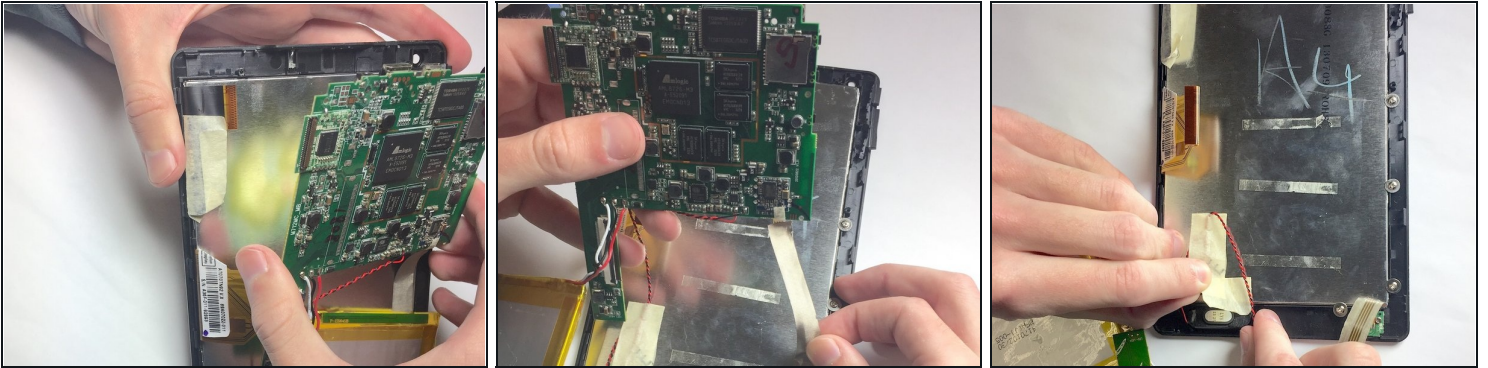

- Peel back metal tape that is hiding the auxiliary port wires.
- Remove tape that is holding the speaker wires in place.
- Lift up on the motherboard to release it from the tablet.

## Step 9 — Replace Power Button

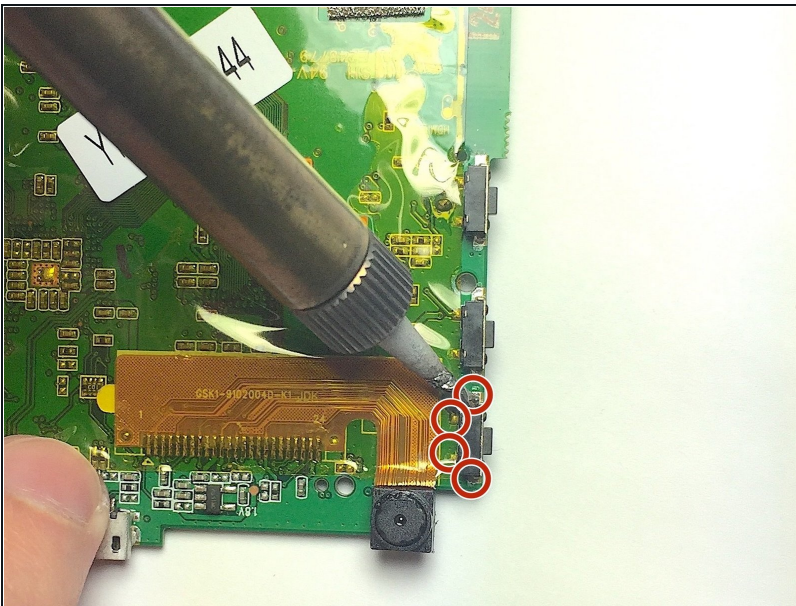

- De-solder the power button's four contact points.
- ① Follow [this guide](#) to learn how to desolder safely.

To reassemble your device, follow these instructions in reverse order.