




Dyson V6 Motorhead Motor Replacement

The motor requires a guide for replacement due to issues with dropping the vacuum, the motor detaching, and not knowing how to put the motor back in.

Written By: Addie Hedge

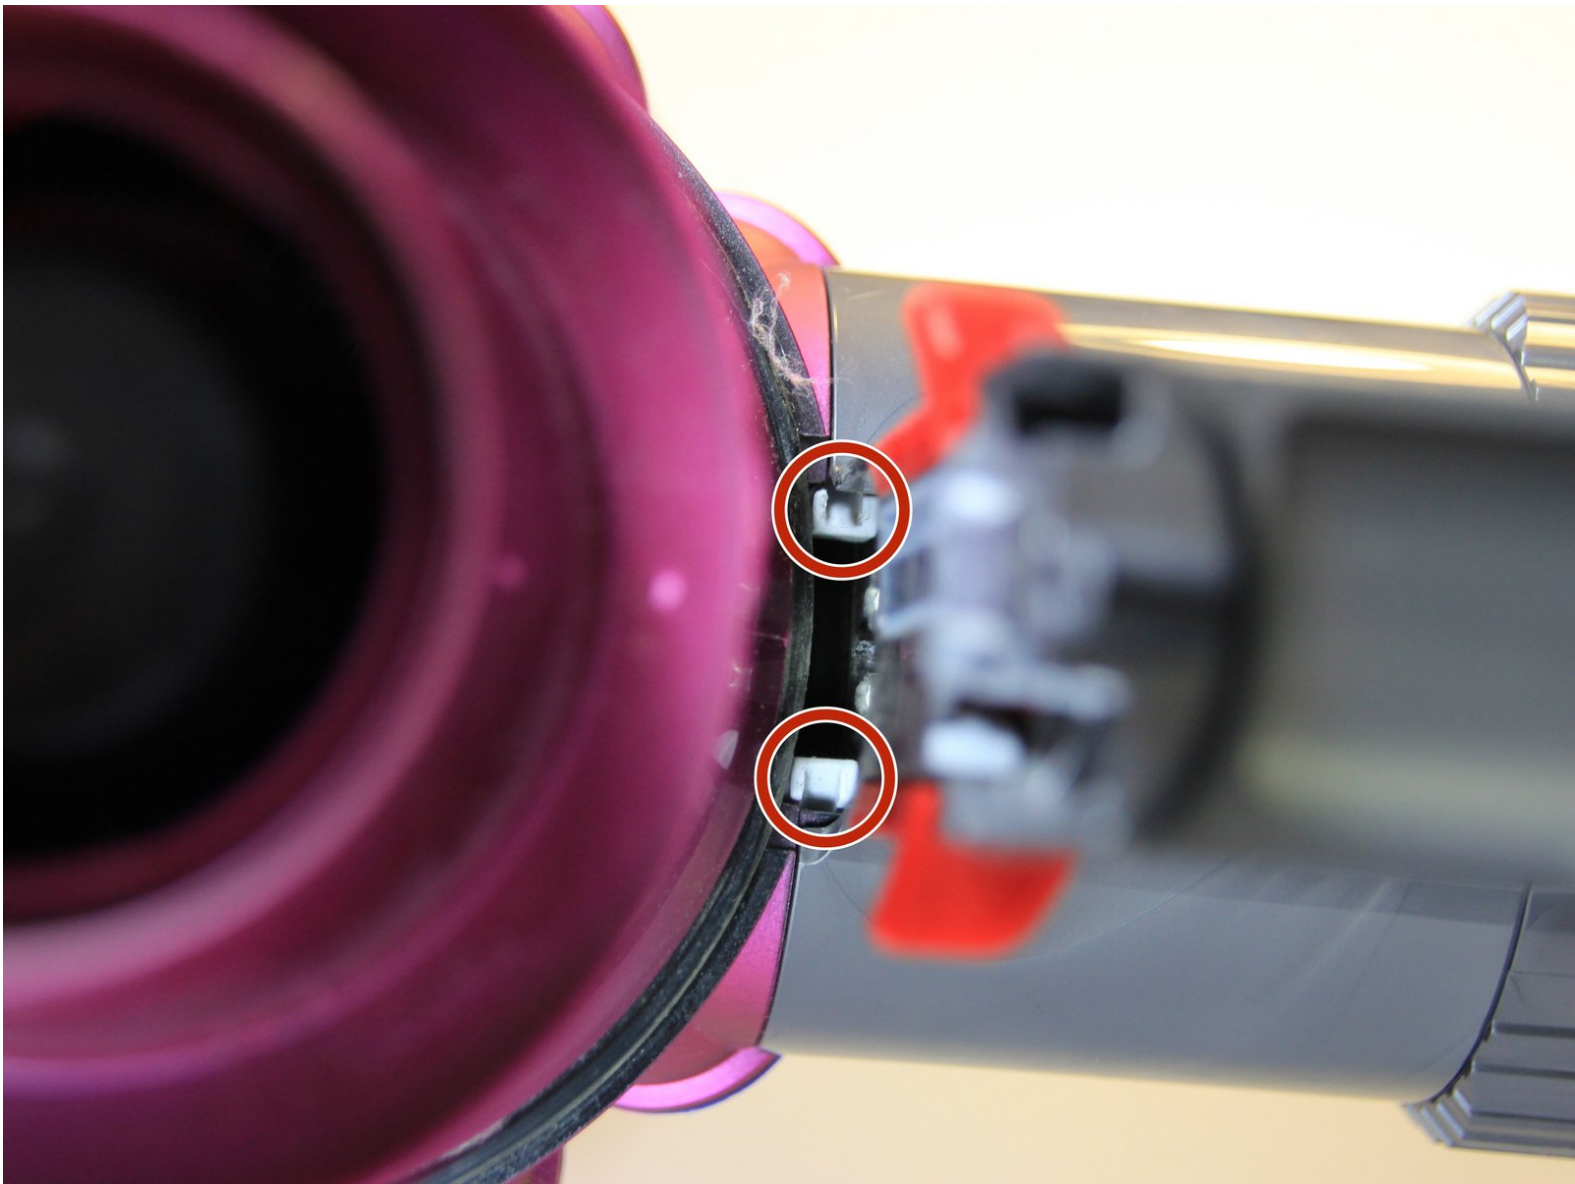

INTRODUCTION

Require battery removal, which is not included due to device not having a battery. Connection tubing will need to be removed before motor replacement.

TOOLS:

- [Tweezers](#) (1)
-

Step 1 — Collection Bin



- Pull down on the red release tab.

i When the tab is fully engaged, the bottom of the bin should open.

Step 2




- Pull down on the release tab a second time, this time the collection bin should release from the upper vacuum head.

Step 3



- Pull the collection bin away from the upper vacuum head.

Step 4 — Motor

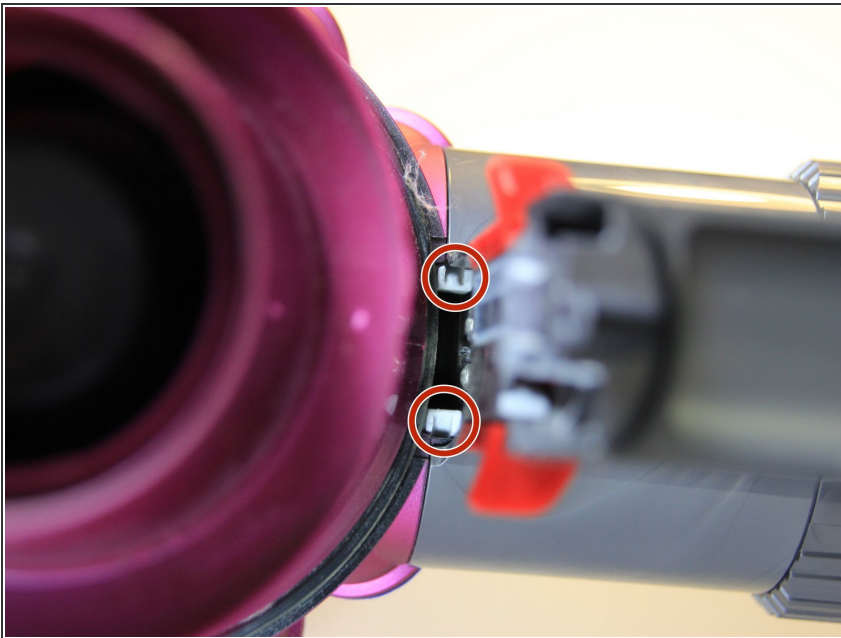

- Identify the two white components between the vacuum handle and the attached component.

Step 5



- Insert each arm of the tweezer into each white component area and squeeze simultaneously to release the motor from the attached component.

Step 6



- Detach the motor from the remaining motor head assembly.

To reassemble your device, follow these instructions in reverse order.