



ASUS UX50V-RX05 Battery Replacement

Replace the broken or dead battery on your Asus Laptop. Step-by-step instructions

Written By: James



INTRODUCTION

Use this guide to remove and replace your battery on your Asus UX50V-RX05 Laptop.



TOOLS:

- [Spudger](#) (1)
-


Step 1 — Battery



- Slide the tabs forward, away from the battery, so that the red line is showing underneath.

⚠ Make sure device is powered down before beginning.

Step 2

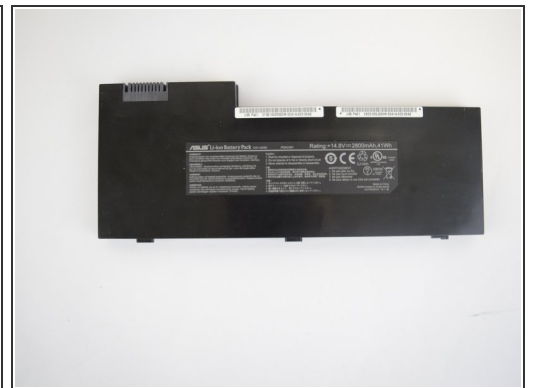

- Use the spudger tool to pry the battery upward until it pops out of its slot.
- Remove the battery.

To reassemble your device, follow these instructions in reverse order.