



Dyson Cinetic Animal Canister Seal Replacement

Remove the canister from the ball. Open the...

Written By: Alexandria Pompeii



INTRODUCTION

Remove the canister from the ball. Open the Canister to remove and replace the seal.

PARTS:

[Dyson DC47 Cinetic Animal Canister Seal \(1\)](#)

Step 1 — Release the canister




- Press the gray button to release the canister.

Step 2 — Remove the canister




- Remove the canister by lifting it out.

Step 3 — Canister Seal

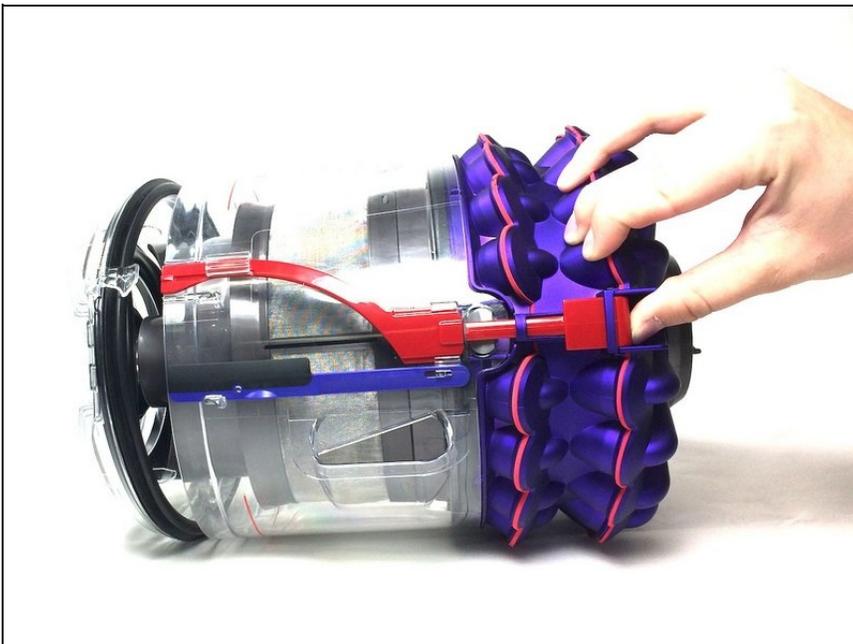

- Press on the red semi-circle shaped button on the canister so the hinged door pops open.

Step 4

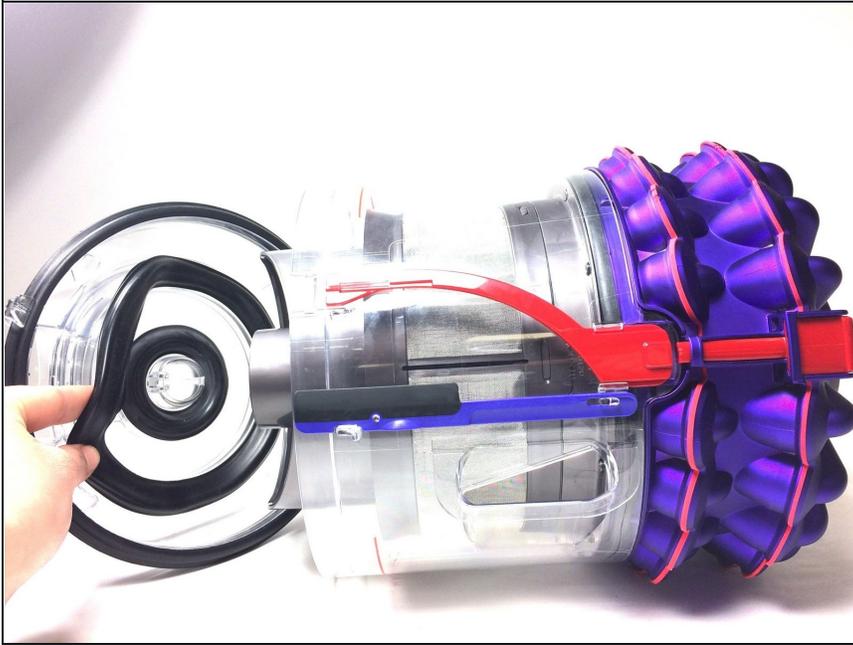

- Now remove the seal by pulling up on it.

To reassemble your device, follow these instructions in reverse order.