



# Panasonic HC-VX870 SD Card Replacement

Replace the SD card in the camcorder

Written By: Rebecca Maloney



# INTRODUCTION

Take out and replace the SD card

## Step 1 — SD Card



- Locate the SD card port on the bottom of the camcorder.

## Step 2



- Open the port and push on the SD card to remove it.

To reassemble your device, follow these instructions in reverse order.