




Asus X751L Battery Replacement

Use this guide to replace the battery on your Asus X751L.

Written By: John Enderton

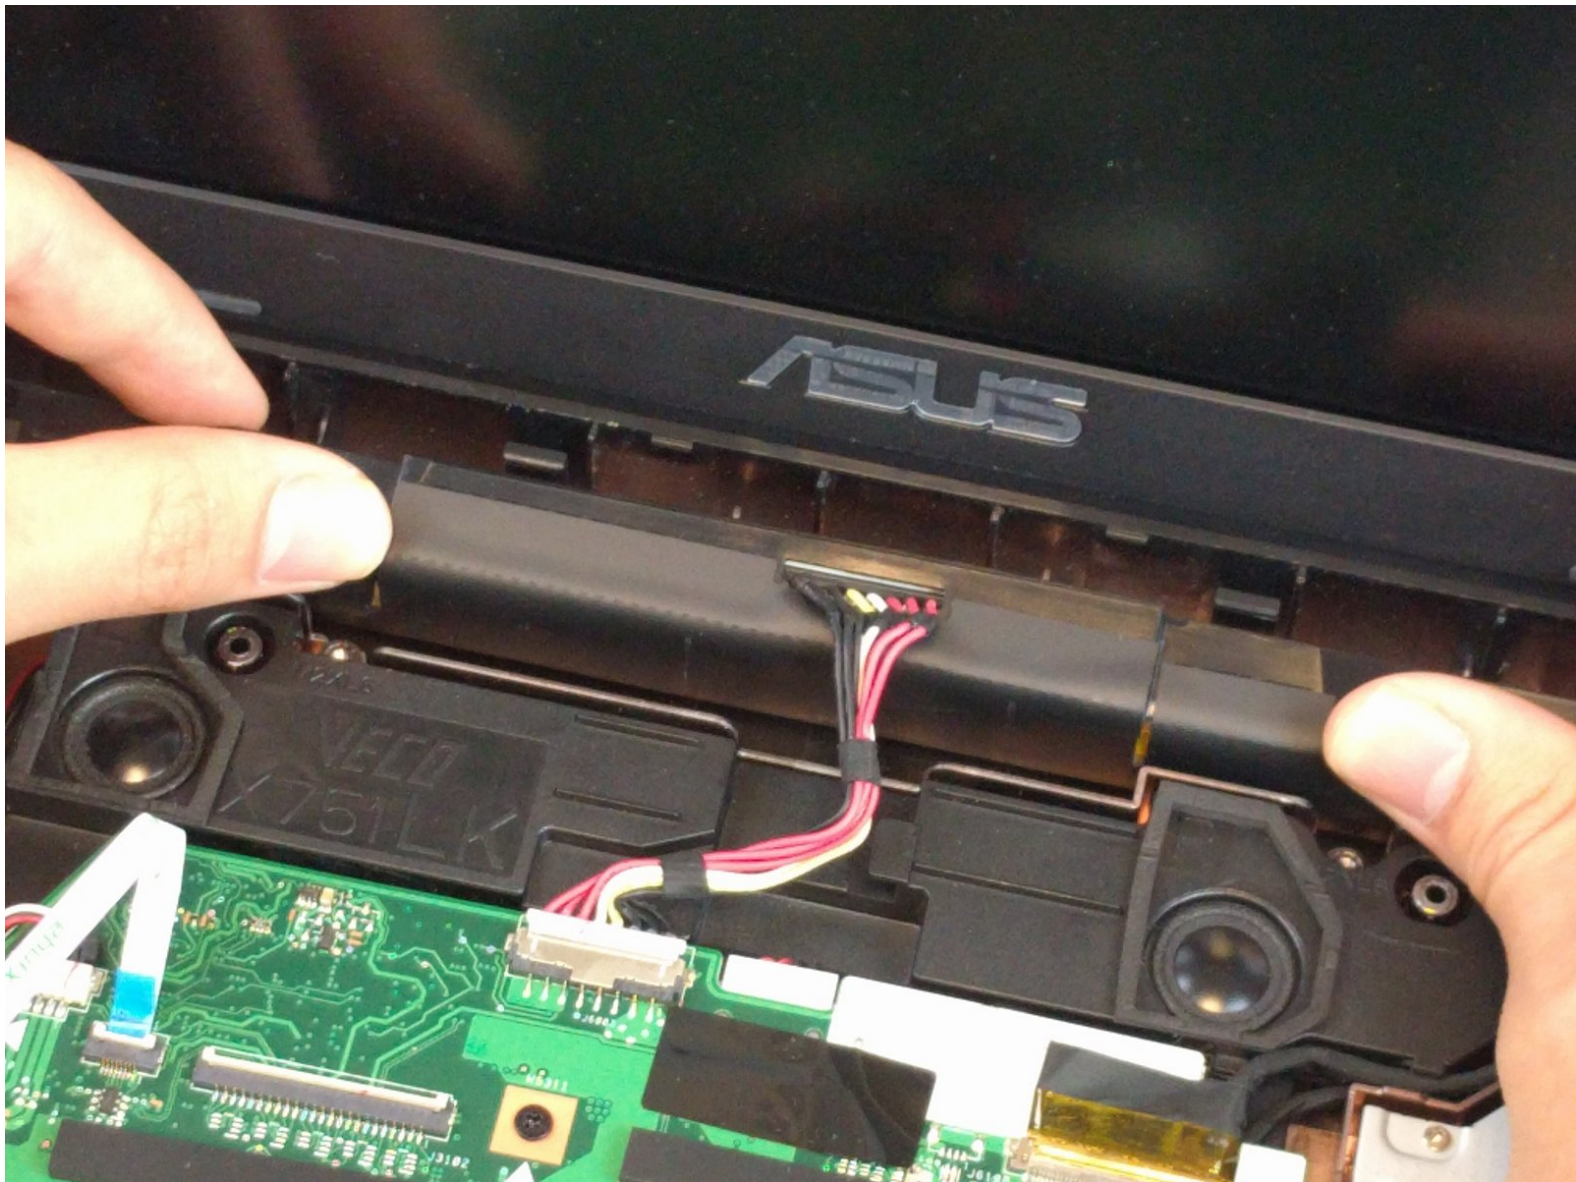

INTRODUCTION

This guide will walk you through the process of replacing a broken or faulty battery on the Asus X751L.



TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #00 Screwdriver](#) (1)



PARTS:

- [Asus A41-X550E Replacement Laptop Battery](#) (1)

Step 1 — Keyboard




- With the screen closed, place your laptop upside-down with the front facing you.
- Remove the six 14.6mm Phillips #00 screws.
- Remove the four 6.6mm Phillips #00 screws.

Step 2




- Flip the laptop over and open the lid.
 - Pry around the edges of the laptop base using the plastic opening tool.
- ⚠ Prying too hard can break the plastic clips.

Step 3

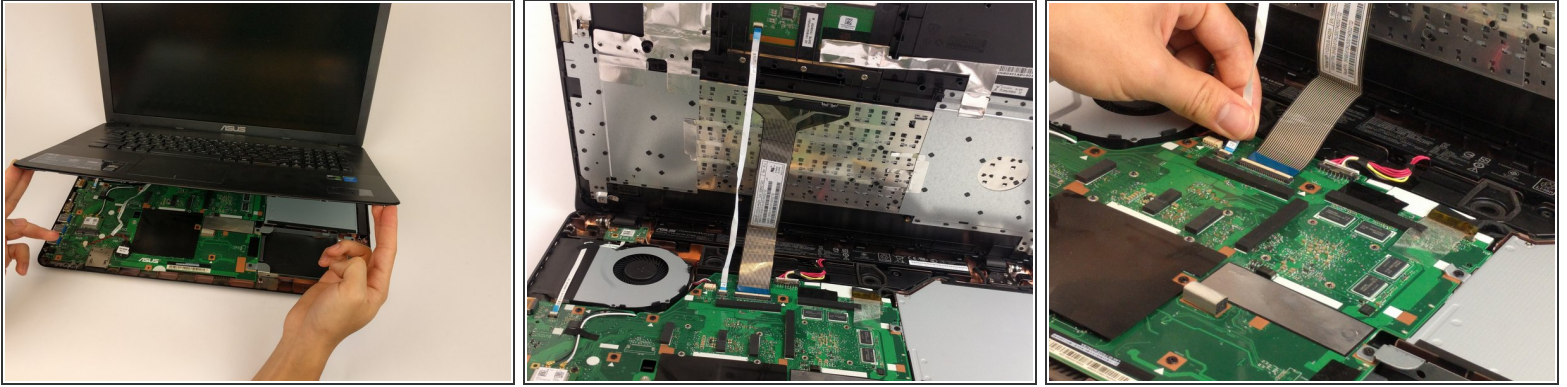


- Carefully lift the keyboard up.
 - ⚠ Be very careful when lifting the keyboard up. Two zero insertion force (ZIF) cables are between the keyboard assembly and the motherboard. Do not lift the assembly too high.
- Disconnect the two ZIF connectors from the motherboard using your fingernail to lift the cream-colored tab.

Step 4 — Battery

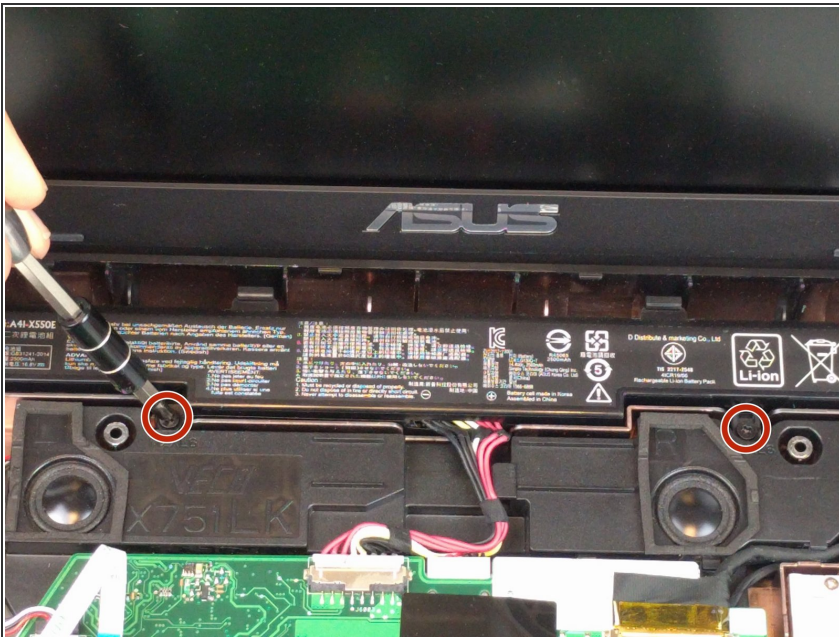


- Remove the two 6.6mm Phillips #00 screws holding the battery in place.

Step 5

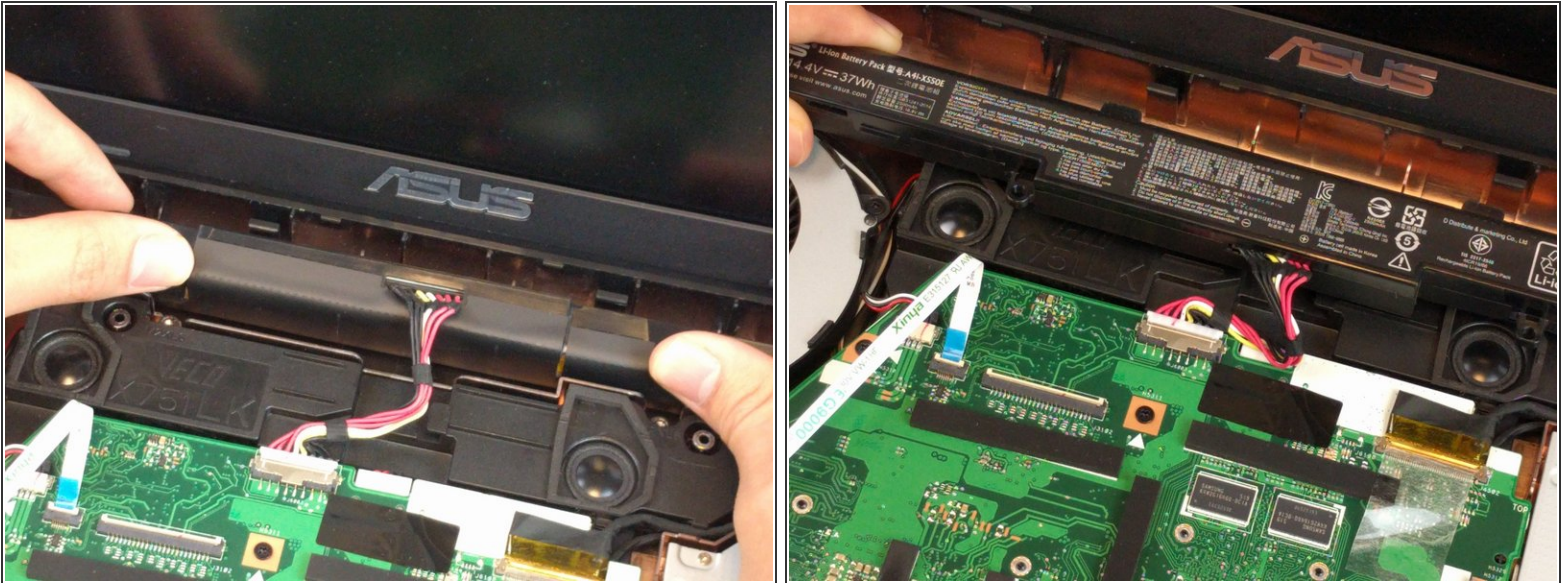

- Lift the battery from the cable-side to maneuver it around the plastic clips.

Step 6

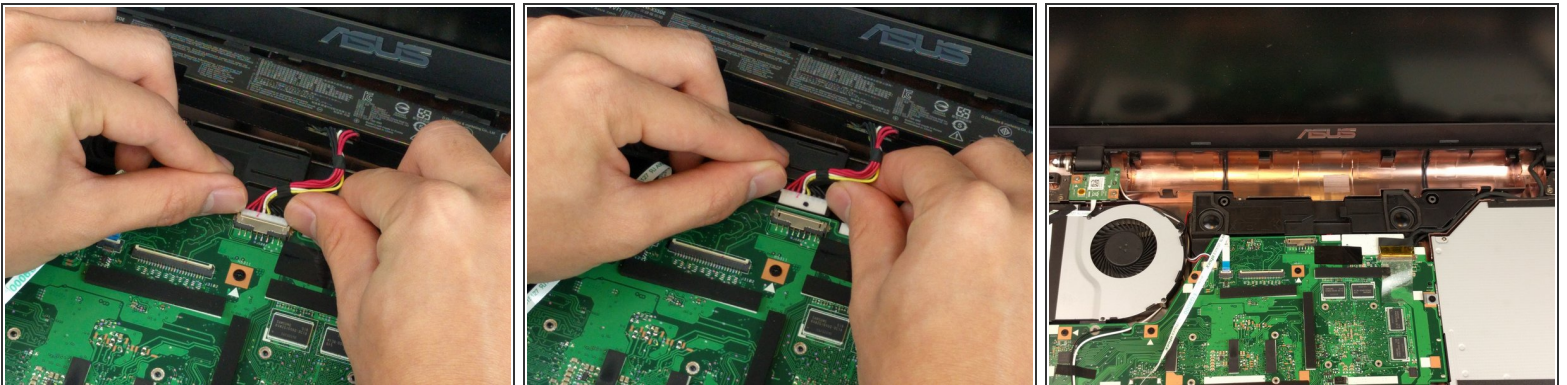

- Using your finger nails, gently push the battery cable out of the connector on the motherboard.
- Once the cable is disconnected, you can remove the battery.

To reassemble your device, follow these instructions in reverse order.