



Asus Eee PC 900 LCD Display Screen Replacement

If your Asus Eee PC 900 LCD display screen is...

Written By: Michael Barker



INTRODUCTION

If your Asus Eee PC 900 LCD display screen is damaged, experiencing pixel issues, or is dim in a bright background, use this guide to replace your display screen.

Prior to making this repair, it is important to confirm that the replacement itself is necessary. Check to make sure that no other solutions are viable. For problems such as pixel issues, inverter issues, or not being able to see color, a full replacement may be necessary.

This guide requires you to remove the battery, keyboard, top cover, and LCD display screen from your Asus Eee PC 900. Some steps require the use of a spudger.

Before beginning, make sure to completely power down the device and disconnect from any external power source.

TOOLS:


- [Phillips #00 Screwdriver](#) (1)
 - [Spudger](#) (1)
 - [iFixit Opening Tool](#) (1)
 - [Flathead 3/32" or 2.5 mm Screwdriver](#) (1)
-

Step 1 — Battery




- Slide the battery's locking tabs from the locked position to unlocked positions.
- ⓘ The right tab is unlocked when a red dot is showing.
- ⓘ The left tab will have to be held in the unlocked position in order to release the battery.

Step 2

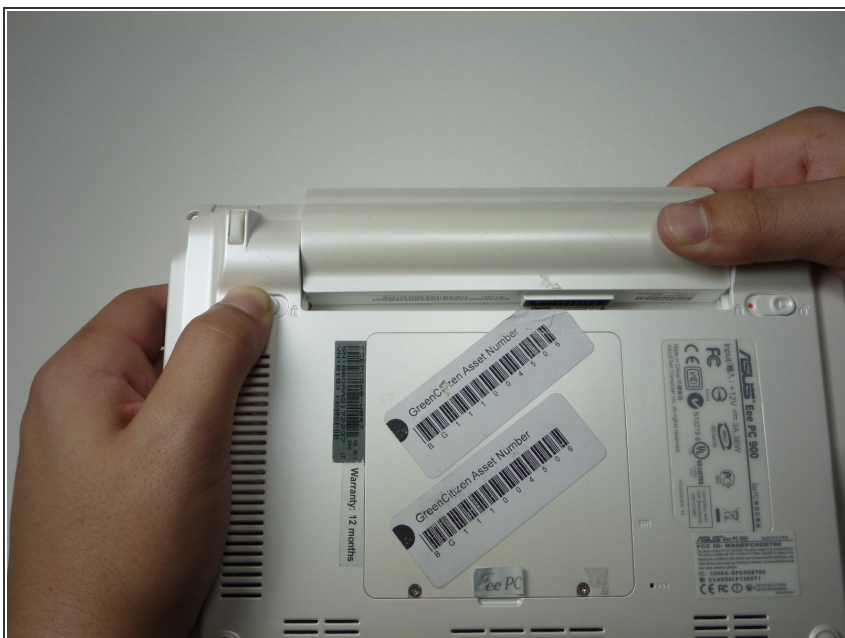

- Slide the battery out while holding the left locking tab in the unlocked position.

Step 3 — Keyboard

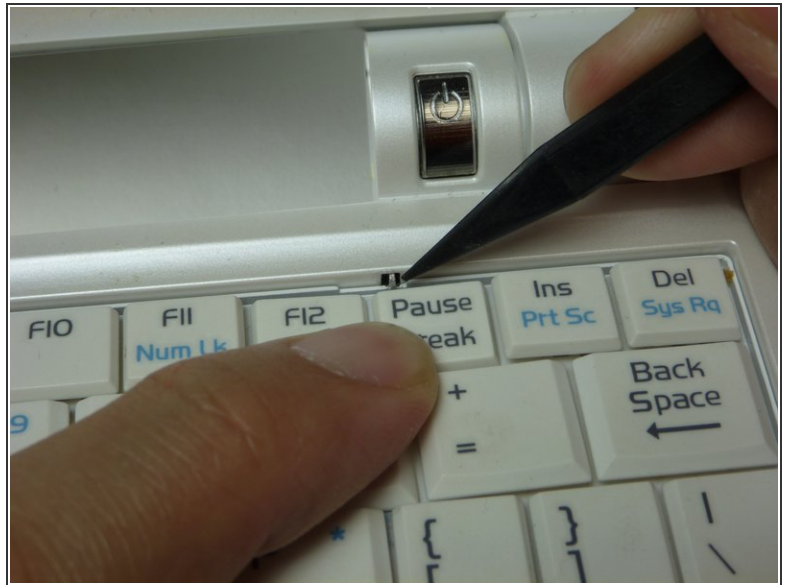

⚠ Caution Follow this step to detach the upper portion of the keyboard, but do not remove it from the laptop. Damage to the keyboard's ribbon cable may result if improperly executed.


- Identify the three metal tabs holding down the laptop's keyboard.
- Using a spudger, depress each metal tab to remove the keyboard.
- ⓘ The upper part of the keyboard should "pop up" from its holder.

Step 4



- Clips hold the bottom portion of the keyboard to the laptop. Gently lift the upper portion of the keyboard and then move the entire keyboard towards the computer's screen until the ribbon cable is visible.

Step 5

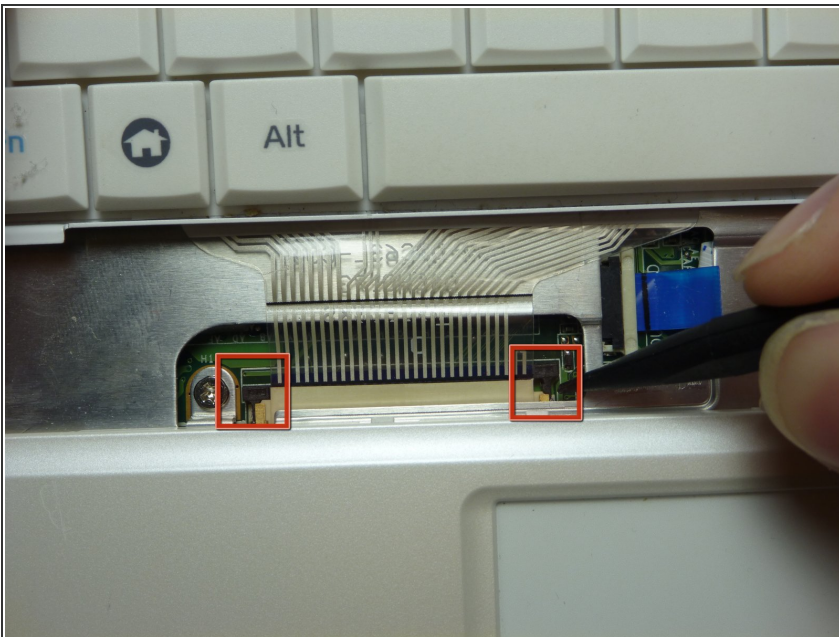

- Using a spudger, gently push the two black pins holding the ribbon cable towards the computer's screen.
- Slide the keyboard's ribbon cable from the connector.

Step 6




- Remove the keyboard by lifting upwards.

Step 7 — Top Cover




- Remove the nine 4.76mm Phillips #0 screws on the top cover of the laptop.

Step 8

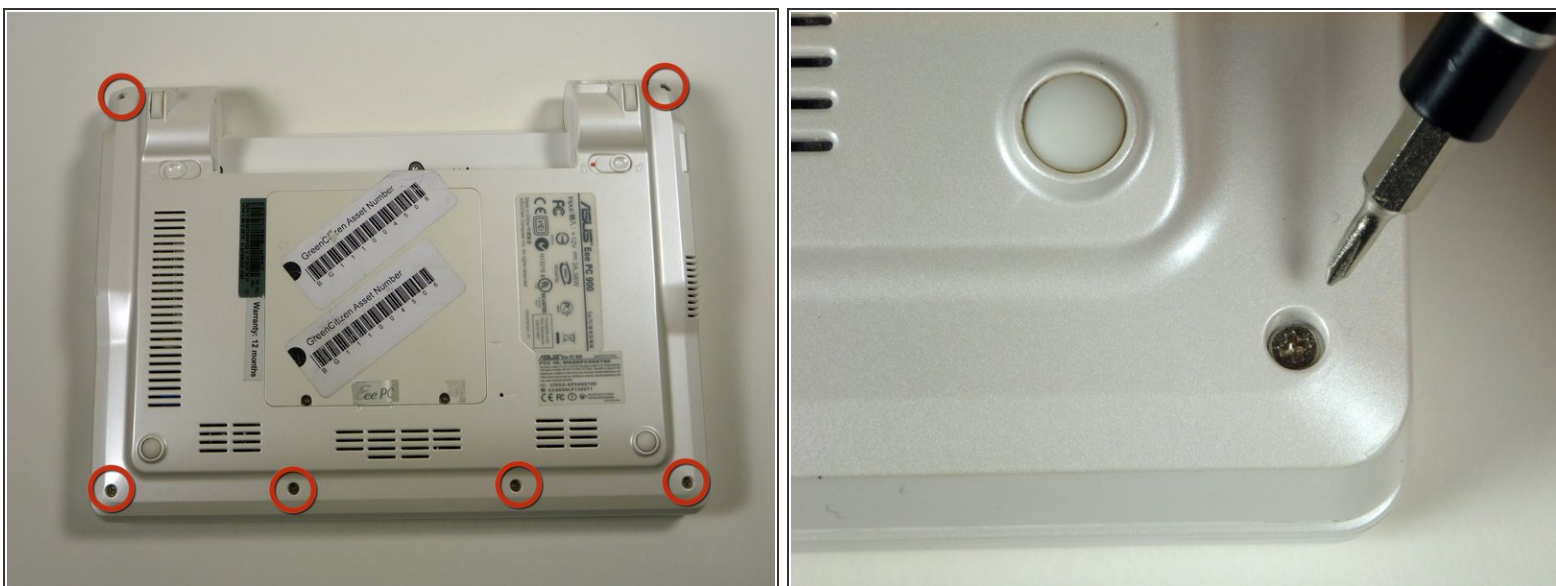


- Remove the six 4.76 mm Phillips #0 screws on the back of the laptop.

Step 9

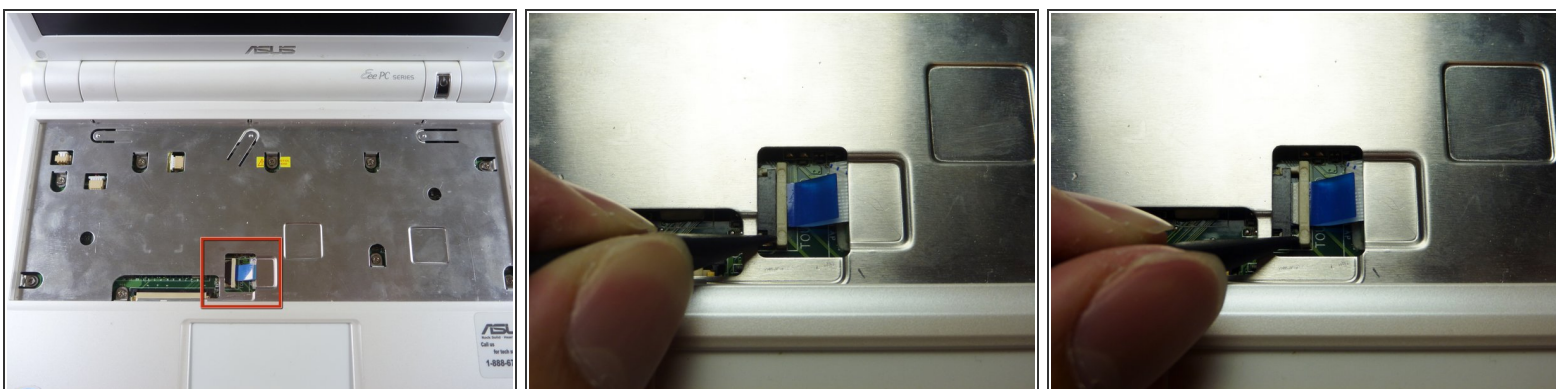

- Flip the laptop back over and identify the touchpad ribbon.
- Unlock the tan locking pin from the black connector by pushing the pin to the right with a spudger.

Step 10

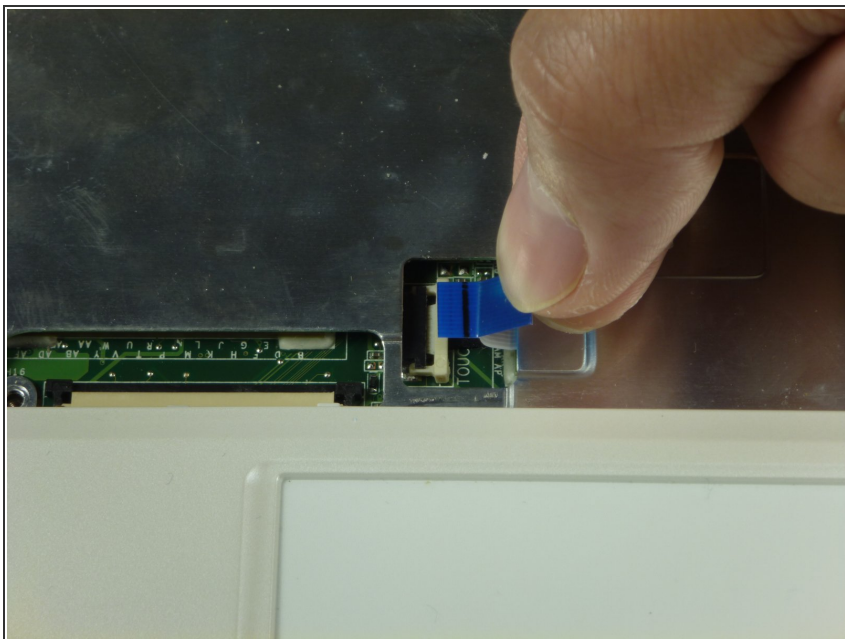

- Slide out the touchpad's ribbon connector by pulling the blue tab to the right.

Step 11



- Use a plastic opening tool to gently detach the top cover from the laptop's base. See the next step for removing the cover.



Step 12



⚠ Caution: To clear the audio and microphone, lift the right half and move the cover to the left (as shown in the second picture) to prevent cover damage.


- Remove the laptop cover.

Step 13 — LCD Display Screen

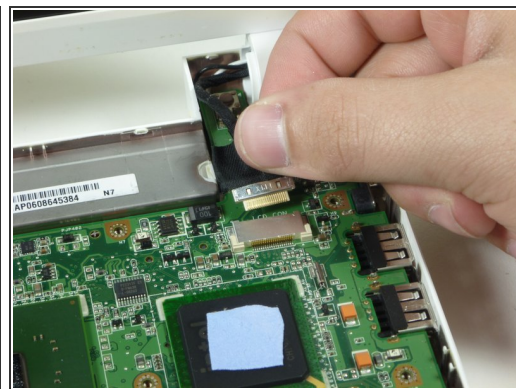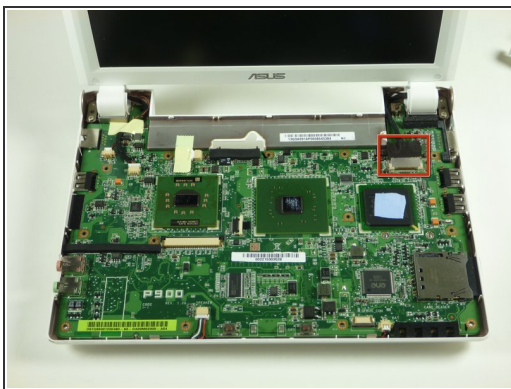

- Remove the large black wire using a plastic opening tool.

Step 14

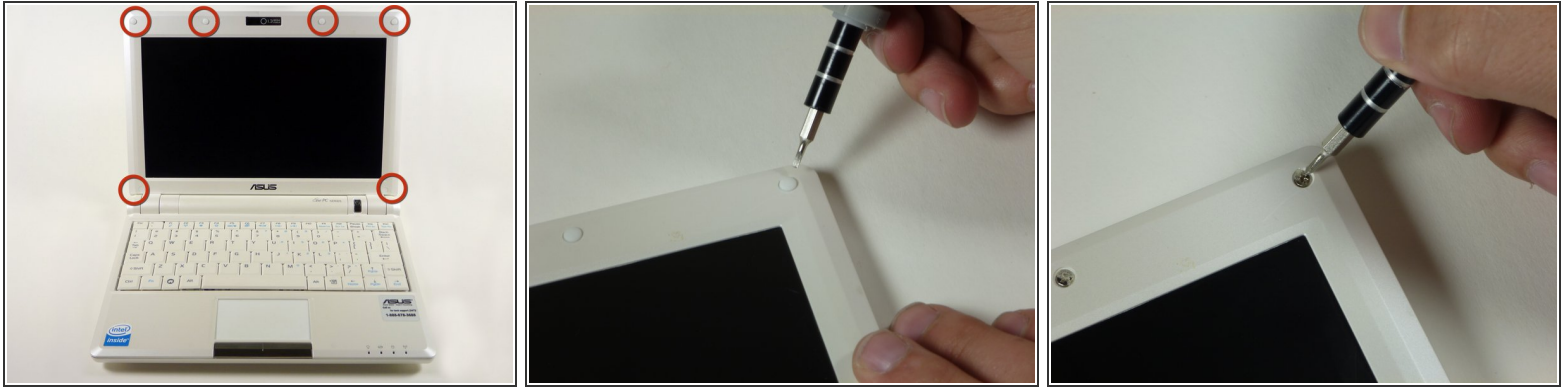


- Gently pry off the six rubber covers around the outside of the screen using a two mm flat head screwdriver.
- ❗ A flat head screwdriver is preferable over a spudger as the spudger's head is not thin enough to slip under the rubber covers.
- Remove the six 4.76 mm Phillips #0 screws underneath each cover.

Step 15



- Using a plastic opening tool, carefully detach the casing around the screen cover.
- Remove the screen cover.

Step 16

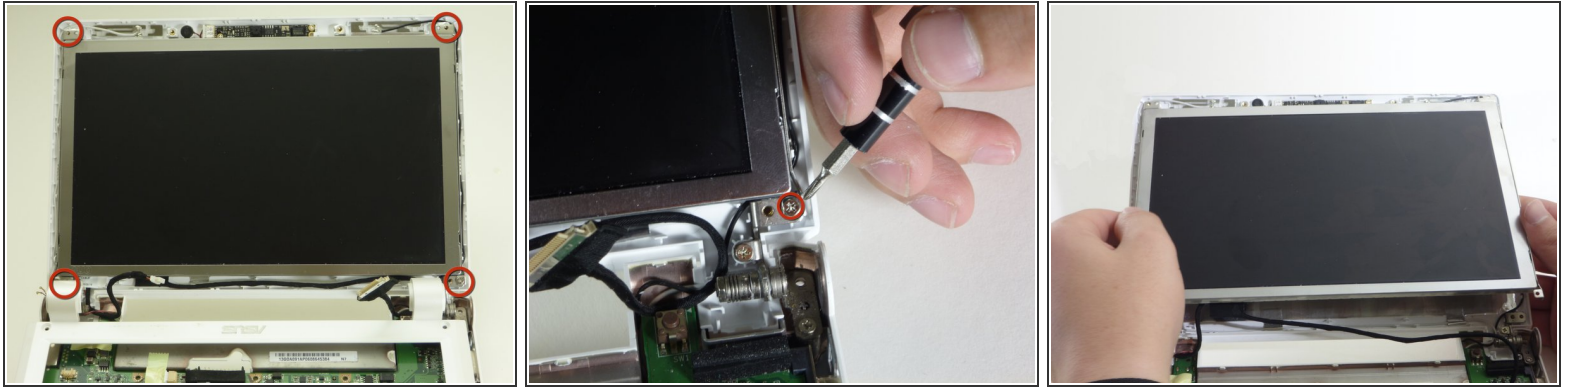

- Remove the four 4.76mm Phillips #0 screws located on the corners of the screen.
- Lift out the display screen.

To reassemble your device, follow these instructions in reverse order.