


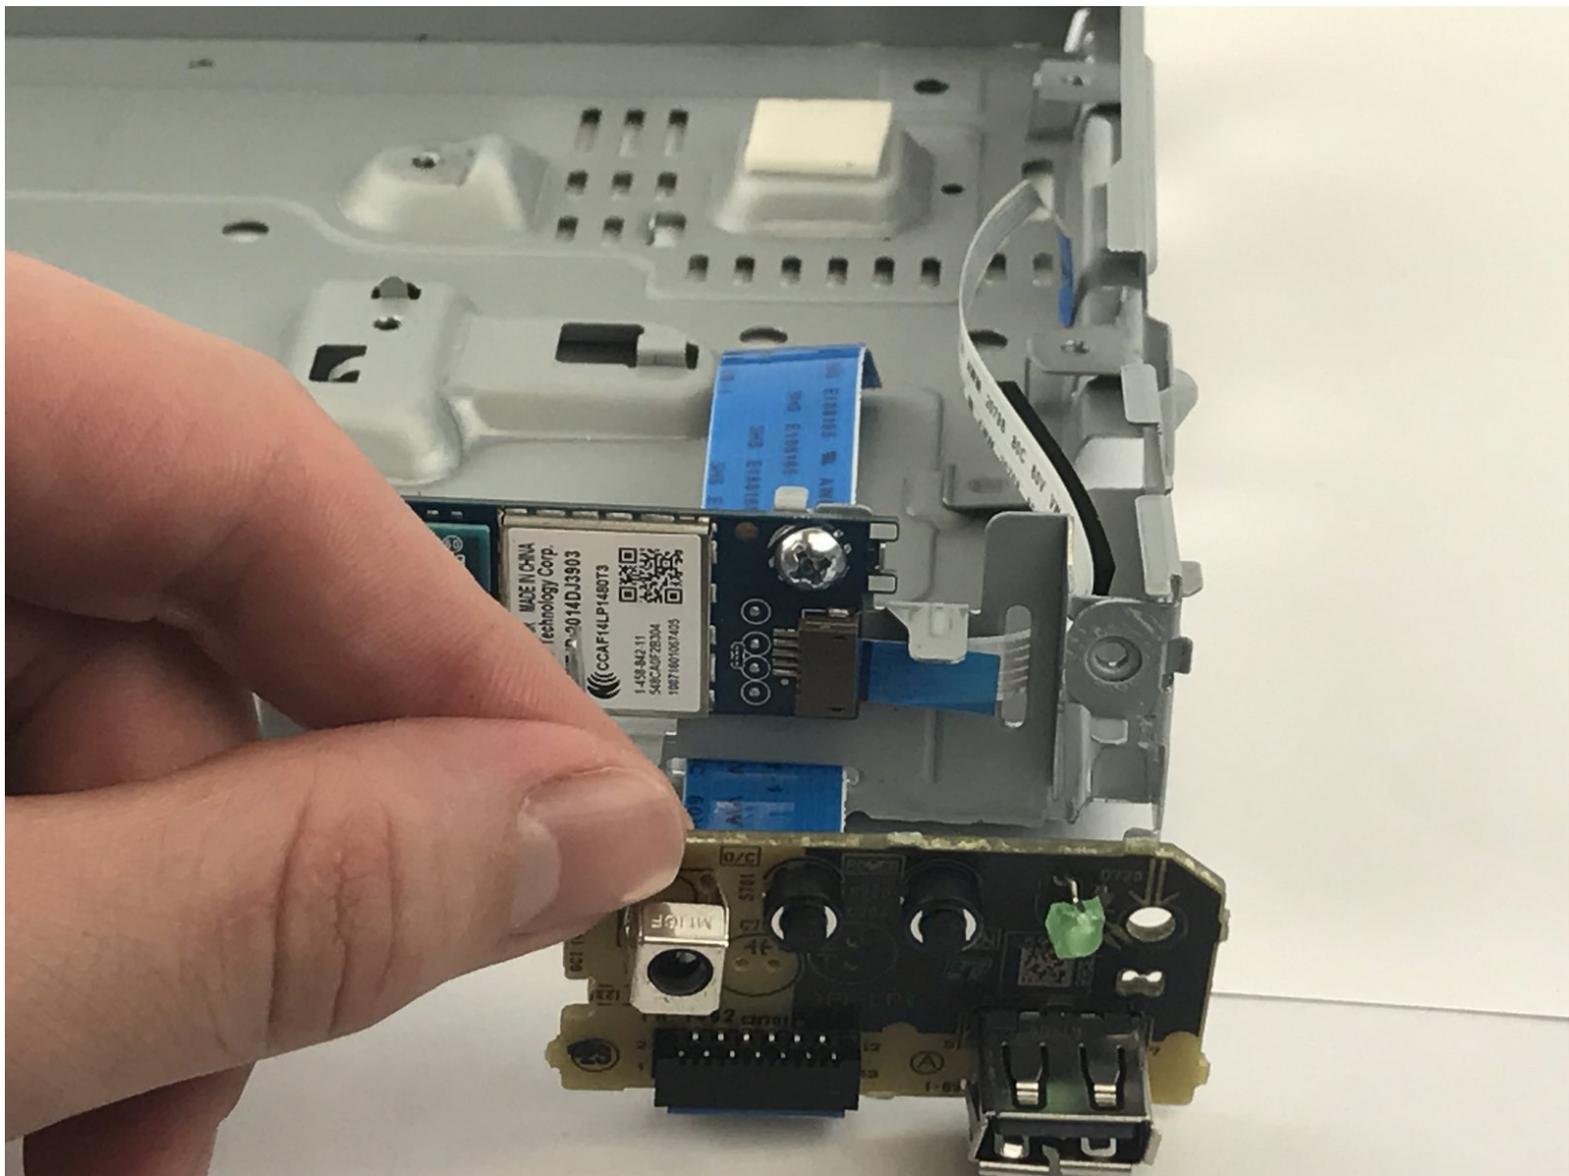

# Sony BDP-S3700 Port Board Replacement

The port board is where the power and eject buttons, the IR sensor, and the USB port are located on the Sony BDP-S3700. This guide shows how to replace it.

Written By: Luiz Barreto



---

## INTRODUCTION

The port board is where the power and eject buttons, the IR sensor and the USB port are located. This guide shows how to replace it.

---

### TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

## Step 1 — Front Panel




- Use the PH1 screwdriver to remove the two 9mm screws on the back of the Blu-ray player.

## Step 2




- Remove the back of the device by slowly sliding the rear outer housing backwards.

### Step 3

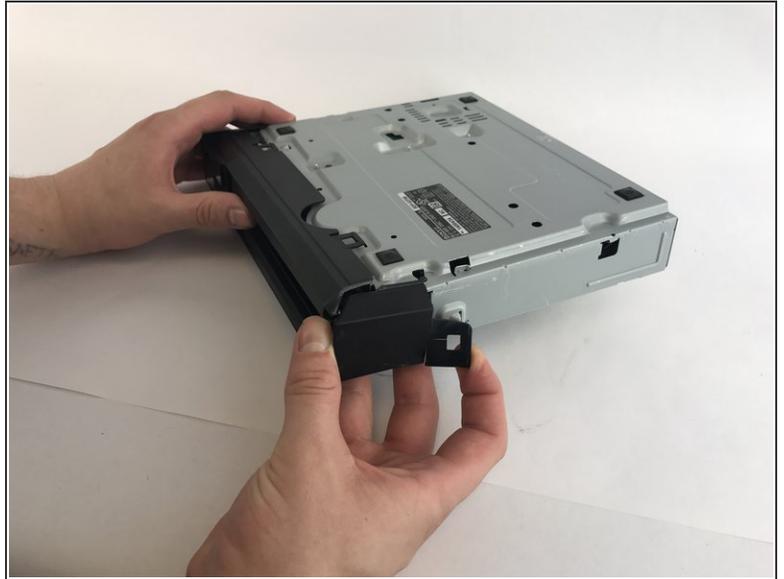

- Turn the Blu-ray over
- Pry open the clips under and on the sides

### Step 4

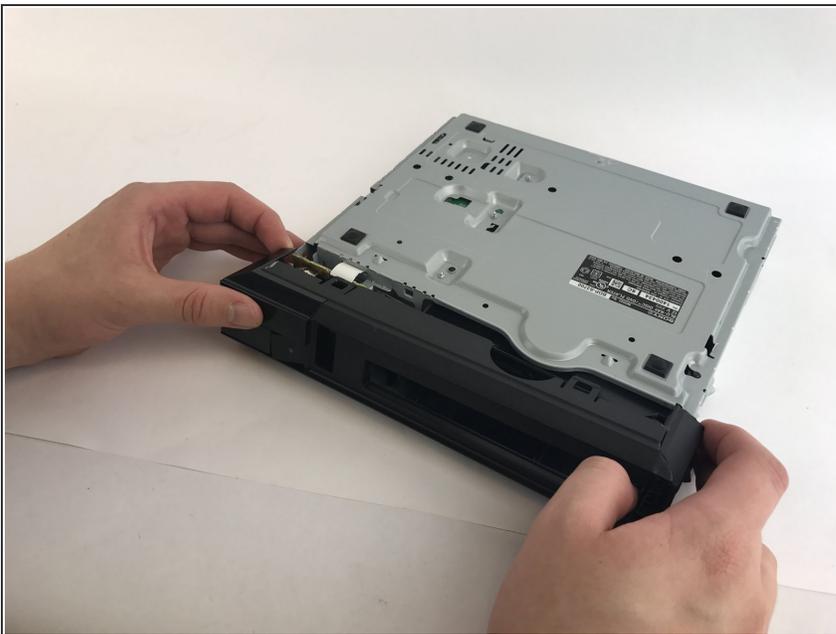


- Once all the clips are open, slide the front outer housing out.

## Step 5 — Port Board




- Flip the Blu-ray back up
- Remove the ribbon connecting the port board to the motherboard.
- ⚠ Handle the circuits only on its side.

## Step 6

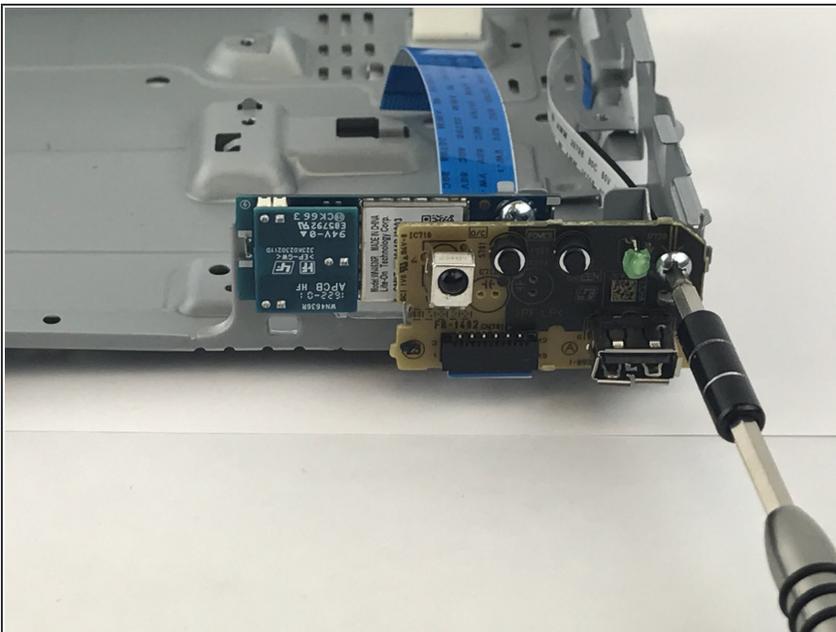

- Use the PH1 to remove the 7mm screw on the port board.

## Step 7

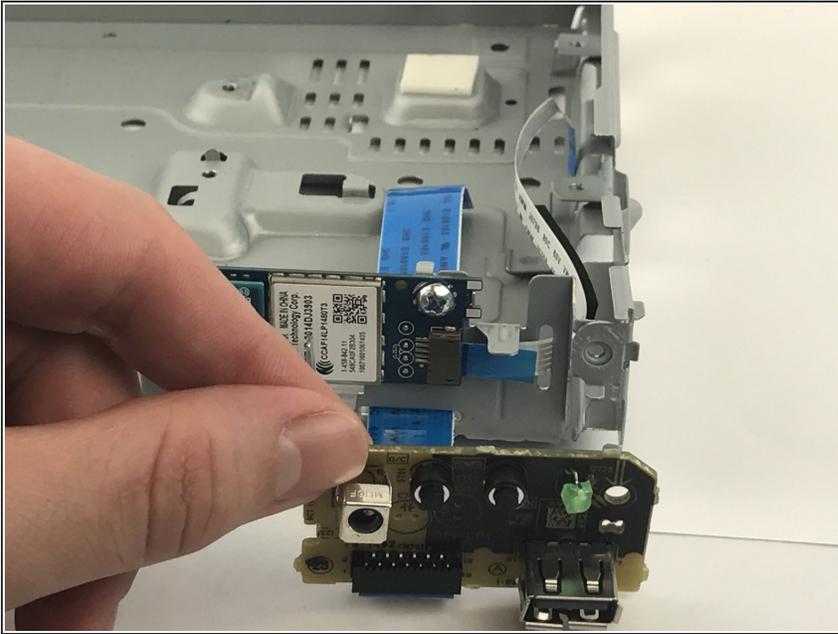

- Remove the port board.

To reassemble your device, follow these instructions in reverse order.