



iRobot Braava 320 Battery Replacement

Replacing a dying battery that will not charge or hold a charge on your iRobot Braava 320.

Written By: bradley boardwine



INTRODUCTION

The battery is an essential component to the iRobot Braava 320. Without a functioning battery, your iRobot could have trouble turning on, staying on, or charging. Replacing the battery may solve these issues.

TOOLS:

- [Flathead Screwdriver](#) (1)
-

Step 1 — Battery



- Flip your device over and locate the battery cover.
- ⓘ The battery cover is located in the center of the device in between both wheels.

Step 2



- Using a Flathead #4 screwdriver, gently turn the 12mm screw that holds the battery cover in.
- ⓘ The screw does not remove, it stays attached to the cover.

Step 3



- Gently remove the battery from the tray and disconnect the battery cable.
 - To remove the battery, pull it straight up. To disconnect the cable, gently pull it straight out of the connector.
- ✦ To reinstall the cable, hold it near the end and gently push it in the connector.

To reassemble your device, follow these instructions in reverse order.