



FLIR FX Battery Replacement

The camera battery is located on the back of the camera. You will need several tools to pop off the back covering to reach the battery for replacement.

Written By: Emily Bell




INTRODUCTION

This will show how to replace the battery in your FLIR FX security camera.

TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Battery

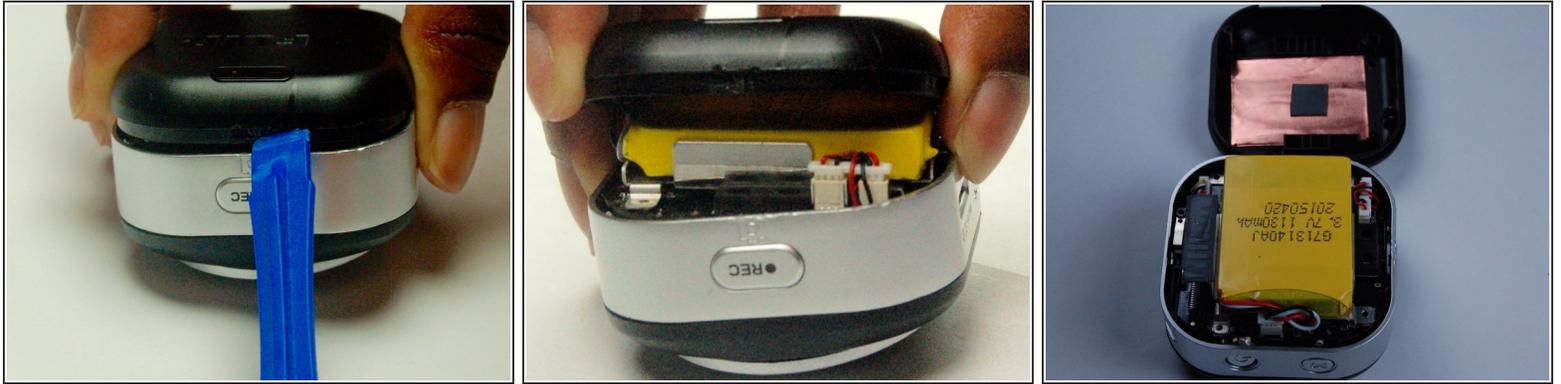


- Pop open the back cover of the camera battery using a plastic opening tool.

Step 2



- Unscrew the 1.2mm Phillips #1 screws in the four corners of the device.

Step 3

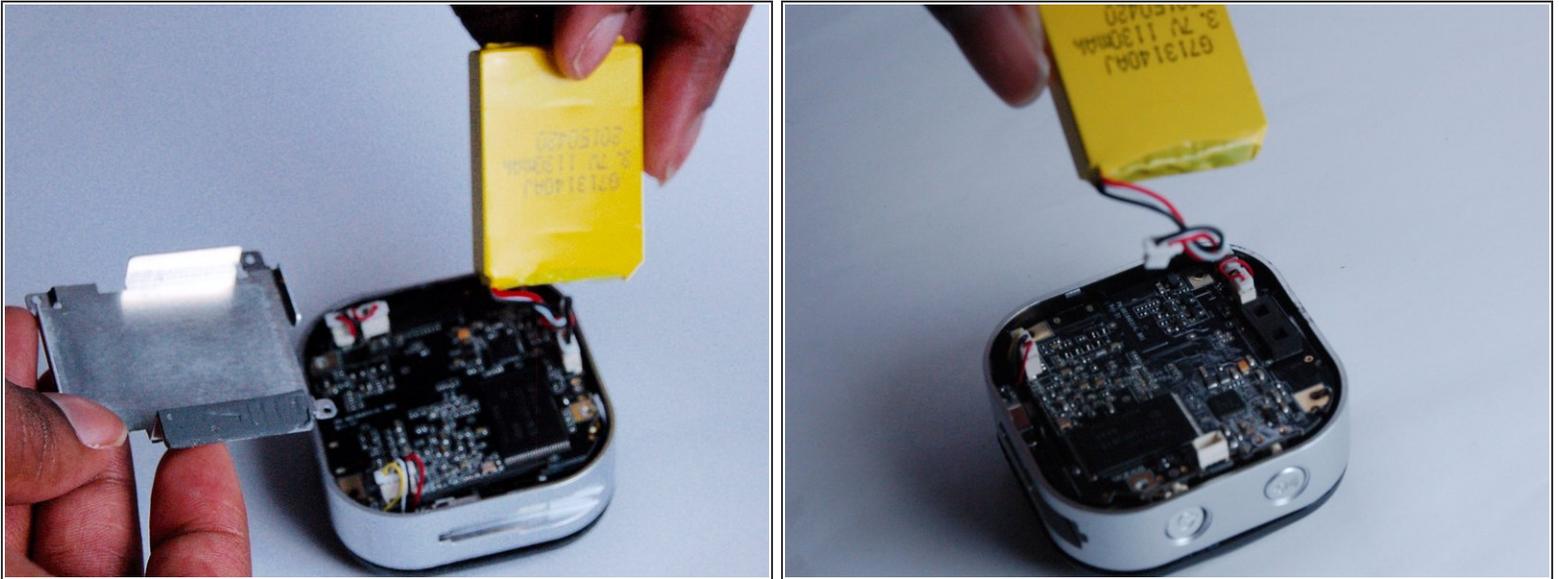

- Next, take out the battery and the silver protector.
- Disconnect the white battery connector with your hands or a spudger.

To reassemble your device, follow these instructions in reverse order.